Catalogue

PMA TOOLS

Glass Accessories
Replacement Parts
Tools

PMA rools

Catalogue



# Willkommen Welcome


Catalogue Car/Truck Bus

Description of the Online shop:

Order simply online

In our webshop www.pma-tools.de

you will find replacement parts, tools and sensors for automotive fitting installations - plus an option to order direct

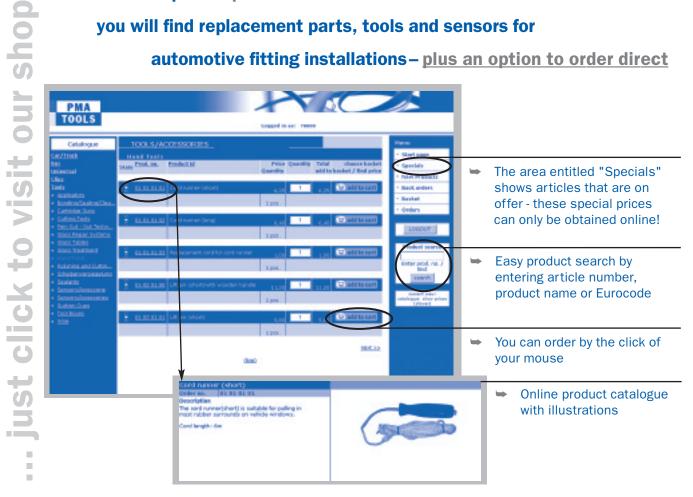


Logged in as: 70000

Thursday, 10.08

#### Menu

- · Start page
- · Specials
- New Products
- Back orders
- Basket

re only valid online! o recently been added to our range.

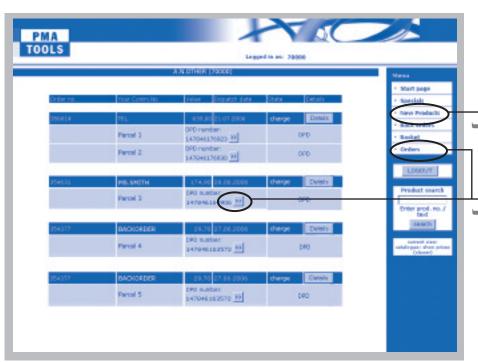

- Displays items that have recently been added to our range
- Your order information online: status of the deliveries, proof of delivery, backorders

na-tools.de

www.pma-tools.de-

the fast way to our goods and services

... just click to visit our shop



Our team will be pleased to handle your enquiries.

Bettina Touati +49 (0)2154 92 22 30

Katrin Schmitz +49 (0)2154 92 22 350

Jenny Pilger +49 (0)2154 92 22 353

Katja Tzschichholtz +49 (0)2154 92 22 401

### Want to order by fax?

Just use our fax order sheet at the end of our catalogue.

Fax +49 (0)2154 92 22 55

### Want to order by Internet?

No Problem - more information available on our homepage

www.pma-tools.com



- 8 ALFA
- 9 AUDI
- 11 AUSTIN
- 11 BMW
- 16 BUICK
- 16 CHRYSLER
- 17 CHEVROLET
- 18 CITROEN
- 20 DACIA
- 20 DAEWOO
- 21 DAF
- 22 DAIHATSU
- 23 DODGE
- 23 FIAT
- 26 FORD
- 29 HONDA
- 34 HUMMER
- 34 HYMER
- 35 HYUNDAI
- 37 ISUZU
- 38 IVECO
- 38 JEEP
- 39 KIA
- 41 LANCIA
- 42 LANDROVER
- 42 LEXUS
- 43 MAN
- 44 MAZDA
- 48 MCC

- 49 MERCEDES
- 52 MITSUBISHI
- 56 NISSAN
- 60 OPEL
- 66 PEUGEOT
- 68 PONTIAC
- 68 PORSCHE
- 69 RENAULT
- 74 ROVER
- 74 SAAB
- 75 SCANIA
- 75 SEAT
- 76 SSANGYONG
- 77 SUBARU
- 78 SUZUKI
- 79 TOYOTA
- 84 VOLVO
- 85 VW

#### **BUS**

- 92 AUWÄRTER
- 92 BOVA
- 92 MAN
- 93 MERCEDES
- 94 NEOPLAN
- 95 NOGE
- 95 RENAULT
- 95 SETRA
- 97 VAN HOOL

#### **UNIVERSAL PROFILES**

- 100 UNIVERSAL PROFILES
- 105 WEATHERSTRIP PROFILES
- 107 FILLER PROFILES
- 108 FOAM RUBBERS

#### **CLIPS / FASTENER**

112 CLIPS / FASTENER

#### **TOOLS / ACCESSORIES**

- 130 HAND TOOLS
- 136 CUTTING TOOLS
- 142 TOOL BOXES
- 143 WINDSCREEN STANDS+SUCTION LIFTERS
- 146 GLASS TREATMENT
- 148 FEIN CUT-OUT TECHNIQUE
- 151 POLISHING AND CUTTING MACHINES
- 152 CARTRIDGE GUNS
- 154 GLASS REPAIR SYSTEMS
- 160 BONDING / SEALING / CLEANING
- 172 SENSORS/ACCESSORIES



- 8 ALFA
- 9 AUDI
- 11 AUSTIN
- 11 BMW
- 16 BUICK
- 16 CHRYSLER
- 17 CHEVROLET
- 18 CITROEN
- 20 DACIA
- 20 DAEWOO
- 21 DAF
- 22 DAIHATSU
- 23 DODGE
- 23 FIAT
- 26 FORD
- 29 HONDA
- 34 HUMMER
- 34 HYMER
- 35 HYUNDAI
- 37 ISUZU
- 38 IVECO
- 38 JEEP
- 39 KIA

- 41 LANCIA
- 42 LANDROVER
- 42 LEXUS
- 43 MAN
- 44 MAZDA
- 48 MCC
- 49 MERCEDES
- 52 MITSUBISHI
- 56 NISSAN
- 60 OPEL
- 66 PEUGEOT
- 68 PONTIAC
- 68 PORSCHE
- 69 RENAULT
- 74 ROVER
- 74 SAAB
- 75 SCANIA
- 75 SEAT
- 76 SSANGYONG
- 77 SUBARU
- 78 SUZUKI
- 79 TOYOTA
- 84 VOLVO
- 85 VW



### ALFA

MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
33 II		0 – '94						
	01 554 8 12 1		WS-Installation kit	Moulding	00605 82605	1	2	
	2028AKMH			Retainer	00605 25889	1 🚃		1//
Scan-No.								"
→ Also for Al	lfa 75.					1		
75		5 – '93						
	01 558 8 12 1		WS-Installation kit	Moulding	00607 01207	1	2	
Eurocode	2026AKMS			Retainer	00607 01206	1 🚃		1//
Scan-No.								III.
→ Also for Al	Ifa 33 II.		l					
145/146		5 – '00						
Part No.	01 570 8 12 1		WS-Moulding OEM	Cover moulding with	00606 19145	1	1	
Eurocode	2031ASMH			Aluminium channel (rigid)				
Scan-No.	1936							1
Part No.	01 570 8 12 2		WS-Moulding OEM	Cover moulding without	00606 19145	1	1	
Eurocode	2031ASRH			Aluminium channel (soft)				
Scan-No.	1936-1		I		1	I	I	
147		'00 –						
Part No.	01 573 8 13 1		WS-Moulding OEM	Cover moulding	4679 5551	1	1	
Eurocode	2037ASMH							1
				T				
155	<u>'92</u>	2 – '97						
Part No.	01 581 8 12 1		WS-Installation kit	Cover moulding	00608 10934	1	4	
Eurocode	2029AKMS		OEM	Inner moulding upper	00605 80477	1		
Scan-No.	1812			Inner moulding right	00605 80478	1		11[
→ Also for Fi	iat Tipo Scan-No. 1560.			Inner moulding left	00605 80479	1		
156 Sed	an/Estate '9	7 – '05						
Dord No								
Part No.	01 582 8 12 1		WS-Moulding OEM	Cover moulding	00606 20898	1	1	
	<b>01 582 8 12 1</b> 2034ASMS		WS-Moulding OEM	Cover moulding	00606 20898	1	1	
Eurocode			WS-Moulding OEM	Cover moulding	00606 20898	1	1	
Eurocode → See sens	2034ASMS cors page 172.	97 – '05	WS-Moulding OEM	Cover moulding	00606 20898	1	1	
Eurocode  → See sense  156 Seda	2034ASMS cors page 172.	97 – '05	WS-Moulding OEM  BL-Moulding OEM	Cover moulding  Cover moulding	00606 20898	1	1	
Eurocode  → See sense  156 Seda  Part No.	2034ASMS cors page 172.	97 – '05						
Eurocode  → See sense  156 Seda  Part No.	2034ASMS fors page 172. an 4 doors '9	97 – '05						
Eurocode  → See sense  156 Seda Part No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate	97 – '05 '05 –	BL-Moulding OEM	Cover moulding	00606 23148	1	1	
Eurocode  → See senso  156 Seda  Part No.  Eurocode  159 Seda  Part No.	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1							
Eurocode  → See senso  156 Seda  Part No.  Eurocode  159 Seda  Part No.	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate		BL-Moulding OEM	Cover moulding	00606 23148	1	1	
Eurocode  → See senso  156 Seda  Part No.  Eurocode  159 Seda  Part No.  Eurocode	2034ASMS fors page 172. an 4 doors 01 582 8 22 1 2034BSMS an/Estate 01 585 8 13 1 2039ASMS	'05 <b>–</b>	BL-Moulding OEM	Cover moulding	00606 23148	1	1	
Eurocode  Description  See sensor  156 Seda Part No. Eurocode  159 Seda Part No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS		BL-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding	00606 23148	1	1	
Eurocode  → See senso  156 Seda Part No. Eurocode  159 Seda Part No. Eurocode  159 Seda Part No.	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  an 01 585 8 23 1	'05 <b>–</b>	BL-Moulding OEM	Cover moulding	00606 23148	1	1	
Eurocode  → See senso  156 Seda Part No. Eurocode  159 Seda Part No. Eurocode  159 Seda Part No.	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS	'05 <b>–</b>	BL-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding	00606 23148	1	1	
Eurocode  Description  See sensor  156 Sed Part No. Eurocode  159 Sed Part No. Eurocode  159 Sed Part No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  an 01 585 8 23 1	'05 – '05 –	BL-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding	00606 23148	1	1	
Eurocode  Description  See sensor  156 Sed Part No. Eurocode  159 Sed Part No. Eurocode  159 Sed Part No. Eurocode  159 Sed Part No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  an 01 585 8 23 1	'05 <b>–</b>	BL-Moulding OEM WS-Moulding OEM BL-Moulding OEM	Cover moulding  Cover moulding  Cover moulding	00606 23148	1	1	
Eurocode  See sensor  156 Sed Part No. Eurocode  159 Sed Part No. Eurocode  159 Sed Part No. Eurocode  166 Part No.	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  an 01 585 8 23 1 2039BSMS	'05 – '05 –	BL-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding	00606 23148 00606 88711 00608 88251	1	1	
Eurocode  See sensor  156 Sed Part No. Eurocode  159 Sed Part No. Eurocode  159 Sed Part No. Eurocode  166 Part No.	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  an 01 585 8 23 1 2039BSMS	'05 – '05 –	BL-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding upper	Cover moulding  Cover moulding  Cover moulding	00606 23148 00606 88711 00608 88251	1	1	
Eurocode  Description  See sensor  1.56 Sed Part No. Eurocode  1.59 Sed Part No. Eurocode  1.59 Sed Part No. Eurocode  1.59 Sed Part No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  01 585 8 23 1 2039BSMS	'05 – '05 –	BL-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding upper	Cover moulding  Cover moulding  Cover moulding	00606 23148 00606 88711 00608 88251	1	1	
Eurocode  → See sensor  1.56 Sed Part No. Eurocode  1.59 Sed Part No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  01 585 8 23 1 2039BSMS	'05 – '05 –	BL-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding upper OEM	Cover moulding  Cover moulding  Cover moulding  Cover moulding upper	00606 23148 00606 88711 00608 88251 00605 09381	1 1 1	1 1 1	
Eurocode  3 See senso  1.56 Sed Part No. Eurocode  1.59 Sed Part No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  01 586A 8 13 1 2036ASMST	'05 – '05 –	BL-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding upper	Cover moulding  Cover moulding  Cover moulding	00606 23148 00606 88711 00608 88251	1	1	
Eurocode  3 See senso  1.56 Sed Part No. Eurocode  1.59 Sed Part No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  01 585 8 23 1 2039BSMS	'05 – '05 –	BL-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding upper OEM	Cover moulding  Cover moulding  Cover moulding  Cover moulding upper	00606 23148 00606 88711 00608 88251 00605 09381	1 1 1	1 1 1	
Eurocode  See sensor  156 Sed Part No. Eurocode  159 Sed Part No. Eurocode  159 Sed Part No. Eurocode  Compart No. Eurocode  166 Part No. Eurocode  GTV/Spid Part No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  01 586A 8 13 1 2036ASMST	'05 – '05 – '98 –	BL-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding upper OEM	Cover moulding  Cover moulding  Cover moulding  Cover moulding upper	00606 23148 00606 88711 00608 88251 00605 09381	1 1 1	1 1 1	
Eurocode  See sensor  156 Sed Part No. Eurocode  159 Sed Part No. Eurocode  159 Sed Part No. Eurocode  GTV/Spid Part No. Eurocode  GTV/Spid Cart No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  01 586A 8 13 1 2039BSMS  01 566A 8 13 1 2036ASMST	'05 – '05 –	BL-Moulding OEM  WS-Moulding OEM  WS-Moulding upper OEM  WS-Moulding OEM	Cover moulding  Cover moulding  Cover moulding  Cover moulding upper  Cover moulding	00606 23148 00606 88711 00608 88251 00605 09381 00606 06918	1 1 1	1 1 1	
Eurocode  3 See sensor  1.56 Sed Part No. Eurocode  1.59 Sed Part No. Eurocode	2034ASMS fors page 172.  an 4 doors 01 582 8 22 1 2034BSMS  an/Estate 01 585 8 13 1 2039ASMS  01 586A 8 13 1 2036ASMST	'05 – '05 – '98 –	BL-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding upper OEM	Cover moulding  Cover moulding  Cover moulding  Cover moulding upper	00606 23148 00606 88711 00608 88251 00605 09381	1 1 1	1 1 1	

### **AUDI**

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
80 Coupé	·80 – '88						
	02 423 8 11 1	WS-Rubber	Weatherstrip without insert	855 845 121B	1	1	
	8528ASRC						/
Scan-No.	1134						
80 Coupé	**************************************						
	02 431 8 13 1	WS-Moulding kit	Cover moulding upper	895 845 121C	1	2	
Eurocode	8539AKMC	OEM, Dealership	Cover moulding lower	895 845 121E	1		
Scan-No.	1610						
80 III/IV	<b>Sedan</b> '78 – '86						
	02 421 8 11 1	WS-Rubber	Weatherstrip without insert	811 845 121C	1	1	
	8526ASRS	1101140001	Treatment and meneral	011 0 10 1210	-	-	/
Scan-No.	1035						
	an/Estate '87/'91 - '94						
	02 415 8 13 1	WS-Moulding black	Cover moulding	893 845 121G	1	2	
	8534AKMS	Joint	Joint	893 853 367D	1		
Scan-No.	1494-1						
Part No.	02 415 8 15 1	WS-Roll 21m incl.	Cover moulding on roll 21 m	893 845 121G	21m	6	
Eurocode	8534AR	Joint	Joint	893 853 367D	5		
Scan-No.	1494						
80 V Seda		51.14		0.50455045			
	02 413 8 23 2	BL-Moulding	Cover moulding	8A5845521B	1	1	
	8534BSMS1 1494-3						
Scall-No.	1494-3						
90 V Seda	an '87 – '90						
Part No.	02 416 8 13 1	WS-Moulding kit	Cover moulding	893 853 299	1	2	
Eurocode	8534AKMSC	chrome	Joint	893 853 367E	1		//
Scan-No.	1494-2						
400 111.0	'	A second	1	·	1		
	-1 ( <b>F</b> -1-1- 100 100						
	edan/Estate '82 – '90	WC Moulding obromo	Cayor moulding	442 952 200	1	1	
Part No.	02 315 8 13 1	WS-Moulding chrome	Cover moulding	443 853 299	1	1	
Part No. Eurocode		WS-Moulding chrome OEM	Cover moulding	443 853 299	1	1	
Part No. Eurocode Scan-No.	<b>02 315 8 13 1</b> 8532AKMSC 1255	ОЕМ	-				
Part No. Eurocode Scan-No. Part No.	<b>02 315 8 13 1</b> 8532AKMSC 1255 <b>44 385 3367A</b>	OEM WS/BL-Joint chrome	Cover moulding  Joint	443 853 299 443 853 367G		1	
Part No. Eurocode Scan-No. Part No.	<b>02 315 8 13 1</b> 8532AKMSC 1255 <b>44 385 3367A</b> 8532ASCS	ОЕМ	-				
Part No. Eurocode Scan-No. Part No. Eurocode	<b>02 315 8 13 1</b> 8532AKMSC 1255 <b>44 385 3367A</b> 8532ASCS	OEM WS/BL-Joint chrome	-				
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	02 315 8 13 1 8532AKMSC 1255 44 385 3367A 8532ASCS 1255-1	OEM WS/BL-Joint chrome OEM, Dealership	Joint	443 853 367G	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100 III Se Part No.	02 315 8 13 1 8532AKMSC 1255 44 385 3367A 8532ASCS 1255-1 edan '82 - '90 02 315 8 23 1	WS/BL-Joint chrome OEM, Dealership	-				
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100 III Sc Part No. Eurocode	02 315 8 13 1 8532AKMSC 1255 44 385 3367A 8532ASCS 1255-1 2dan '82 – '90 02 315 8 23 1 8532BSMS	OEM WS/BL-Joint chrome OEM, Dealership	Joint	443 853 367G	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100 III Se Part No.	02 315 8 13 1 8532AKMSC 1255 44 385 3367A 8532ASCS 1255-1 2dan '82 – '90 02 315 8 23 1 8532BSMS	WS/BL-Joint chrome OEM, Dealership	Joint	443 853 367G	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100     Se Part No. Eurocode Scan-No.	02 315 8 13 1 8532AKMSC 1255 44 385 3367A 8532ASCS 1255-1 2dan '82 – '90 02 315 8 23 1 8532BSMS 1255-2	OEM  WS/BL-Joint chrome OEM, Dealership  BL-Moulding chrome OEM, Dealership	Joint	443 853 367G	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100     Se Part No. Eurocode Scan-No.	02 315 8 13 1 8532AKMSC 1255 44 385 3367A 8532ASCS 1255-1 2dan '82 – '90 02 315 8 23 1 8532BSMS 1255-2 6 Sedan/Estate '91 – '97	OEM  WS/BL-Joint chrome OEM, Dealership  BL-Moulding chrome OEM, Dealership	Joint  Cover moulding	443 853 367G 443 853 297	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100 III Se Part No. Eurocode Scan-No.	02 315 8 13 1 8532AKMSC 1255 44 385 3367A 8532ASCS 1255-1 2dan '82 – '90 02 315 8 23 1 8532BSMS 1255-2	OEM  WS/BL-Joint chrome OEM, Dealership  BL-Moulding chrome OEM, Dealership	Joint	443 853 367G	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100 III Se Part No. Eurocode Scan-No.	02 315 8 13 1 8532AKMSC 1255 44 385 3367A 8532ASCS 1255-1 2dan '82 - '90 02 315 8 23 1 8532BSMS 1255-2 6 Sedan/Estate '91 - '97 02 323 8 13 2 8540ASMS 1739-1	OEM  WS/BL-Joint chrome OEM, Dealership  BL-Moulding chrome OEM, Dealership	Joint  Cover moulding	443 853 367G 443 853 297	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100 III Se Part No. Eurocode Scan-No.	02 315 8 13 1 8532AKMSC 1255 44 385 3367A 8532ASCS 1255-1 2dan '82 - '90 02 315 8 23 1 8532BSMS 1255-2 6 Sedan/Estate '91 - '97 02 323 8 13 2 8540ASMS	OEM  WS/BL-Joint chrome OEM, Dealership  BL-Moulding chrome OEM, Dealership	Joint  Cover moulding	443 853 367G 443 853 297	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100 III Se Part No. Eurocode Scan-No.  100 IV A6 Scan-No.  100 IV A6	02 315 8 13 1 8532AKMSC 1255  44 385 3367A 8532ASCS 1255-1  2dan	WS/BL-Joint chrome OEM, Dealership  BL-Moulding chrome OEM, Dealership  WS-Moulding OEM	Joint  Cover moulding  Cover moulding	443 853 367G 443 853 297 4A0 845 121C	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100     Se Part No. Eurocode Scan-No.  100    V A6 Part No. Eurocode Scan-No.  → Spacer, o  100    V A6 Part No.	02 315 8 13 1 8532AKMSC 1255 44 385 3367A 8532ASCS 1255-1 2dan '82 – '90 02 315 8 23 1 8532BSMS 1255-2 6 Sedan/Estate '91 – '97 02 323 8 13 2 8540ASMS 1739-1 our Part No. 4000 501. 6 Sedan '91 – '97 02 323 8 23 1	WS/BL-Joint chrome OEM, Dealership  BL-Moulding chrome OEM, Dealership  WS-Moulding OEM	Joint  Cover moulding	443 853 367G 443 853 297	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  100     Se Part No. Eurocode Scan-No.  100    V A6 Part No. Eurocode Scan-No.  → Spacer, o  100    V A6 Part No.	02 315 8 13 1 8532AKMSC 1255  44 385 3367A 8532ASCS 1255-1  6dan '82 - '90 02 315 8 23 1 8532BSMS 1255-2  6 Sedan/Estate '91 - '97 02 323 8 13 2 8540ASMS 1739-1 our Part No. 4000 501.  6 Sedan '91 - '97 02 323 8 23 1 8540BSMS	WS/BL-Joint chrome OEM, Dealership  BL-Moulding chrome OEM, Dealership  WS-Moulding OEM	Joint  Cover moulding  Cover moulding	443 853 367G 443 853 297 4A0 845 121C	1	1	

### AUDI

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
A2	'00 – '05						
	<b>02 011 8 74 1</b> 8562R+LKCS	Sidelight repair kit	Clip Handle		2	4	
Eurocoue	8302RTLNG3		Jow		1		
Don't No	00.044.0.74.0	Cidalistail.it	Olim		0	2	
	<b>02 011 8 74 2</b> 8562R+LKCS1	Sidelight repair kit	Clip Handle		2	3	
→ See clips	page 112.						
A3	·96–'03						
Part No.	02 455 8 13 1	WS-Moulding upper	Cover moulding upper	8L0 845 131C	1	1	
	8554ASMHT 2020						//
Scan-No.	2020						
	02 455 8 13 3	WS-Moulding lower	Scuttle moulding lower	8L0 853 306	1	1	
Scan-No.	8554ASMHB 2020-2						
→ Side moul	ldings reusable. Spacer, our Part-	No. 4000 501.					
A3 I/A6 I	'96 – 03/'97 <b>02 455 8 74 1</b>	Sidelight repair kit	Clip		2	2	
	8554/8557R+LKCS	Sidelight repair kit	Clip			2	
→ See clips	s page 112.						
A4 Sedan	/ <b>Estate</b> '94 – 11/'00						
	02 453 8 13 1	WS-Moulding upper	Cover moulding upper	8D0 845 131C	1	1	
Eurocode Scan-No.	8547ASMST	rigid					//
	ldings reusable. Spacer, our Part-l	No. 4000 501.					
Part No.	02 453 8 13 3	WS-Moulding upper	Cover moulding upper	8D0 845 131C	1	1	
	8547ASMST1	soft					
Scan-No.  → Advantage	1951-1 e of the soft version: Fits on glass	es of different					
	avoids damages during transport						
A4 I	·94 – 11/·00						
	02 453 8 74 1	Sidelight repair kit	Clip		2	4	
Eurocode	8547R+LKCS		Handle		1		
			Jow		1		
	02 453 8 74 2	Sidelight repair kit	Clip		2	3	
	8547R+LKCS1 page 112.		Handle		1		
•							
A4 II Part No.	'01 – 02 457 8 13 4	WS-Moulding left	Cover moulding left	8E0854327E01C	1	1	
	8572ASMSL	OEM	Sover modifing left	5200543272010	_		
	02 457 9 12 5	WS Moulding right	Cover moulding right	0500543305040	1	1	,
	<b>02 457 8 13 5</b> 8572ASMSR	WS-Moulding right OEM	Cover moulding right	8E0854328E01C	1	1	
			I				
A4 II	'01–						
Part No.	8000 104	Sidelight repair kit	Clip front left		2	2	
Eurocode	8556/8570/8572						
	8000 105	Sidelight repair kit	Clip front right		2	2	
	8556/8570/8572						
→ See clips	page 112.	I	I	T	I	I	
A8	·94 – ·02						
	<b>02 340 8 13 1</b> 8546ASMS	WS-Moulding OEM,	Cover moulding	4D0 853 299F	1	1	
	our Part No. 4000 501.	Dealership	anodic oxidated				

#### AUSTIN

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Mini 850	<b>L</b> '59 – '00						
	Part No.	05 211 8 11 1	WS-Rubber incl.	Weatherstrip with insert	JRC 2671	1	2	
	Eurocode	7002ASRS	fillerstrip (black)	incl. fillerstrip (black)				
	Scan-No.	0333	,			1		/
						_		
- 1		l		I			1 1	
								D M/ M/
								<u>BMW</u>
	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	1 Series	<b>E87</b> '04 –						
	Part No.	11 112 8 13 1	WS-Moulding OEM	Cover moulding	51317 058224	1	1	/ <b>=</b> \
5		2448ASMH		, , , , , , , , , , , , , , , , , , ,				
NEW								
ij	Part No.	11 112 8 13 2	WS-Moulding lower	Moulding lower	51317 133291	1	1	
	7 7 7	2448ASMHB	TTO INICAIGING IOWEI	INJUIGING IOWEI	01011 100231	_	_	
	→ See sense	ors page 172.	l	I	l .	l	1	
	2 Corles	F20 100 7 (107						
	3 Series		W0 P 17					
		11 718 8 11 1	WS-Rubber	Weatherstrip with insert	51311 913887	1	1	/
		2425ASRS						
	Scan-No.	1276						
	→ Chrome fi	ller Part No. 5 027.						
	3 Series	<b>E30</b> 8/'87 – '90						
	Part No.	11 718 8 11 2	WS-Rubber OEM,	Weatherstrip with insert	51311 972248	1	1	
	Eurocode	2425ASRS1	Dealership					/
	Scan-No.	1276-1	·					
	3 Series	<b>E30</b> 8/'87 – '90						
		11 718 8 21 1	BL-Rubber OEM	Weatherstrip with insert	51311 972249	1	1	
		2425BSRS	Dealership	Troduction of the tribute	01011 0122 10	_	_	/=-
	Scan-No.		Boardromp					
	ooun no.	12101						
				•	'			
	3 Series	E36 Sedan / Estate / Comp	. '91 –'98					
ol		11 725 8 13 2	WS-Moulding upper	Cover moulding upper	51311 977275	1	1	
O'Z		2431ASMST	OEM	Cover modianing apper	01011 011210	_	_	
	Luiocode	2431A3W31	OLIVI					
		ı	l The state of the	ı	ı	ı	1	
-	3 Sories	E36 Sedan / Estate / Comp	/Couné '01 '09					
NEW		11 725 8 16 1	WS-Fastener kit	Eastoner	51719 109613	بالي ه	0	
ш		2431AKCSB	WS-Fasterier Kit	Fastener	51718 108613	0 44	8	0000000
Z	Eurocoae	Z43TANC9B						
		ı	ı	ı	ı		1	
	2 Corios	E36 Comp. 3 doors	'91 – '01					
				O success and display	E4.04.0.4.400000	1	4	
		11 725 8 23 2	BL-Moulding lower	Cover moulding lower	51318 146233	1	1	
		2431BSMHB	OEM, Dealership					
	Scan-No.	1736-2						
		E36 Sedan 4 doors	'91 – '98					
		11 725 8 23 1	BL-Moulding OEM,	Cover moulding	51311 977277	1	1	
	Eurocode	2431BSMS	Dealership					
	Scan-No.	1736-1						
	3 Series	E36 Coupé/Cabrio	'91 – '98					
O' Z		11 726 8 13 2	WS-Moulding OEM	Cover moulding	51311 977607	1	1	/
Z		2432ASMC	=	_				

### **BMW**

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
MODEL	LEGI	2	SOMI ONENTS	ORIGINAL NO.	100.	Olli	
3 Series	<b>E36 Coupé</b> '91 – '98						
	11 726 8 23 1	BL-Moulding OEM,	Cover moulding	51311 977608	1	1	
Eurocode		Dealership					
Scan-No.	1819-2						
Part No.	11 726 8 23 2	BL-Moulding lower	Cover moulding lower	51318 119281	1	1	
Eurocode		OEM, Dealership					
Scan-No.	1819-3						
	ı						
	E46 Sedan/Estate '98 - '0	5					
	11 732 8 13 2	WS-Moulding	Cover moulding	51181 96162	1	1	
Eurocoae	2436ASMS1						/
Part No.	11 732 8 13 1	WS-Moulding OEM,	Cover moulding	51181 96162	1	1	A A
	2436ASMS	Dealership					
→ See sens	ors page 172.					l	
3 Series	<b>E46 Sedan</b> '98 - '05						
	11 732 8 23 1	BL-Moulding OEM,	Cover moulding	51318 196166	1	1	
Eurocode	2436BSMS	Dealership					
			I			I	
3 Series	<b>E46 Coupé</b> '99 –						
	11 733 8 13 1	WS-Moulding OEM,	Cover moulding	51318 208468	1	1	_ \
	2437ASMC	Dealership					
→ See sens	ors page 172.						A A
3 Series	<b>E46 Coupé</b> '99 –						
	11 733 8 23 1	BL-Moulding OEM,	Cover moulding	51318 208471	1	1	
Eurocode	2437BSMC	Dealership					
	l		1				
	<b>E46 Compact</b> '01 –						
	11 736 8 13 1	WS-Moulding OEM,	Cover moulding	51318 252386	1	1	_ \
	2442ASMH ors page 172.	Dealership					
	010 pago 1121	·					
	E90/E91 Sedan/Estate	'05 –					-
Part No.	<b>11 738 8 13 1</b> 2447ASMST	WS-Moulding upper OEM	WS-Moulding upper with adhesive tape	51317 061967	1	1	/ <b>F</b>
Eurocoue	2447 ASIVIST	OEIWI	with auriesive tape				
Part No.	11 738 8 13 3	WS-Moulding upper	WS-Moulding upper	51317 061967	1	1	
2	2447ASMST1		with adhesive tape				
Part No.	11 738 8 13 2	WS-Moulding lower	Moulding lower	51137 133292	1	1	
	2447ASMSB	Tro mountaing to tro	mounding remai	0110. 100202	_	_	
	44 500 0 44 4	WO OF 111	OI:	54407 11515	0 0	4.0	
	<b>11 738 8 14 1</b> 2447AKCSS	WS-Clip kit	Clip Clip	51137 145109 51137 145110		10	
	ors page 172.		Clip	51137 172103			
	<b>E90 Sedan</b> '05 –	DI Mandalina dala	O	E4427.004070	4	0	
	<b>11 738 8 20 1</b> 2447BKMS	BL-Moulding kit OEM	Cover moulding Moulding lower	51137 061970 51137 138664		2	
				1223. 230004	_		
	11 738 8 23 1	BL-Moulding OEM	Cover moulding	51317 061970	1	1	
Eurocode	2447BSMS						
Part No.	11 738 8 23 2	BL-Moulding lower	Moulding lower	51317 138664	1	1	
	2447BSMSB	OEM	1 1 3 1 2.				
				1			

#### **BMW**

	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
5 Series I	<b>28</b>						
	<b>11 512 8 11 1</b> 2420ASRS 0680	WS-Rubber	Weatherstrip with insert	51311 820486	1	1	
	Part-No. 5 027 filler profile (chro Iding and Corner pieces (metal)						
5 Series I	<b>:34</b>						$\sim$ $\sim$
	11 515 8 13 1	WS-Installation kit	Cover moulding right side	51318 117458	1	2	/:···········
Eurocode Scan-No.	2426AKMS 1559-1	(metal) OEM, Dealership	Cover moulding left side	51318 117457	1		kii
5 Series I	34/7 Series E32	'87 – '95					
Part No.	11 813 8 14 1	WS-Clip kit with	Clip 3101 001	51311 938494	16	16	
Eurocode Scan-No.	2426/2427AKCS 1496	adhesive OEM					
Part No.	11 813 8 14 4	WS-Clip kit without	Clip 3101 002	51311 938494	16 •	16	
Scan-No.	2426/2427AKCS1 1496-3 ut adhesive film, easier	adhesive OEM					
	right position.						
Part No.	11 515 8 14 1	WS-Joint	Joint	51311 908645	1 🕳	1	
Eurocode Scan-No.	2426ASJS 1559-2						
	11 515 8 16 1	WS-Fastener kit	Fastener 7101 001	51711 928946	7 🖧	7	
Part No.	TT 010 0 10 1	Wo I dotollol litt	I datellel / TOT OOT	01.11.0200.0	164	1	
Eurocode	2426/2427AKSS 1496/1559	Wo Tuotonor Mc	rasteller / 101 001	01711 0200 10		,	
Eurocode Scan-No.	2426/2427AKSS 1496/1559		rasteller / 101 001	01.11.0100.0		,	
Eurocode Scan-No.	2426/2427AKSS 1496/1559		Cover moulding	51318 159784		1	
Eurocode Scan-No.	2426/2427AKSS 1496/1559 39 '95 - '03 11 520 8 13 1 2434ASMH						
Eurocode Scan-No.  5 Series E Part No. Eurocode Scan-No.	2426/2427AKSS 1496/1559 39 '95 - '03 11 520 8 13 1 2434ASMH	WS-Moulding OEM,			1		
Eurocode Scan-No.  5 Series F Part No. Eurocode Scan-No.  Part No. Eurocode	2426/2427AKSS 1496/1559 *39	WS-Moulding OEM, Dealership	Cover moulding	51318 159784	1	1	
Eurocode Scan-No.  5 Series E Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	2426/2427AKSS 1496/1559 39 '95 - '03 11 520 8 13 1 2434ASMH 2010 11 520 8 13 2 2434ASMH1	WS-Moulding OEM, Dealership	Cover moulding	51318 159784	1	1	
Eurocode Scan-No.  5 Series Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode	2426/2427AKSS 1496/1559 39 '95 - '03 11 520 8 13 1 2434ASMH 2010 11 520 8 13 2 2434ASMH1 2010-5	WS-Moulding OEM, Dealership  WS-Moulding	Cover moulding  Cover moulding	51318 159784 51318 159784	1	1	
Eurocode Scan-No.  5 Series E Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	2426/2427AKSS 1496/1559 39	WS-Moulding OEM, Dealership  WS-Moulding  Foam rubber lower	Cover moulding  Cover moulding	51318 159784 51318 159784	1 1 1	1 1 1	
Eurocode Scan-No.  5 Series Part No. Eurocode Scan-No.	2426/2427AKSS 1496/1559  39	WS-Moulding OEM, Dealership  WS-Moulding  Foam rubber lower OEM, Dealership	Cover moulding  Cover moulding  Foam rubber for dashboard	51318 159784 51318 159784 51488 224782	1 1 1	1 1 1	
Eurocode Scan-No.  5 Series Part No. Eurocode Scan-No.	2426/2427AKSS 1496/1559  39	WS-Moulding OEM, Dealership  WS-Moulding  Foam rubber lower OEM, Dealership  Fastener kit OEM	Cover moulding  Cover moulding  Foam rubber for dashboard	51318 159784 51318 159784 51488 224782	1 1 1	1 1 1	
Eurocode Scan-No.  5 Series Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Adhesive	2426/2427AKSS 1496/1559 39 '95 - '03 11 520 8 13 1 2434ASMH 2010 11 520 8 13 2 2434ASMH1 2010-5 11 520 8 15 1 2434ASDS 2010-3 11 520 8 16 1 2434AKSS 2010-4 rs see page 172. spacers clips/fastener. Kit of 5	WS-Moulding OEM, Dealership  WS-Moulding  Foam rubber lower OEM, Dealership  Fastener kit OEM	Cover moulding  Cover moulding  Foam rubber for dashboard	51318 159784 51318 159784 51488 224782	1 1 1	1 1 1	
Eurocode Scan-No.  5 Series Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Adhesive	2426/2427AKSS 1496/1559  1496/1559  1520 8 13 1  2434ASMH  2010  1520 8 13 2  2434ASMH1  2010-5  1520 8 15 1  2434ASDS  2010-3  1520 8 16 1  2434AKSS  2010-4  25 see page 172.  25 spacers clips/fastener. Kit of 5  20 001 see page 113. See foam	WS-Moulding OEM, Dealership  WS-Moulding  Foam rubber lower OEM, Dealership  Fastener kit OEM	Cover moulding  Cover moulding  Foam rubber for dashboard	51318 159784 51318 159784 51488 224782	1 1 1	1 1 1	
Eurocode Scan-No.  5 Series E Part No. Eurocode Scan-No.  On roll page  5 Series	2426/2427AKSS 1496/1559  39	WS-Moulding OEM, Dealership  WS-Moulding  Foam rubber lower OEM, Dealership  Fastener kit OEM	Cover moulding  Cover moulding  Foam rubber for dashboard  Fastener 7101 002	51318 159784 51318 159784 51488 224782 51218 205295	1 1 1 8 💠	1 1 8 8	
Eurocode Scan-No.  5 Series Part No. Eurocode Scan-No.  Part No.	2426/2427AKSS 1496/1559  39 '95 - '03 11 520 8 13 1 2434ASMH 2010  11 520 8 13 2 2434ASMH1 2010-5  11 520 8 15 1 2434ASDS 2010-3  11 520 8 16 1 2434AKSS 2010-4 rs see page 172. spacers clips/fastener. Kit of 5 00 001 see page 113. See foam 108.  39 Sedan '95 - '03 11 520 8 23 1 2434BSMS	WS-Moulding OEM, Dealership  WS-Moulding  WS-Moulding  Foam rubber lower OEM, Dealership  Fastener kit OEM	Cover moulding  Cover moulding  Foam rubber for dashboard	51318 159784 51318 159784 51488 224782	1 1 1 8 💠	1 1 1	
Eurocode Scan-No.  Series Part No. Eurocode Scan-No.  Sensor Adhesive Part-No. 400 on roll page Scan-No. Eurocode Scan-No. Eurocode Scan-No.	2426/2427AKSS 1496/1559  39 '95 - '03 11 520 8 13 1 2434ASMH 2010  11 520 8 13 2 2434ASMH1 2010-5  11 520 8 15 1 2434ASDS 2010-3  11 520 8 16 1 2434AKSS 2010-4 rs see page 172. spacers clips/fastener. Kit of 5 00 001 see page 113. See foam 108.  39 Sedan '95 - '03 11 520 8 23 1 2434BSMS	WS-Moulding OEM, Dealership  WS-Moulding  Foam rubber lower OEM, Dealership  Fastener kit OEM  6 Pcs. rubber	Cover moulding  Cover moulding  Foam rubber for dashboard  Fastener 7101 002	51318 159784 51318 159784 51488 224782 51218 205295	1 1 8 💠	1 1 8 8	

### **BMW**

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	5 Series I	<b>E60/E61</b> '03-						
		11 523 8 13 1	WS-Moulding upper	Cover moulding upper	51317 166841	1	1	
	Eurocode	2445ASMST	OEM	with adhesive tape				//
		11 523 8 13 2	WS-Moulding upper	Cover moulding upper	51317 166841	1	1	
3	Eurocoae	2445ASMST1		with adhesive tape				
N N N	Part No.	11 523 8 14 1	WS-Clip kit OEM	Clip 3101005	513170 64098	10	10	
~	Eurocode	2445AKCSS		, p		_		
	→ See sense	ors page 172.						
	6 Carica I	E63/E64 Coupé/Cabrio	·04 –					
		11 912 8 13 1	WS-Moulding OEM,	Cover moulding	51317 008911	1	1	-
		2446ASMSC	Dealership	Cover moulding	51517 006911	1		/
		ors page 172.	Bodioromp					
	7 Series			_			_	····
		11 813 8 13 1	WS-Installation kit	Cover moulding right	51318 144544		2	<i>(</i> :
	Scan-No.	2427ASMS	(metal) OEM,	Cover moulding left	51318 144543	1		<i> :</i> /
		+fastener page 113.	Dealership					
	. 000 0p0	riactorier page 110.						
	7 Series							
		11 816 8 13 1	WS-Moulding upper	Cover moulding upper	51318 125887	1	1	
	Eurocode Scan-No.	2433ASMST 1907	OEM, Dealership					
	Scall-No.	1907						A A A
	Part No.	11 816 8 13 2	WS-Moulding upper	Cover moulding upper	51318 125887	1	1	
	Eurocode	2433ASMST1						000000
	Scan-No.	1907-3						
	Dart No.	11 816 8 12 1	WS-Foam rubber lower	Foam rubber lower	51451 928022	1	1	
		2433ASDSB	OEM, Dealership	Toaili Tubbel lowel	31431 920022	1		
	Scan-No.							
	→ See se	ensors page 172.						
		spacers also for E36/38/39/46.						
	Kit of 56 Pcs	s. Part-No. 4000 001. See catalog	gue clips/fastener.					
5	Part No.	11 816 8 14 1	WS-Clip kit OEM	Clip	51318 125892	8 •	8	
E W		2433AKCSS	TO SIIP IIIC SEII	ор	01010 120002			
Z						-		
		11 816 8 16 1	Fastener kit OEM	Fastener 7101 003	51718 195811	8 45	8	
	Eurocode Scan-No.	2433AKSS 1907-2						
	Scall-No.	1907-2						
	7 Series			_				<b>7</b> . <b>1</b> .
		11 818 8 13 1	WS-Moulding OEM,	Cover moulding	51317 172022	1	1	× ×
		2443ASMST ensors page 172.	Dealership					/*/ <b>F</b>
		spacers also for E36/38/39/46						/x
		s. Part-No. 4000 001. See catalog						
ΕN		11 818 8 14 1	WS-Clip kit OEM	Clip	51137 000118		22	
Ш	Eurocode	2443AKCSS		Clip Clip	51137 003738 51137 019273			
Z				Clip	51137 019273			
	'				. 5115. 0152121	•	•	

ORIGINAL NO. PCS. UNIT

#### **BMW**

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
O'I	New Mini							11.
z	Part No.	11 151 8 13 6	WS-Moulding upper	Cover moulding upper with	51317 155304	1	1	
	Eurocode	2440ASMHT	(New Version)	aluminiumchannel				//-
			,					1/-
	Dart No.	11 151 8 13 2	WS-Moulding right	Cover moulding right	51137 054098	1	1	*****
			0 0	Cover moulding right	31137 034096	1	1	
	Eurocode	2440ASMHR	OEM, Dealership					
-								
	Part No.	11 151 8 13 3	WS-Moulding left	Cover moulding left	51137 128157	1	1	
	Eurocode	2440ASMHL	OEM, Dealership					
			·					
	Part No.	11 151 8 13 4	WS-Moulding lower	Cover moulding lower right	51317 051528	1	1	
		2440ASMHBRC	_		01017 001020	_	-	
	Eurocoue	2440ASWINDRO	right, OEM, Dealership	chrome				
		11 151 8 13 5	WS-Moulding lower	Cover moulding lower left	51317 051527	1	1	
	Eurocode	2440ASMHBLC	left, OEM, Dealership	chrome				
	Part No.	11 151 8 13 7	WS-Side Dam right,	Dam foam right	51337 119718	1	1	
		2440ASDHR	OEM, Dealership			_	_	
	Luiscout	ZITOAODIII	o Livi, Douicionip					
	Dect N.	44 454 0 42 0	WC Cide Down 1-ft	Down forom loft	E4007 440747	4	4	
		11 151 8 13 8	WS-Side Dam left,	Dam foam left	51337 119717	1	1	
	Eurocode	2440ASDHL	OEM, Dealership					
	Part No.	11 151 8 10 1	WS-Moulding kit	Cover moulding upper	51317 155304	1	7	
	Eurocode	2440AKMH	OEM , Dealership	Cover moulding right	51317 051098	1		
		Mini 3101 006 (2440ASCHB)	,	Cover moulding left	51317 051097			
		Mini 3101 007 (2440ASCHS)		Cover moulding lower right	51317 051528			
		Mini 3101012		Cover moulding lower left	51317 051527			
	→ WS-Clip	Mini 3101013 see page 115.		Dam foam right	51337 119718	1		
	→ See sens	ors page 172.		Dam foam left	51337 119717	1		
	X3 (E83)	·03 <i>-</i>						
	Part No.		WS-Moulding upper	Cover moulding upper	51313 415508	1	1	× ×
			•	- · · ·	31313 413306	1	1	*/ - X
	Eurocode	2449ASMRT	OEM, Dealership	wide with adhesive tape				×
	Part No.		WS-Moulding upper	Cover moulding upper	51317 052460	1	1	
	Eurocode	2449ASMRT1		narrow with adhesive tape				
×	Part No.	11 041 8 14 1	WS-Clip kit	Clip	51313 448374	10 X	10	
	Eurocode	2449AKCRS	·	•				
Z		ors page 172.						
	* 000 001101	010 pago 112.		'				
	X5 (E57)	·99 –						
			WOM III		E4047.400004	4	4	
	Part No.		WS-Moulding upper	Cover moulding upper	51317 182004	1	1	
	Eurocode	2439ASMRT	OEM, Dealership					
≥	Part No.	11 025 8 13 2	WS-Moulding upper	Cover moulding upper	51318 402457	1	1	
шl	Eurocode	2439ASMRT1						
Z		ors page 172.						
	223 00.101							
	Z3 Roads	ster '96 – '03						
		11 724 8 12 1	WC Mauddie z OEM	Cover meanding	E4040 007040	1	1	
			WS-Moulding OEM	Cover moulding	51318 397613	1	1	
	Eurocode	2435ASMT						
- 1		I		l	I	l	L	
_								
	Z4 (E85)	Roadster '03 –						
	Part No.	11 212 8 13 1	WS-Moulding OEM,	Cover moulding	51 317 017021	1	1	
		2444ASMT	Dealership					
		ors page 172.	a.o.op					1
'	2 OCC SCIISI	ors page ITZ.		ı	1	1	1	
	70 (FEA)	\ - \ <del>- \ \ - \ \ - \ \ - \ \ - \ \ - \ \ - \ \ - \ \ - \ \ - \ \ - \ \ - \ \ - \ \ - \ \ \ - \ \ - \ \ \ - \ \ \ - \ \ \ - \ \ \ - \ \ \ \ - \ \ \ \ \ - \</del>						~ ~
	Z8 (E52)							
		11 001 8 13 1	WS-Moulding OEM	Cover moulding	51 318 232618	1	1	
	Eurocode	2438ASMT						
							1	

MODEL

YEAR

TYPE

COMPONENTS

#### CHRYSLER

MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Neon I	"(	95 – '99						
Part No.			WS-Moulding	Cover moulding	5288535	1	1	
Eurocode	9299ASMS							
NAGS-Nr.	1179							
1	I	١			1		1 1	
Neon II		·00 –						
Part No.	59 134 98 13 1		WS-Moulding upper	Cover moulding upper	0528-8571	1	1	
Eurocode NAGS-Nr.	A225ASMS							
MAGO MI.	15451							
Stratus	"(	95 – '99						
Part No.			WS-Moulding upper	Cover moulding upper	04805346AA	1	1	
Eurocode	A219ASMST							
NAGS-Nr.	1198							
	1				1	1		
Vision (LI		'94 –						
Part No.			WS-Moulding	Cover moulding	04630675	1	1	/
Eurocode NAGS-Nr.	1186/1216/1307							
Voyager I	<b>1</b> '5	34 – '95						
	59 118 8 13 1	J <del>4</del>	WS-Moulding	Cover moulding	4314873	1	1	
	9261ASMV							/
NAGS-Nr								
→ Also for L	Dodge Caravan.		ı		1		1 1	
Voyager I		91 – '95						
	59 118 8 23 1		BL-Moulding	Weatherstrip without insert	4673521	1	1	
Eurocode NAGS-Nr.								
			1					
Voyager I	II	'96 –						
Part No.		- 50	WS-Moulding	Cover moulding	4716936	1	1	
Eurocode								
NAGS-Nr.	1224/1225/1226							
Part No.	59 225 8 15 1		WS-Moulding on roll	Roll 25m	4716936	1	1 Roll	
Eurocode			25m					
NAGS-Nr								
1 3 VISO IOLE	Dodge Caravan.		1	1	1	'	'	
Voyager I		'96 –						
	<b>59 225 8 23 1</b> 9320BSMV		BL-Moulding upper + lower	Cover moulding lower Cover moulding upper	47169354C 4716934	1	2	
NAGS-Nr			lower	Cover moditaling appea	4710934	1		
	Dodge Caravan.		I					
300C		·00 –						
	5915718131		WS-Moulding upper	Cover moulding upper	04805887AB	1	1	
4	A234ASMT							
■ → See sense	ors page 172.		ı	I	I	1	1	
300 M		'98 –						
Part No.	59 132 48 12 1		WS-Moulding upper	Cover moulding upper	04574592AC	1	1	
Eurocode NAGS-Nr								
INAGO-NI	1324		(	T.	I .	1	1	
							1 1	

### CHEVROLET

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
<u>.</u>	Aveon	·06 <i>-</i>						
E		<b>13 157 8 13 1</b> 3022ASMS	WS-Moulding	Cover moulding	96648415	1	1	
Z		00227.011.0						
	Alero	·99 <i>–</i>						
	Part No.		WS-Moulding kit	Cover moulding upper		1	2	
	NAGS-Nr.	1330		Cover moulding lower		1		
	Astro Var	n '91 – '94/'95 –						
	Part No.		WS-Moulding upper	Cover moulding upper		1	1	
	NAGS-Nr.	0971/1158						
	Diames / I							
	Blazer/Ji Part No.		WS-Rubber	Weatherstrip without insert		1	1	
	NAGS-Nr.	0848		·				
	Part No.	59 848 8 11 2	WS-Rubber	Weatherstrip with insert		1	1	
	NAGS-Nr.	0848-1		·				//
	Blazer/Ji	mmv '94 – '99						
	Part No.		WS-Moulding upper	Cover moulding upper		1	1	
	Eurocode	AC34ASMRT						
	Camaro/	Firebird '82 - '92 59 024 8 13 1	M/C Maudding	Cavarmanding	CW 2400A	4	4	
		SW102400A	WS-Moulding	Cover moulding	SW-2400A	1	1	
 	Captiva	·06 <i>-</i>						
EW	Part No. Eurocode	13 171 8 13 1	WS-Moulding	Cover moulding		1	1	/
Z								'
	Express \	<b>Van</b> '96 – '99						
		59 126 58 13 1	WS-Moulding	Cover moulding		1	1	
	Eurocode	AC40ASMV						
	GMC Van	·81 – ·95						
		59 925 8 13 1	WS-Installation kit	Cover moulding (self-adhesive)		2	4	
	NAGS-Nr.			Joint		2		//
	Part No.	59 925 8 13 2	WS-Inner pinchweld	Inner pinchweld moulding		1	1	
	NAGS-Nr.		moulding	inner prioritiera modiumg		_	_	
- 1		<u> </u>	<u> </u>	<u> </u>	l 	l 	I	
	G Series							
	Part No. NAGS-Nr.	<b>59 853 8 11 1</b> 0853	WS-Rubber	Weatherstrip without insert		1	1	/
			= .					
	Part No. NAGS-Nr.	<b>59 853 8 11 2</b> 0853-1	WS-Rubber	Weatherstrip with insert		1	1	
		<b>59 848 8 13 1</b> 0848/0853	WS-Fillerstrip chrome	Fillerstrip Joint		1 1	2	
	THE STATE OF THE	33.3,0000		55		_		
	Matiz II	'05 –						
<b>1</b>		13 151 8 13 1	WS-Moulding OEM	Cover moulding	96599359	1	1	
			_					
NEW	Eurocode	3017ASMH	_					

### CITROEN

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	MODEL	TEAN	2	OUNT ONERTO	ORIGINAL NO.	. 00.	ONT	
	2CV Four	<b>gnette</b> '60 – '90						
	Part No.	17 211 8 11 1	WS-Rubber	Weatherstrip without insert	95 559 829	1	1	
	Eurocode Scan-No.	2705ASRH 9222						
	ocan-ito.	7222						
	AX	·87 – ·97						
	Part No.	17 227 8 13 1	WS-Moulding +	Cover moulding	96 020 878 80	1	3	
		2717AKMH1	Spacer	Spacer 4000 101	95 499 227 80	2		/
	Scan-No.	1541 ile 5 006/5 022 applicable.						
	Berlingo	65 <b>201</b> 8 <b>13</b> 1	WS-Moulding +	Cover moulding without	8120 A6	1	4	
		2724AKMV	Spacer	Cover moulding without aluminium channel	8120 A0	1	4	
	→ Also for P	eugeot Partner Eurocode 6537AS	MV.	Spacer 4000 102	96 060 797	3		
	BX I + II	·83 – '93						
	Part No.	17 441 8 12 1	WS-Rubber	Weatherstrip without	95 619 450	1	1	
		2715ASMH		insert				
		l 1271/1514 ile 5002/5021 applicable.						
	•							
	BX   Seda	n '83 – '87 <b>17 441 8 22 1</b>	BL-Moulding	Weatherstrip without	95 592 669	1	1	
		2715BSMH	BL-Modialing	insert	95 592 009	Τ.		
	Scan-No.							
	→ Univ. prof	ile 5 011 applicable.						
ΕW	C2	·03 <i>-</i>						
		<b>17 014 8 10 1</b> 2731AKMH	WS-Moulding kit	Moulding upper Moulding lower	8120 L9 8251.R4	1	2	/*\
	Luiocoue	ZIJIANWII		Woulding lower	0231.114	1		/ <u>*</u>
		17 014 8 13 1	WS-Cover moulding	Moulding upper	81 20 L9	1	1	
	Eurocode	2731ASMHT	upper					
		17 014 8 13 2	WS-Moulding lower	Moulding lower	8251.R4	1	1	
	Eurocode	2731ASMHB						
EW!	Part No.	17 014 8 14 1	WS-Clip kit OEM	Clip	8123.88	12	12	
N N		2731AKCHS						
<u></u>	→ See sens	ors page 172.			ı			
	C3	·02 –	WO M . I !!	0 15	04.00 N/2	4	0	
		<b>17 321 8 10 1</b> 2726AKMH	WS-Moulding kit	Cover moulding Moulding lower	8120.N6 8251N0	1	2	-
		<b>17 321 8 13 1</b> 2726ASMH	WS-Moulding	Cover moulding	8120.N6	1	1	
	Luidedde	ZIZUNUIVIII						
		17 321 8 13 2	WS-Moulding lower	Moulding lower	8251N0	1	1	
		2726ASMHB ors page 172.						
_								
<b>№</b>	C3 Plurie	17 322 8 10 1	WS-Moulding kit	Cover moulding upper	8120.N7	1	2	, x x.
Z		2730AKMT	modium kit	Cover moulding lower	8251.NO	1	_	<b>/</b> - X
	Don't N	47 200 9 42 4	WC Maulding	Caucar maguiding comme	0400 NZ	4	4	X X
		<b>17 322 8 13 1</b> 2730ASMTT	WS-Moulding upper	Cover moulding upper	8120.N7	1	1	
		<b>17 322 8 13 2</b> 2730ASMTB	WS-Moulding lower	Cover moulding lower	8251.N0	1	1	
	Larocoue	ZIOUNOIVIID						
ΕV		17 322 8 14 1	WS-Clip kit OEM	Clip	6991.S6	14 X	22	
		2730AKCTS ors page 172.		Clip	6991.G1	8 •		
	200 00110						. '	

#### CITROEN

MODE	FI		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	D.C.S	UNIT	
WODE			ILAN	1172	COMPONENTS	ORIGINAL NO.	F 0 3.	ONT	
<u>C4</u>			·04 –						
Page 1		<b>17 633 8 13 2</b> 2732ASMHL		WS-Moulding left OEM	Cover moulding left	8120.Q2	1	1	
	rt No	17 633 8 13 3		WS-Moulding right	Cover moulding right	8120.Q3	1	1	
		2732ASMHR		OEM	Cover moulding right	6120.Q3	1		
C5			'01 –						
	art No.	17 121 8 10 3		WS-Installation kit	Cover moulding	8120H9	1	8	0
Euro	ocode	2727AKMH2		incl. Spacer	Moulding lower Spacer	8251H9 873541	1 6		/·\
Z Pa	rt No.	17 121 8 10 2		WS-Installation kit	Cover moulding	8120H9	1	2	~ ~
		2727AKMH1		TTO MISTAIRACION NIC	Moulding lower	8251H9	1	_	0
		<b>17 121 8 13 1</b> 2727ASMH		WS-Moulding	Cover moulding	8120H9	1	1	
Pa	rt No.	17 121 8 13 2		WS-Moulding lower	Moulding lower	8251H9	1	1	
		2727ASMHB			3 3 3				
→ See	e senso	ors page 172.							
Evas	sion J	umpy	'94 – '02						
Pa	rt No.	65 050 8 13 1		WS-Moulding	Cover moulding	81 20 83	1	1	
	ocode an-No.	2721ASMV 1922							
			l						
Sax			'96 – '03			04.00.00			
		<b>17 012 8 12 1</b> 2723ASMH		WS-Moulding	Cover moulding	81 20 69	1	1	/
		1998							1
300	uii 1101	1000							
Sax	0		·96 – ·03						
		17 012 8 22 1		BL-Moulding	Weatherstrip without insert	87 45 57	1	1	
		2723BSMH							
Sca	an-No.	1998-1							
Visa	a/C15	5	'80 – '89						
		17 451 8 11 1		WS-Rubber	Weatherstrip without insert	95 532 904	1	1	
		2714ASRH							<b>/</b>
Sca	an-No.	1054							
Xan	tia		'93 <b>–</b> '01						
		17 541 8 13 1		WS-Installation kit +	Cover moulding	96 084 136	1	3	
				Spacer	Spacer 4000 102	96 060 797	2		/
Sca	an-No.	1850							
- Xsa	ra		'97 – '05						
		17 625 8 10 1	5/05	WS-Installation kit +	Cover moulding	8120.E6	1	3	
Euro		2725ASMHT1		Spacer	Spacer 4000 102	96060797	2		
Xsa	ra		'97 – '05						
		17 625 8 13 1	<i>37</i> – 05	WS-Moulding upper	Cover moulding upper	8120.E6	1	1	
		2725ASMHT			and the second second				
- Voc	ro Die	2000	·00 –						
	ra Pic	17 631 8 10 1	00 -	WS-Installation kit +	Cover moulding	8120.G1	1	3	
Euro		2729AKKV		Spacer	Spacer 4000 102	96060797	2		/
ZEUR									
Xsa	ra Pic	asso	·00 <i>-</i>						
		17 631 8 13 1		WS-Moulding	Cover moulding	8120.G1	1	1	/
Euro	ocode	2729ASMV							
1	1		ı		I .	I .	I .	I .	

### CITROEN

	MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	ZX Sedar	1/ <b>Estate</b> '91 –'98						
		17 425 8 12 3	WS-Moulding incl.	Cover moulding	96 051 261	1	3	
		2719AKMH	Spacer	Spacer 4000 102	96 060 797	2		/
	Scan-No.	1744						"
		3/5 doors '91 – '98 17 425 8 22 1	BL-Moulding OEM	Weatherstrip	96 080 354	1	1	
		2719BSMH	BL-Moulding OEM	Weatherstrip	96 080 354	1	1	
	Scan-No.							
					I			
	C 25	'82 <b>–</b> '94						
		<b>65 041 8 11 1</b> 2716ASRV	WS-Rubber	Weatherstrip without insert	81 20 73	1	1	200
		iat Ducato I Scan-No. 1258.						
					I			
	Jumper	·94 – /·98 – ·06						
		65 045 8 12 1	WS-Mouding OEM	Weatherstrip	81 20 88	1	1	
		2722ASMV1H						
	Scan-No.  → Also for Fi	at Ducato/Peugeot Boxer.						
	<b>D</b> 4 0							
	DAC	A						
	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Logan	·05 –						
		03 001 8 13 1	WS-Moulding upper	Cover moulding upper	6001 547000	1	1	
ΕV	Eurocode	7264ASMST	OEM	0 11				
	Part No.	03 001 8 13 2	WS-Moulding lower	Cover moulding lower	6001 547001	1	1	
		7264ASMSB	OEM	Coror modium gronor	0001011001	_	_	
	DAE	WOO						
	MODEL	<b>WOO</b>	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	MODEL Cielo	YEAR '98-						
	MODEL Cielo	YEAR	TYPE WS-Moulding OEM	COMPONENTS  Cover moulding	ORIGINAL NO. 961 696 60	PCS.	UNIT 1	
	MODEL Cielo	YEAR '98-						
	MODEL  Cielo Part No.	YEAR '98 – 25 000 8 12 1						
	MODEL Cielo Part No. Espero	YEAR '98-						
	MODEL  Cielo Part No.  Espero Part No.	YEAR '98 - 25 000 8 12 1 '95 -	WS-Moulding OEM	Cover moulding	961 696 60	1	1	
	Cielo Part No.  Espero Part No. Eurocode	'98- 25 000 8 12 1 '95- 25 500 8 13 1 3001ASMS	WS-Moulding OEM	Cover moulding	961 696 60	1	1	
N.I	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/I	98 – 25 000 8 12 1	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Weatherstrip	961 696 60 961 193 72	1	1	
EW!	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/I Part No.	YEAR  '98 -  25 000 8 12 1  '95 -  25 500 8 13 1  3001ASMS  Vagnus  '03 -  25 515 8 13 1	WS-Moulding OEM	Cover moulding	961 696 60	1	1	
NEWI	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/I Part No.	98 – 25 000 8 12 1	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Weatherstrip	961 696 60 961 193 72	1	1	
	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/I Part No. Eurocode	YEAR '98 – 25 000 8 12 1  '95 – 25 500 8 13 1 3001ASMS  Vagnus 25 515 8 13 1 3012ASMS	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Weatherstrip	961 696 60 961 193 72	1	1	
	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/I Part No. Eurocode  Kalos	YEAR  '98 -  25 000 8 12 1  '95 -  25 500 8 13 1  3001ASMS  Vagnus  '03 -  25 515 8 13 1	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Weatherstrip	961 696 60 961 193 72	1	1	
	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/I Part No. Eurocode  Kalos Part No.	YEAR  '98 –  25 000 8 12 1  '95 –  25 500 8 13 1  3001ASMS  '03 –  25 515 8 13 1  3012ASMS	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Weatherstrip  Weatherstrip	961 696 60 961 193 72 964 700 52	1 1	1 1	
NEW!	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/I Part No. Eurocode  Kalos Part No.	YEAR  '98 –  25 000 8 12 1  '95 –  25 500 8 13 1  3001ASMS  '03 –  25 515 8 13 1  3012ASMS  '02 –  25 551 8 13 1  3014ASMH	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Weatherstrip  Weatherstrip	961 696 60 961 193 72 964 700 52	1 1	1 1	
	Cielo Part No.  Espero Part No. Eurocode  Evanda/I Part No. Eurocode  Kalos Part No. Eurocode  Lanos	YEAR  '98 –  25 000 8 12 1  '95 –  25 500 8 13 1  3001ASMS  '03 –  25 515 8 13 1  3012ASMS  '02 –  25 551 8 13 1  3014ASMH	WS-Moulding OEM  WS-Moulding OEM  WS-Moulding OEM	Cover moulding  Weatherstrip  Weatherstrip  Weatherstrip	961 696 60 961 193 72 964 700 52 963 953 88	1 1 1	1 1 1	
	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/ Part No. Eurocode  Kalos Part No. Eurocode  Lanos Part No.	YEAR  '98 –  25 000 8 12 1  '95 –  25 500 8 13 1  3001ASMS  '03 –  25 515 8 13 1  3012ASMS  '02 –  25 551 8 13 1  3014ASMH	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Weatherstrip  Weatherstrip	961 696 60 961 193 72 964 700 52	1 1	1 1	
	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/ Part No. Eurocode  Kalos Part No. Eurocode  Lanos Part No.	YEAR  '98 –  25 000 8 12 1  '95 –  25 500 8 13 1  3001ASMS  '03 –  25 515 8 13 1  3012ASMS  '02 –  25 551 8 13 1  3014ASMH	WS-Moulding OEM  WS-Moulding OEM  WS-Moulding OEM	Cover moulding  Weatherstrip  Weatherstrip  Weatherstrip	961 696 60 961 193 72 964 700 52 963 953 88	1 1 1	1 1 1	
- X III	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/ Part No. Eurocode  Kalos Part No. Eurocode  Lanos Part No.	YEAR  '98 –  25 000 8 12 1  '95 –  25 500 8 13 1  3001ASMS  '03 –  25 515 8 13 1  3012ASMS  '02 –  25 551 8 13 1  3014ASMH	WS-Moulding OEM  WS-Moulding OEM  WS-Moulding OEM	Cover moulding  Weatherstrip  Weatherstrip  Weatherstrip	961 696 60 961 193 72 964 700 52 963 953 88	1 1 1	1 1 1	
- X III	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/I Part No. Eurocode  Kalos Part No. Eurocode  Lanos Part No. Eurocode  Lanos Part No. Eurocode  Lanos Part No. Eurocode	YEAR  '98 –  25 000 8 12 1  '95 –  25 500 8 13 1 3001ASMS  Vlagnus 25 515 8 13 1 3012ASMS  '02 –  25 551 8 13 1 3014ASMH  '97 –'03  25 506 8 12 1 3003ASMH	WS-Moulding OEM  WS-Moulding OEM  WS-Moulding OEM	Cover moulding  Weatherstrip  Weatherstrip  Weatherstrip	961 696 60 961 193 72 964 700 52 963 953 88	1 1 1	1 1 1	
	MODEL  Cielo Part No.  Espero Part No. Eurocode  Evanda/I Part No. Eurocode  Kalos Part No. Eurocode  Lanos Part No. Eurocode  Lanos Part No. Eurocode  Lanos Part No. Eurocode	YEAR  '98 –  25 000 8 12 1  '95 –  25 500 8 13 1  3001ASMS  '03 –  25 515 8 13 1  3012ASMS  '02 –  25 551 8 13 1  3014ASMH  '97 –'03  25 506 8 12 1  3003ASMH	WS-Moulding OEM  WS-Moulding OEM  WS-Moulding OEM  WS-Moulding OEM	Cover moulding  Weatherstrip  Weatherstrip  Weatherstrip	961 696 60 961 193 72 964 700 52 963 953 88 962 407 57	1 1 1 1	1 1 1 1	

### **DAEWOO**

	MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Leganza Part No.	25 514 8 12 1	'97 <b>–</b> '03	WS-Moulding OEM	Weatherstrip	962 063 12	1	1	
		3005ASMS		W3-Woulding OLIVI	Weatherstrip	902 003 12	1		
	Matiz I		98 – '05						
		25 601 8 13 1	36 - 03	WS-Moulding OEM	Weatherstrip	963 145 13	1	1	
		3006ASMH		J	·				
	→ Matiz II se	ee page 17 Chevrolet.							
	Nexia		'95 <b>–</b> '97						
	Part No.	25 503 8 13 1		WS-Moulding OEM	Weatherstrip	961 898 75	1	1	/
	Eurocode	3000ASMH							
			I			l I			
	Nubira I		'97 – '03						
	Part No.			WS-Moulding OEM	Weatherstrip	963 023 48	1	1	
	Eurocode	3004ASMH							
>	Nubira II	25 513 8 13 1	09/'03 –	WC Mandaline OFM	M/s at his watering	005 420 54	4	4	
E N		3016ASMS		WS-Moulding OEM	Weatherstrip	965 439 51	1	1	/
Z	Luiocodo	0010/10/10							
	Toourse /	Darra	·00 –						
NEW	Tacuma/	25 701 8 13 1	00 –	WS-Moulding OEM	Weatherstrip	962 615 42	1	1	
Ш	Eurocode	3011ASMV		Tro modium g ozim	Troduiorou.p	002 010 .2	_	_	
_									
	Tico		'96 –						
	Part No.	25 504 8 13 2		WS-Moulding OEM	Cover moulding upper	P84611A78B00	1	1	
	Eurocode	3002ASMHT							//
	Part No.	25 504 8 13 3		WS-Moulding OEM	Cover moulding left	P84613A78B02	1	1	"
		3002ASMHL		Tro modium g ozim	cover mountaing forc		_	_	
	Doub No.	05 504 0 40 4		MO Manuality of OEM	O	D04040470D00	4	4	
	Part No. Eurocode	<b>25 504 8 13 4</b> 3002ASMHR		WS-Moulding OEM	Cover moulding right	P84612A78B02	1	1	
	Part No. Eurocode	<b>25 504 8 13 5</b> 3002ASDHI		WS-Moulding inner OEM	Inner cover Moulding		1	1	
	Eurocode	3002A3DIII		OLIVI					
									DAF
	MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	95-TE47	+ Pegaso	'87 – '95						
		90 067 8 11 1		WS-Rubber without	Weatherstrip without insert	12 10 468	1	1	2246
	Eurocode	4624ASRL		rain channel					
					·				
	95-TE47		<u> '96 – </u>			10.10.100			
		<b>90 067 8 11 2</b> 4624ASRL1		WS-Rubber with rain channel	Weatherstrip without insert	12 10 468	1	1	
	Zuroccuo	102 MORES		Tall orallio					
	E400		<b>607</b>						
	F400 Part No.	90 062 8 11 1	'87 –	WS-Rubber OEM	Weatherstrip without insert	AWR 9974	1	1	
		4620ASRL					_	_	
	F75/F85		'93 –						
	Part No.	90 069 8 11 1		WS-Moulding OEM,	Weatherstrip	13 35 264	1	1	8
	Eurocode	4625ASML		Dealership					
					l	l l			
			·00 –						
	LF 45-55		00 –						
	Part No.	<b>90 101 8 12 1</b> 4633ASML	00 –	WS-Moulding	Cover moulding	14 00 782	1	1	111

#### DAIHATSU

	MODEL	YF	AR TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	MODEL			JOHN GRENTS	ORIGINAL NO.	100.	ONT	
	Charade	<b>G100</b> '87 – '	03					
	Part No.		WS-Installation kit	Cover moulding upper	75531 87703	1	3	
		2913AKMH	WS-Installation kit	0	75533 87702	1	3	/
	Scan-No.			Cover moulding right	75534 87701	1		
	Scan-No.	1526		Cover moulding left	75554 67701	1		
	Charade	<b>G200</b> '93 – '	00					
	Part No.		WS-Moulding OEM	Cover moulding	75533 87705	1	1	
		2918ASMH	Wo Woulding OLIVI	over modiums	15555 61165	_	_	
	Luiocouc	ZOTONOWIT						
	Cuore IV	·94 – ·	98					
	Part No.	58 015 8 11 1	WS-Rubber OEM	Weatherstrip without insert	56121 87218	1	1	
	Eurocode	2919ASRH		·				
	Cuore V	'99 –'	03					
	Part No.	58 017 8 13 1	WS-Moulding	Cover moulding	75533 97202	1	1	
	Eurocode	2924ASMH						
		l	T .		I	I	I	
ij	Cuore VI	05/'03	8 –					
E	Part No.	58 117 8 13 1	WS-Moulding OEM	Cover moulding	75533 B2020	1	1	\
W Z	Eurocode	2927ASMH			000			/
_								
	Feroza Je	<b>ep</b> '89 – '	98					
	Part No.	58 045 8 11 1	WS-Rubber	Weatherstrip without insert	56121 87605	1	1	
	Eurocode	2914ASRR						
	Scan-No.	1631						
						l		
	Gran Mov		7 –					
		58 203 8 13 1	WS-Moulding	Cover moulding	75533 87705	1	1	
		2921ASMV						
		aihatsu Terios Eurocode						
		and Cuore VL701 Eurocode						
	2924ASMH	•	 		1			
	Move	·97 – 8/·9						
		58 201 8 11 1	WS-Rubber OEM	Weatherstrip without insert	56121 87219	1	1	
	Eurocode	2920ASRV						
ľ				·				
	Sirion I	·98			75500 05555	4	4	
		58 101 8 13 1	WS-Moulding OEM	Cover moulding	75533 97203	1	1	
	Eurocode	2923ASMH						
		·						
5	Sirion II	·05						
M	Part No.		WS-Moulding OEM	Cover moulding	75533B 1010	1	1	
z	Eurocode	2930ASMH						
		•	'		'		'	
	Terios I	·97 – ·(		O a vera mana validi.	75500 0740	1	4	
	Part No.		WS-Moulding	Cover moulding	75533 87401	1	1	
	Eurocode	2922ASMR						
	Torico U	<del></del>						
$\leq$	Terios II	38 212 8 13 1	6 – WS-Moulding OEM	Cover moulding	75533 B4010	1	1	
E		2931ASMR	VVO-IVIOUIUIII OLIVI	Cover modiums	, 5555 64010	_		
Z	_u:000u6	TOOTHOUNIT						

#### DODGE

MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
T300 Pic	kup	'94 – '98						
Part No.	59 176 8 12 1		WS-Moulding	Cover moulding		1	1	
Eurocode	AD28ASMP							/
NAGS-Nr.	1176							

								FIAT
MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Barchett	a Cabrio	'94 –						~ _
	21 742 8 12 1	Ĭ.	WS-Moulding OEM	Weatherstrip	467 35149	1	1	
	3347ASMT							
Scan-No.	1937							
Brava 5 d	loore '01	5 –'01						
	21 727 8 12 1	3 – UI	WS-Moulding	Cover moulding soft	778 0950	1	1	
	3348ASMH		, Tro mountaining	gover mountaining cont		_	_	/
Scan-No.	1935-1							
	I			1				
Bravo 3 d		5 –'01						
Part No.	<b>21 725 8 12 1</b> 3348ASMH		WS-Moulding	Cover moulding soft	778 0950	1	1	/
Scan-No.								
Bravo/Br	rava/Marea '95 – /9	96 –'01						
	21 725 8 13 1		WS-Moulding OEM	Cover moulding with	465 39343	1	1	
	3348ASMH6C			Aluminium channel				/
Scan-No.	1935/36							
Cinquece	ento '9	2 –'98						
	21 212 8 11 1		WS-Rubber OEM	Weatherstrip without insert	763 4804	1	1	
	3340ASRH							/
Scan-No.	1828							
	1							
Cinquece		2 –'98						
	<b>21 212 8 21 1</b> 3340BSRH		BL-Rubber OEM	Weatherstrip without insert	769 7408	1	1	
Scan-No.	1828-1							
				l				
Coupé		- '00						
Part No.			WS-Moulding OEM	Weatherstrip	630 3582	1	1	/
Eurocode Scan-No.	3344ASMC							
Scall-Ho.	1934							
Croma	- 68	5 –'95						
	21 437 8 12 1		WS-Moulding OEM	Weatherstrip	824 35114	1	1	
	3336ASMH							
Scan-No.	1491-1							
Doble		/'01						
Doblo Part No.		/'01 –	WS-Moulding upper	Cover moulding upper	467 47414	1	1	
	3354ASMVT		o modianig upper	SS.OI MOGIGING uppor	.5	_	_	

### FIAT

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS	UNIT	
	Multipla	'99 <b>–</b> 01/'04						
		21 030 8 12 1	WS-Moulding OEM	Cover moulding	465 10782	1	1	
	Eurocode	3352ASMV						
			<u>'</u>		<u>'</u>			
2	Multipla				5.15.000.10			
E	Part No.	21 032 8 13 1 3352ASMV1H	WS-Moulding OEM	Cover moulding	517 22618	1	1	/
Z	24100040	0002/10/11/11						
	Palio	·98 <i>-</i>						
		21 260 8 13 1	WS-Moulding OEM	Cover moulding	464 02385	1	1	
	Eurocode	3349ASME						/
					I			
	Panda I	'81 – '96						
		21 241 8 11 1	WS-Rubber OEM	Weatherstrip without insert	440 3813	1	1	
	Eurocode Scan-No.							
	Scall-No.	1100						
	Dondo I	·81 – ·96						
	Panda I Part No.		BL-Rubber OEM	Weatherstrip without insert	761 6259	1	1	
	Eurocode	3333BSRH				_	-	
	Scan-No.	1106-2						
		l						
	Panda II	·03 –						
	Part No.	<b>21 341 8 10 1</b> 3359AKKH	WS-Installation kit	Cover moulding Spacer 4000 901	468 04344 465 41864	1 2	3	/
	Luiocode	SSSARRII		Space: 4000 301	403 41004	_		
	Don't all	(0.4 (0.0						~ _
	Punto I	'94 – '99 <b>21 730 8 12 1</b>	WS-Moulding OEM	Weatherstrip	777 0724	1	1	
		3341ASMH				_	-	
	Punto I	·93 – ·99						
	Part No.		WS-Moulding OEM	Weatherstrip	777 0725	1	1	
	Eurocode	3341BSMH						
		'				'		
	Punto Ca Part No.		WS Moulding OFM	Weatherstrip	467 20 205	1	1	
		3346ASMT	WS-Moulding OEM	Weatherstrip	467 20 205	1	1	
	Punto II	·99 – ·05						
	Part No.	21 732 8 13 1	WS-Moulding upper	Cover moulding upper	465 24769	1	1	
	Eurocode	3351ASMHT	OEM					
ı		l 	<u> </u>	<u> </u>	I	1	1	
	Seicento							
		<b>21 213 8 12 1</b> 3350ASMH	WS-Moulding	Weatherstrip	467 64801	1	1	/
	Eurocoue	SSSOASIVIT						
	Colomba	(00-100						
	Seicento Part No.	'98 –'03 <b>21 213 8 22 1</b>	WS-Moulding	Weatherstrip	465 12219	1	1	
		3350BSMH						
		l			1	1	I	
	Tipo/Ten	1 <b>pra</b> '87 – '96						
	Part No.	21 716 8 13 1	WS-Installation kit	Cover moulding	772 5985	1	4	
		3337AKMH	OEM	Inner moulding upper Inner moulding right side	772 5984	1		//
	Scan-No.	1000	1	Inner moulding right side	772 5986 772 5987	1		"
				_				
		<b>21 716 8 13 2</b> 3337AKGH	WS-Installation kit OEM	Inner moulding upper Inner moulding right side	772 5984 772 5986	1	3	
	Scan-No.		JULIVI	Inner moulding right side	772 5986	1		

### FIAT

MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Tipo 3/5	doors '87 – '96						
	21 716 8 23 1	BL-Moulding kit OEM	Cover moulding	772 6785	1	3	
	3337BKMH	DE-MODICINI KIT OLIM	Inner moulding right side	772 6783	1	3	
Scan-No.			Inner moulding left side	772 5784	1		
Scall-No.	1300-1		inner moditing left side	1123164	1		
Ulysse/S							
Part No.	21 000 8 13 1	WS-Moulding	Cover moulding	940 812 0839	1	1	/
Eurocode	3345ASMV						//
Scan-No.	1924						
Uno 146							
Part No.	21 250 8 11 1	WS-Rubber OEM	Weatherstrip without insert	767 7651	1	1	/
Eurocode	3338ASRH						
Scan-No.	1588						
Uno 146	<b>   +    </b>						
Part No.	21 250 8 21 1	BL-Rubber OEM	Weatherstrip without insert	763 6050	1	1	
Eurocode	3338BSRH						
Scan-No.	1588-1						
170 F/19	<b>90 F</b> '78 – '93						
	68 355 8 11 1	WS-Rubber OEM	Weatherstrip with insert	471 8877	1	1	
	3724ASRL				_	-	200
Scan-No.							
Daily I	· ·79 – ·98						
	68 611 8 11 1	WS-Rubber OEM	Woothorstrip without incort	9390 2026	1	1	
	3725ASRV	W3-Rubbel OEM	Weatherstrip without insert	9390 2020	1	1	177.00
Scan-No.							
Daily I Hi	<b>gh roof</b> '90 – '98						
	68 611 8 11 2	WS-Rubber OEM	Weatherstrip without insert	93926149	1	1	
	3725ASRV1A				_	-	326
Scan-No.							
Daily II	·99 –						
	68 614 8 12 1	WS-Moulding	Cover moulding	81 438 53	4	1	
	00 01T 0 1E 1				1 1		
Furncade	3741 ASMV	Wo modianing	Cover moulding		1	1	
→ Also for O	3741ASMV pel Movano Eurocode 6296ASML 247ASML Spacer 4000 306 µ	and Renault Master	Cover moditing	(97169308)	1	1	
→ Also for 0 Eurocode 7:	pel Movano Eurocode 6296ASML 247ASML. Spacer 4000 306 u	and Renault Master	Cover mounting		1	1	
→ Also for 0 Eurocode 72	pel Movano Eurocode 6296ASML 247ASML. Spacer 4000 306 u '82 - '94	and Renault Master sable.		(97169308)			
→ Also for 0 Eurocode 7: Ducato I Part No.	pel Movano Eurocode 6296ASML 247ASML. Spacer 4000 306 u '82 - '94 <b>68 201 8 11 1</b>	and Renault Master	Weatherstrip without insert		1	1	
→ Also for 0 Eurocode 7: Ducato I Part No.	pel Movano Eurocode 6296ASML 247ASML. Spacer 4000 306 u '82 - '94 <b>68 201 8 11 1</b> 3727ASRV	and Renault Master sable.		(97169308)			
→ Also for O Eurocode 7:  Ducato Part No. Eurocode Scan-No.	pel Movano Eurocode 6296ASML 247ASML. ■Spacer 4000 306 u '82 – '94 68 201 8 11 1 3727ASRV 1258	and Renault Master sable.		(97169308)			
→ Also for O Eurocode 7:  Ducato I Part No. Eurocode Scan-No.  Ducato II	pel Movano Eurocode 6296ASML 247ASML. ■Spacer 4000 306 u '82 – '94 68 201 8 11 1 3727ASRV 1258	and Renault Master sable. WS-Rubber OEM	Weatherstrip without insert	(97169308)	1	1	
→ Also for O Eurocode 7:  Ducato I Part No. Eurocode Scan-No.  Ducato II Part No.	pel Movano Eurocode 6296ASML 247ASML. ■Spacer 4000 306 u '82 – '94 68 201 8 11 1 3727ASRV 1258 '94 –/ '98 – '06 68 204 8 11 1	and Renault Master sable.		(97169308)			
Ducato I Part No.  Ducato I Part No.  Eurocode Scan-No.  Ducato II Part No.	pel Movano Eurocode 6296ASML 247ASML. ■Spacer 4000 306 u '82 – '94 68 201 8 11 1 3727ASRV 1258 '94 –/ '98 – '06 68 204 8 11 1 3735ASMV1H	and Renault Master sable. WS-Rubber OEM	Weatherstrip without insert	(97169308)	1	1	
Ducato I Part No.  Eurocode Scan-No.  Ducato II Part No.  Eurocode Scan-No.	pel Movano Eurocode 6296ASML 247ASML. ■Spacer 4000 306 u '82 – '94 68 201 8 11 1 3727ASRV 1258 '94 –/ '98 – '06 68 204 8 11 1 3735ASMV1H	and Renault Master sable. WS-Rubber OEM	Weatherstrip without insert	(97169308)	1	1	
Ducato   Part No. Eurocode Scan-No.  Ducato   Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	pel Movano Eurocode 6296ASML 247ASML. ■Spacer 4000 306 u '82 - '94 <b>68 201 8 11 1</b> 3727ASRV 1258 '94 -/ '98 - '06 <b>68 204 8 11 1</b> 3735ASMV1H 1932	and Renault Master sable.  WS-Rubber OEM  WS-Moulding OEM	Weatherstrip without insert  Weatherstrip	(97169308) 764 7931 1327 095 080	1	1	
Ducato   Part No. Eurocode Scan-No.  Ducato   Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	pel Movano Eurocode 6296ASML 247ASML. ■Spacer 4000 306 u '82 – '94 68 201 8 11 1 3727ASRV 1258 '94 –/ '98 – '06 68 204 8 11 1 3735ASMV1H 1932 68 204 8 16 1 3735AKSV	and Renault Master sable.  WS-Rubber OEM  WS-Moulding OEM	Weatherstrip without insert  Weatherstrip  Spacer	(97169308) 764 7931 1327 095 080	1 2 0	1	

### FORD

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Escort III	·80 – ·89	MC Bulble an	Wash and in the set in set	0.000.400	4	4	
	Eurocode	<b>22 416 8 11 1</b> 3534ASRH1	WS-Rubber	Weatherstrip without insert	6 093 196	1	1	
	Scan-No.  → Mirror bas	1110 se pads 13 36 04 00.						
		Estate/Sedan '90 - '98						
	Part No.	22 431 8 13 5	WS-Moulding	Cover moulding	6 807 564	1	1	
	Eurocode Scan-No.	3545ASMH 1709-6		without Aluminium channel				
	→ Fastener	4000 202 applicable. Mirror base	pads 13 36 04 00.					
		<b>3/5 doors</b> '90 – '98		-				
		<b>22 431 8 21 1</b> 3545BSMH	BL-Rubber OEM	Cover moulding	6 954 055	1	1	
	Scan-No.	1709-5						
	Faceut IV	O-h-i- (00 (04						
	Escort IV Part No.	<b>Cabrio</b> '90 – '01 <b>22 435 8 13 1</b>	WS-Moulding OEM,	Cover moulding	1 664 391	1	1	
	Eurocode Scan-No.	3545ASMT 1709-2	Dealership					/
		4000 202 applicable. Mirror base	pads 13 36 04 00.					-
	Fiesta II -							
		<b>22 612 8 11 1</b> 3536ASRH1	WS-Rubber	Weatherstrip without insert	6 110 088	1	1	
	Scan-No.	1208						
		se pads 13 36 04 00.						
ı	Fiesta IV	'89 – '95 <b>22 615 8 11 1</b>	WS-Rubber	Weatherstrip without insert	6 170 243	1	1	
	Eurocode	3544ASRH					_	/
	Scan-No.  → Mirror bas	se pads 13 36 04 00.						
	Fiesta IV	·89 – ·95						
		<b>22 615 8 2 11 1</b> 3544BSRH	BL-Rubber OEM, Dealership	Weatherstrip without insert	6 985 873	1	1	
	Scan-No.		Dealership					
	Fiesta V	'95 – '02 <b>22 621 8 12 1</b>	WS-Moulding	Weatherstrip	1 049 419	1	1	
	Eurocode	3552ASMH		Wednesda.p	1 0 10 110			
		se pads 13 36 04 00.			1	1	1	
	Fiesta VI Part No.	05 / '02– <b>22 623 8 13 3</b>	WS-Moulding OEM	Cover moulding		1	1	
9	Eurocode	3562ASMH						
٦	Part No.	22 623 8 13 4	WS-Moulding OEM	Moulding lower		1	1	
	Eurocode	3562ASMHB						
	Focus I	'98 – '04						
	Part No.	22 442 8 13 1	WS-Moulding OEM	Cover moulding rigid	1 116 792	1	1	
	Eurocode	3556ASMH						
	Part No. Eurocode	<b>22 442 8 13 2</b> 3556ASMH1	WS-Moulding	Cover moulding soft	1 116 792	1	1	
			WC Foots 1 ''	Footoner	1 100 000	E JL	E	
<b>≨</b>	Part No. Eurocode	<b>22 442 8 16 1</b> 3556AKCH	WS-Fastener kit	Fastener	1 106 903	5 ↔	5	0 0 0 0
Z			<u> </u>	<u> </u>				
J	Fusion Part No.	'02 <b>–</b> <b>22 715 8 13 3</b>	WS-Moulding OEM	Cover moulding		1	1	
٥	Eurocode	3563ASMV	WO WOODING OLIVI	Sover modiums		_	-	
Ž	Part No.	22 715 8 13 4	WS-Moulding OEM	Moulding lower		1	1	
	Eurocode	3563ASMVB	<u> </u>					
			l	I .	I .	I .	I .	

#### **FORD**

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Galaxy	'95 – '03 <b>69 420 8 13 1</b>	WC Moulding upper	Cover moulding upper	7 205 520	1	1	
Eurocode		WS-Moulding upper	Cover moulding upper	7 385 528	1	1	/
Scan-No.	1987						
Part No.	69 420 8 16 1	Fastener kit OEM	Fastener	1023253	20 💠	20	ASSASSANTS.
	3550AKCVB	T dotorior kit ozw	Tuotorioi	1020200	20 1	20	
				1			
- Galaxy Fa	celift '03 – '06						
	69 420 8 13 2	WS-Moulding kit	Waterpannel Moulding kit	left	1	3	
Eurocode	3550AKMVB	lower OEM	lower	centre right	1		
				Trigite			
Galaxy Part No.	'95 – '00 <b>69 420 8 21 1</b>	DI Dubbor OFM	Wooth quatrin with out in cont	4 002 202	1	1	
	3550BSMV	BL-Rubber OEM, Dealership	Weatherstrip without insert	1 003 292	1	1	
Scan-No.							
				I			
Ка	·96 –						
	22 701 8 13 1	WS-Moulding	Cover moulding	1 029 915	1	1	/
Eurocode	3554ASMH						
	'						
Maverik	'94 –'01 <b>66 119 8 13 1</b>	WOM III		70750 05000	4	4	
	3547ASMRT	WS-Moulding	Cover moulding upper	72752 0F000	1	1	
Maverik I	·01 –						
	69 609 8 13 1	WS-Moulding	Cover moulding with	4132 533	1	1	
Eurocode	3558ASMR		Aluminium channel				
		1	1	1		'	
Mondeo I		WS-Installation kit	O a common and dispersion and	0074.074	4	-	/×
Part No. Eurocode	3546AKMH1	incl. Spacer	Cover moulding upper Cover moulding metal left	6874 674 1036 445	1	5	
Scan-No.	1851		Cover moulding metal right	1036 444	1		12
			Spacer 4000 201	1064 022	2		
Part No.	22 346 8 13 2	WS-Moulding upper	Cover moulding upper	687 4674	1	1	
	3546ASMHT						
Scan-No.	1851-1						
	22 346 8 13 7	WS-Moulding left	Cover moulding metal left	1 036 445	1	1	
Eurocode	3546ASMHL1						
Part No.	22 346 8 13 6	WS-Moulding right	Cover moulding metal right	1 036 444	1	1	
Eurocode	3546ASMHR1						
Part No.	22 346 8 14 1	WS-Metal Clip kit	Clip	1 010 948	10 X	10	
	3546AKCHS	OEM	J., P	1 010 0 10	1074	=0	
Dout No.	22 346 8 16 1	Spacer OEM,	Cover stud (plastic)	679 1550	5	5	
	3546AKSH	Dealership	Cover stud (plastic)	678 1550	5	5	
Scan-No.		·					
		I	I		I	I	
Mondeo I							// 1
	22 353 8 13 3	Inner moulding left	Retainer moulding left	1 305 441	1	1	
Eurocoae	3559ASGHL	OEM, Dealership					
	22 353 8 13 4	Inner moulding right	Retainer moulding right	1 305 442	1	1	
Eurocode	3559ASGHR	OEM, Dealership					
I	l	T.	T.	1	1	I	

#### FORD

Money	VEAD						
MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Duobod	(00, 100						
Probe I Part No.	'88 – '92 <b>59 046 8 12 1</b>	WS-Moulding	Cover moulding	3728554	1	1	
Eurocode	3548ASMC	W3-Woulding	Cover modiums	3128334	1	1	/
Probe II	·93 – ·98	3					
Part No.	59 145 8 13 1	WS-Moulding	Cover moulding	339 6103	1	1	
Eurocode	3553ASMC						
Scorpio I	<b>+   </b> '85 – '98						
Part No.	22 280 8 13 2	WS-Moulding upper	Cover moulding metal upper	612 6069	1	1	
Eurocode	3541ASMHT						//
Scan-No.	1401/1980						
Sierra I	·82 – ·86						~
Part No.	22 330 8 12 2	WS-Rubber inner	Cover moulding outer	1 634 431	1	2	
Eurocode	3539AKMH	and outer	Inner moulding (car body)	5 010 254	1		//
Scan-No.	1240-1						
Part No.	22 330 8 12 1	WS-Rubber outer	Cover moulding outer	1 634 431	1	1	
Eurocode	3539ASMH						
Sierra II	·87 – ·93						
Part No. Eurocode	<b>22 340 8 12 2</b> 3543AKMH	WS-Rubber inner and	Cover moulding outer	1 666 340	1	2	
	1510-1	outer	Inner moulding (car body)	5 010 254	1		
	<b>22 340 8 12 1</b> 3543ASMH	WS-Rubber outer	Cover moulding outer	1 666 340	1	1	
	1510						
Streetka	'03 -	-					
	22 801 8 13 1	WS-Moulding OEM	Cover moulding	1 237 367	1	1	/
Eurocode	3561ASMT						
			<u> </u>	'			
Transit II Part No.	'86 – '97 <b>69 117 8 10 1</b>	WS-Installation kit	In many many ledings	6 159 284	1	2	
Eurocode	3731AKMV	WS-IIIStaliation kit	Inner moulding Cover moulding	6 724 514	1	2	
	1456		oorer mouleing	0.2.02.			
Part No.	69 117 8 13 1	WS-Moulding	Inner moulding	6 159 284	1	1	
	3731ASGV		3				• • • • •
Scan-No.	1456-1						
Part No.	69 117 8 13 2	WS-Cover moulding	Cover moulding	6 724 514	1	1	
	3731ASMV						
Scan-No.	1456-2						
	69 117 8 16 1	WS-Spacer kit	Spacer	6 158 238 6	2 •	9	
	3731ASCVS		Fastener (small)	114 021	5 🕁		
Scan-No.	1400-3		Fastener (big)	6 152 458	2 +		
Transit II	·07 — ·00						
	'97 – '00 <b>69 121 8 12 2</b>	WS-Moulding	Cover moulding	1 027 056	1	1	
Eurocode	3731ASMV1	mounting	ostor modiums	202, 000	_	_	
Scan-No.  → Better fitt	ing due to reinforced glass						
channel.	<u> </u>						• • • • • •
I .		1	T.	I .	I .	I	

ORIGINAL NO. PCS. UNIT

ORIGINAL NO. PCS. UNIT

#### **FORD**

Transit IV	'00 – '06						
Part No.	69 128 8 10 1	WS-Installation kit	Cover moulding upper	4 0431 361	1	3	I.
Eurocode	3739AKMV	OEM	Cover moulding left (bright)	4 077 178	1		
			Cover moulding right (bright)	4 077 181	1		Ix
	69 128 8 13 5	WS-Moulding upper	Cover moulding upper	40 431 361	1	1	000000
Eurocode	3739ASMVT6C						
	69 128 8 13 3	WS-Moulding right	Cover moulding right (bright)	43 763 61	1	1	
Eurocode	3739ASMVR	OEM Dealership					
Part No.	69 128 8 13 7	WS-Moulding right	Cover moulding right (matt)	46 210 64	1	1	
Eurocode	3739ASMVR1C	OEM Dealership					
		WS-Moulding left	Cover moulding left (bright)	43 763 62	1	1	
Eurocode	3739ASMVL	OEM Dealership					
	69 128 8 13 6	WS-Moulding left	Cover moulding left (matt)	46 210 65	1	1	
Eurocode	3739ASMVL1C	OEM Dealership					
Part No.	69 128 8 14 1	WS-Clip kit	Clip 3105002	4 069 907	4 •	8	
Eurocode	3739AKCV		Clip 3105003	4 069 906	4 ×		
	6407 004	WS-Cover clip OEM	Clip	4 384 216	1	1	
Eurocode	3739ASCVB						
Transit Co	onnect '03 –						
	69 001 8 13 1	WS-Moulding OEM	Cover moulding	4 417 444	1	1	
Eurocode	3743ASMV						1
Part No.	69 001 8 13 2	WS-Moulding	Cover moulding	4 417 444	1	1	
Eurocode	3743ASMV1						

COMPONENTS

MODEL

MODEL

YEAR

YEAR

TYPE

Accord S	edan/Aero. '90 – '9	93						
Part No.	24 085 8 14 1	WS-Clip kit	Clip 2102 035	73158SM4003	2	먑	29	/:•X^X^X^X^X
Eurocode	3936AKCS		Clip 2101 037	91524SM4003	8	•		0.
Scan-No.	1655		Clip 2102 038	91525SM4003	8			/:·[
Recomme	ended foam rubber 5 007-15/	5 003.	Clip 2101 039	91531SM4003	4	Δ		
			Clip 2102 040	91532SH4003	2	0		* * * * * *
			Clip 2101 042	91534SM4003	5	×		0 0
Part No.	24 085 8 16 1	Fastener kit	Fastener 6102 018	91508SM4003	7	+	13	
Eurocode	3936AKSS		Fastener 6102 019	91501SM4003	6	¢		
Scan-No.	1655-1							
Part No. Eurocode	207 Coupé '94 – '9	WS-Moulding upper	Cover moulding upper	73151SV4003	1		1	A CONTRACTOR OF THE CONTRACTOR
Part No. Eurocode Scan-No.	<b>24 184 8 13 1</b> 3953ASMCT	WS-Moulding upper		73151SV4003		0	1	
Part No. Eurocode Scan-No. Part No.	<b>24 184 8 13 1</b> 3953ASMCT 2133-1		Clip 2101 036	73151SV4003	1 4 4	0 🛆		
Part No. Eurocode Scan-No. Part No. Eurocode	24 184 8 13 1 3953ASMCT 2133-1 24 184 8 14 1 3953AKCC	WS-Moulding upper		73151SV4003	4 4			
Part No. Eurocode Scan-No. Part No. Eurocode	24 184 8 13 1 3953ASMCT 2133-1 24 184 8 14 1 3953AKCC	WS-Moulding upper	Clip 2101 036 Clip 2101 046	73151SV4003	4 4	Δ		
Part No. Eurocode Scan-No. Part No. Eurocode	24 184 8 13 1 3953ASMCT 2133-1 24 184 8 14 1 3953AKCC	WS-Moulding upper	Clip 2101 036 Clip 2101 046 Clip 2101 057	73151SV4003	4 4 1	Δ		
Part No. Eurocode Scan-No. Part No. Eurocode	24 184 8 13 1 3953ASMCT 2133-1 24 184 8 14 1 3953AKCC	WS-Moulding upper	Clip 2101 036 Clip 2101 046 Clip 2101 057 Clip 2101 058	73151SV4003	4 4 1 1 4	Δ		
Part No. Eurocode Scan-No. Part No.	24 184 8 13 1 3953ASMCT 2133-1 24 184 8 14 1 3953AKCC	WS-Moulding upper	Clip 2101 036 Clip 2101 046 Clip 2101 057 Clip 2101 058 Clip 2102 059	73151SV4003	4 4 1 1 4	^ <b>*</b>		

	MODEL	VEAD						
	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNII	
		edan/Estate '94 - '98			704540044000			h*
		<b>24 190 8 13 1</b> 3952ASMST	WS-Moulding upper	Cover moulding upper	73151SV4003	1	1	/ <del>*</del> /
	Scan-No.							A. C.
	Doub No.	044000444	MO Olive Lit	01:- 04.04.000	04544600000	4	00	
		<b>24 190 8 14 1</b> 3952AKCS	WS-Clip kit	Clip 2101 036 Clip 2101 046	91511SP0003 91528SP0003	4 4 △	22	
	Scan-No.			Clip 2101 057	91576SV4003	1 *		
				Clip 2101 058	91577SV4003	1 +		
				Clip 2102 064 Clip 2101 065	91572SV2003 91573SV2003	4 <b>●</b> 4 □		
				Clip 2102 066	91574SV4003	2 X		
				Clip 2102 067	91562SV4003			
	Accord S	edan '98 –'02						
		24 482 8 13 1	WS-Moulding OEM,	Cover moulding	73150 S1A E01	1	1	/
	Eurocode	3960ASMS	Dealership					
		ı	1		<u>'</u>		<u>'</u>	
	Accord C		WO M . I II	0 11	70450 22: :	4	4	
		<b>24 484 8 13 1</b> 3966ASMC	WS-Moulding OEM, Dealership	Cover moulding	73150 S84 A03	1	1	
			2 3 3 3 3 1 1 5					
	Accord S	edan/Estate 03 –						
	Part No.	24 486 8 13 1	WS-Moulding upper	Cover moulding upper	73150 SEA 003	1	1	/\
	Eurocode	3986ASMST	OEM					
	Part No.	24 486 8 13 2	WS-Moulding upper	Cover moulding upper	73150 SEA 003	1	1	
		3986ASMST1		arran manamag appar			_	
	Part No.	24 486 8 14 1	WS-Clip kit OEM	Clips A-Pillar		1 🛆	24	
š		3986AKCSS	Wo onp the out	onpo / mai		1 •		
ш	→ See Sens	sors page 172.				1 X		
Z						1 □ 2 <b>+</b>		
						2 <b>T</b>		
						1 X		
						1 🛦		
						1 ↔ 4 ○		
						4 ₽		
						6 🗱		
	Civic III	'84 – '87						/-
		<b>24 076 8 14 1</b> 3920AKCH	WS-Clip kit	Clip 2102 001	90115SB3013	8 •	8	// \
		0020/11/01/						4.
	Civic CR	<b>K I</b> '84 – '87						
	Part No.	24 075 8 13 1	WS-Moulding	Cover moulding	67210SB2000	1	1	
		3921ASMC						\
	Scan-No.	11339	l					
		24 075 8 16 1	Fastener kit	Fastener 6102 003	90656SB2003	6 ⊕	36	4 * 1 × 2 * 2 * 4 * 4
		3921AKCC		Fastener 6102 004	90655SB2003	6 💤		
	Scan-No.	1339-1		Fastener 6102 006 Fastener 6102 010	90687SB2003 90659SB2003	9 <b>≭</b>		
				Fastener 6102 011	90645SB2003			
1	Civic IV 3	doors '88 – '91						
	Part No.	24 077 8 13 1	WS-Moulding soft	Cover moulding without	73150SH3024	1	1	
		3930ASMH1		Aluminium channel				/
	Scan-No.	1366						
	Part No.	24 077 8 13 2	WS-Moulding	Cover moulding with	73150SH3024	1	1	
		3930ASMH		Aluminium channel				
	Scan-No.  → Recomm	1566-1 ended foam rubber 5 007-15/5 0	l 03.					
		•						
	Civic IV 4	doors '88 – '91 24 079 8 13 1	WS-Moulding soft	Cover moulding without	73150SH4024	1	1	
		3935ASMS1	110 Modifile Suit	Aluminium	7 0 1 3 0 3 1 1 4 0 2 4	_	-	

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Civic CR	<b>( II</b> '88 – '90						~
Part No. Eurocode Scan-No.	<b>24 078 8 13 1</b> 3932ASMC1 1568	WS-Moulding soft	Cover moulding without Aluminium channel	73150SH2024	1	1	
Civic V 3	<b>/4 doors</b> '91 – '96						
Eurocode	<b>24</b> 080 8 <b>13 1</b> 3941ASMHT 1773/75	WS-Moulding upper	Cover moulding upper	73151SR3013	1	1	
Eurocode	<b>24 080 8 14 1</b> 3941AKCH 1775	WS-Clip kit	Clip 2101 053 Clip 2101 057 Clip 2101 055 Clip 2101 063 Clip 2102 056 Clip 2101 051	91511ST3E00 91519SR3003 91520SR3003 91521SR3003 91518SR3003 91541SR3003	2 △ 4 ▲	26	
Civic V 4	<b>doors</b> '92 – '96						
Eurocode Scan-No.	24 080 A 8 14 1 3940AKCS 1773 ended foam rubber 5 007-15/5 00	WS-Clip kit	Clip 2102 053 Clip 2102 054 Clip 2102 055 Clip 2102 052 Clip 2102 051	91511ST3E00 91518SR3003 91520SR3003 91519SR3003 91541SR3003	8	24	
Civic V 3	<b>/4 doors</b> '91 – '95						
	<b>24 080 8 16 1</b> 3940/3941AKSH	WS-Fastener kit	Fastener	91508SR3000	7 🗘	7	
Civic V 5	<b>doors</b> '95 – '01						21-2-2-10
	<b>24 278 8 13 1</b> 3954ASMHT	WS-Moulding upper	Cover moulding upper	73151 ST3 E01	1	1	
	<b>24 278 8 14 1</b> 3954AKCH	WS-Clip kit	Clip 2102 053 Clip 2102 055 Clip 2102 056	91511ST3E00 91520SR3003 91518SR3003	8 ▼ 8 • 2 ■	18	
Civic CR	<b>(     </b>						
Eurocode	<b>24 178 8 13 1</b> 3948ASMCT 1833	WS-Moulding upper	Cover moulding upper	73151SR2003	1	1	
	<b>24 178 8 14 1</b> 3948AKCC	WS-Clip kit	Clip 2102 053 Clip 2102 055	91511ST3E00 91520SR3003	8 • 6 <b>*</b>	24	-
Scan-No. → Recomme	1833-1 ended foam rubber 5 007-15/5 00	] 03.	Clip 2102 058 Clip 2102 059 Clip 2102 060 Clip 2102 061 Clip 2102 062	91511SR2003 91519SR3003 91541SR3003 91521SR2003 91518SR2003	2 <b>♣</b> 2 △ 2 <b>■</b>		
Civic VI 3	<b>doors</b> '96 – '01						~ ~
Eurocode Scan-No.	<b>24 280 8 13 1</b> 3956ASMH 2014 nded foam rubber 5 007-15/5 00	WS-Moulding OEM	Cover moulding	73150 S03 003	1	1	
Part No.	24 280 8 13 2	WS-Moulding	Cover moulding	73150 S03 013	1	1	
Eurocode Scan-No.	3956ASMH1 2014-1						
Civic VI 4	doors '96 – '01						
	<b>24 277 8 13 1</b> 3957ASMS 2002	WS-Moulding OEM	Cover moulding	73150 S04013	1	1	
Part No.	24 277 8 13 2	WS-Moulding	Cover moulding	73150 S04013	1	1	
	3957ASMS1				_	_	
		l					

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Oisia VIII 9	2 de eve (04 (05						
	Civic VII 3 Part No. Eurocode		WS-Moulding upper	Cover moulding upper	73150 S5S E01	1	1	
N EW!		<b>24 288 8 14 1</b> 3976AKCHS	WS-Clip kit OEM	Clip Clip Clip Clip Clip		4 ▲ 2 ● 6 ¥ 2 ■ 2 ○	16	<i>r</i> -
	Civic VII	4 doors '01 – '05						x, === ,,
-		<b>24 279 8 13 1</b> 3980ASMST	WS-Moulding upper	Cover moulding upper	73150 S5A 013	1	1	
NEW		<b>24 279 8 14 1</b> 3980AKCSS	WS-Clip kit OEM	Clip Clip Clip Clip Clip Clip		2 X 6 ● 2 △ 2 ♣ 2 □ 2 ○	16	
	Civic VII	<b>5 doors</b> '01 – '05						XI STATE
	Part No. Eurocode	<b>24 286 8 13 1</b> 3974ASMHT	WS-Moulding upper	Cover moulding upper	73150 S6D E01	1	1	
NEW		<b>24 286 8 14 1</b> 3974AKCHS	WS-Clip kit OEM	Clip kit		2 X 6 ● 2 △ 4 <b>+</b> 6 □ 2 ○	22	
	Civic VII	<b>Coupé</b> '01 –						
	Part No. Eurocode		WS-Moulding upper	Cover moulding upper	73150 S5P A01	1	1	
NEW		<b>24 292 8 14 1</b> 3964AKCCS	WS-Clip kit OEM	Clips A-Pillar	91519 S5P A01 91521 S5P 003		12	
	Civic VIII	<b>5 doors</b> '06 –						
	Part No.	<b>24 293 8 13 1</b> 3998ASMHT	WS-Moulding upper	Cover moulding upper	73150 S5A 013	1	1	
		24 293 8 14 1	WS-Clip kit OEM	Clip kit		6 <b>*</b>	24	, ( ) , ( ) , ( ) , ( ) , ( ) , ( )
NEW		l 3998AKCHS ors page 172.				1 0 1 0 6 \( \triangle \) 2		
	Concerto	<b>SJ4</b> '91 – '95						×a —————
		<b>24 094 8 13 1</b> 3943ASMHT 1654	WS-Moulding upper	Cover moulding upper	73151 SK3 000	1	1	X X X
		<b>24 094 8 14 1</b> 3943AKCH 1654-1	Fastener kit OEM	Fastener 6102 200	73150 \$10 023	8 <b>X</b>	8	
	CR-V I	'97 – '02						
	Part No.		WS-Moulding with rain channel OEM	Cover moulding	73150 S10 023	1	1	
		<b>24 095 8 13 3</b> 3962ASMR1	WS-Moulding with rain channel	Cover moulding	73150 S10 023	1	1	••••••
		<b>24 095 8 16 1</b> 3962AKSR	Fastener kit	Fastener 6102 020	91508 SR3000	9 🛨	9	

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	WODEL	TEAN	1172	COMPONENTS	ORIGINAL NO.	F 0 3.	ONT	
	CR-V II	·02 <i>-</i>						, <u> </u>
	Part No. Eurocode	<b>24 096 8 13 1</b> 3983ASMRT	WS-Moulding upper	Cover moulding upper	73150 SCA E00	1	1	×
=	Part No.	24 096 8 14 1	WS-Clip kit OEM	Clips A-Pillar		6 X	6	
≥ N N	Eurocode		W3-GIIP KIT OLIVI	Clips A-Filial		0 ^		
	FR-V	·05 <i>-</i>						
	Part No.	24 611 8 13 1	WS-Moulding upper	Cover moulding upper	73150 SJD 003	1	1	/\
	Eurocode	3992ASMVT	OEM	C spp.				
M	Part No. Eurocode		WS-Moulding upper	Cover moulding upper	73150 SJD 003	1	1	
ш	Part No.	24 611 8 13 2	WS-Foam rubber	Foam rubber lower	73125 SJD 000	1	1	
Z		3992ASDVB	OEM					
		24 611 8 14 1	WS-Clip kit OEM	Clips A-Pillar		2 •	20	
		l 3992AKCVS ors page 172.				8 0 2 <b>X</b> 8 <b>D</b>		
	HR-V	·98 –	MC Mandalina OFM	O a version and district	72450 0011 002	4	4	
	Part No. Eurocode	<b>24 001 8 13 1</b> 3967ASMR	WS-Moulding OEM	Cover moulding	73150 S2H 003	1	1	
>	Part No.	24 001 8 14 1	WS-Clip kit OEM	Clips A-Pillar		2 X	4	
NEW	Eurocode	3967AKCR	·			2 0		
	Jazz	·02 <i>-</i>						
	Part No. Eurocode	<b>24 124 8 13 1</b> 3979ASMH	WS-Moulding OEM	Cover moulding	73150 SAA 003	1	1	
	Logo	·99 <b>–</b>						
	Part No. Eurocode	<b>24 061 8 13 1</b> 3968ASMH	WS-Moulding	Cover moulding	73150 S0 013	1	1	
	Duoludo II	<b>   Coupé</b> '88 – '91						
	Prelude II Part No.		WS-Clip kit	Clip 2101 006	91502SG0003	4 🗆	21	h Axaxaxa
		3931AKCS	W3-Olip Kit	Clip 2101 007	91505SG0003	5 A	21	
	Scan-No.			Clip 2102 014	61214SF1003	8 •		//
		ulding reusable. ded foam rubber 5 007-15/5 003		Clip 2102 015	73101SF1000	4 X		Na ++++++++++
	Part No.	24 113 8 16 1	Fastener kit	Fastener 6102 002	90687SB0001	13 🔸	25	
		3931AKSS		Fastener 6102 008	73839594000	8 💠		
	Scan-No.	1556-1		Fastener 6102 009	90657SA5003	4 🗶		
	Prelude I	<b>V Coupé</b> '92 – '97						
		24 114 8 13 1	WS-Moulding OEM	Cover moulding	73150SS0010	1	1	<i>[</i> :
	Eurocode Scan-No.	3942ASMC 1797-1						
	Part No.	24 114 8 14 1	WS-Clip kit	Clip		16 •	16	
		3942AKCC	No sup inc	op		10 0		
	→ Recomme	ended foam rubber 5 007-15/ 5 0	03.					
	Prelude V	<b>Coupé</b> '97 – '06						
	Part No.	24 115 8 13 1	WS-Moulding	Cover moulding	73150 S30 003	1	1	\
		3961ASMC ended foam rubber 5 007-15/ 5 0	003.					
	→ Mecollille	Shaca reall rubber 5 007-15/ 5 C		1	(		1	

#### HONDA MODEL YEAR ORIGINAL NO. PCS. UNIT COMPONENTS Shuttle II **'88 – '95** Part No. 24 128 8 13 1 WS-Moulding 73150 SH5 024 1 Cover moulding Eurocode 3934ASMV → Recommended foam rubber 5 007-15/ 5 003. **'95 – 11/'98** Part No. 24 129 8 13 1 73151 SX0 003 1 WS-Moulding upper Cover moulding Eurocode 3955ASMVT Part No. 24 129 8 14 1 WS-Clip kit Clip 2101 036 91511SP0003 4 💥 Eurocode 3955ASCVS 91528SP0003 4 Clip 2101 046 91576SV4003 1 + Clip 2101 057 Clip 2101 058 91577SV4003 1 × Clip 2101 064 91572SV4003 4 Δ Clip 2101 065 91573SV4003 6 • Clip 2101 066 91574SV4003 2 Shuttle III 12/'98 – '01 Part No. 24 129 8 13 2 WS-Moulding Cover moulding 73150 SX0 013 1 Eurocode 3955ASMV → Cover moulding was changed from year 12/1998. **Stream** Part No. 24 601 8 13 1 WS-Moulding upper Cover moulding upper 73150 S7A 003 1 Eurocode 3978ASMVT Part No. 24 601 8 14 1 WS-Clip kit OEM Clip 6 • 14 Eurocode 3978AKCV Clip 2 6 🗶 Clip **HUMMER**

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	H2	03 –						
3	Part No. 59 148 68 13 1		WS-Moulding upper	Cover moulding upper		1	1	
W Z	NAGS-Code DW1486		0.11	0.14				
_	l l							

MODEL	YEA	R TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	bil B-Class/Old '95 - '9		We ath a vativing E 920 mans	02.48.04.4	1	1	
	98 040 8 11 1 9312ASRV	Weatherstrip profile OEM	Weatherstrip 5830mm	03 18 014	1	1	
Wohnmo	bil B-Class/New '97	_					
Part No.	98 141 8 11 1	Weatherstrip profile	Weatherstrip profile	03 18 023	1	1	
Eurocode	HYM186AR	OEM	6480mm				

**HYMER** 

#### HYUNDAI

MO	DEL	v	EAR	TYPE	COMPONENTS	ORIGINAL NO.	DOS	UNIT	
0	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		LAN		OUNI ONENTO	ORIGINAL NO.	100.	ONT	
Ac	ccent	·95 – 10	/'99						
	Part No.	24 188 8 12 1		WS-Moulding black	Cover moulding	86 130 22000	1	1	
_	urocode Scan-No.	4109ASMH		OEM					\
		ended foam rubber 5 007-1	5/5 00	)3.					
Λο	ccent II	11 / '	00						
		25 204 8 12 1	99 –	WS-Moulding OEM	Cover moulding	86 131 25000	1	1	
Е	urocode	4118ASMH							/
				l		I			
	tos		- '03						
		<b>25 210 8 13 1</b> 4115ASMH		WS-Moulding OEM	Cover moulding	86 131 0200	1	1	\
_	uiocode	4113/3/111							
Δ+	tos Prim	ne '00 -	,'03						
		25 212 8 13 1	UJ	WS-Moulding OEM	Cover moulding	86 131 05000	1	1	
		4121ASMV		l					
_		rubber 5003 for inner mou	uaing.		1	I	l	1	
	oupé l		- '02						
		<b>25 287 8 13 1</b> 4113ASMC		WS-Moulding	Cover moulding	86 131 27000	1	1	/
_		1110/101110							
Co	oupé II		'02 –						
		25 288 8 13 1	<u> </u>	WS-Moulding OEM	Cover moulding	86131 2C 000	1	1	
E	urocode	4127ASMC							
		l							
	antra		00 –	WO M. J.E.		00.405.00000	4	4	
		<b>25 192 8 13 1</b> 4122ASMHT		WS-Moulding upper OEM	Cover moulding upper	86 135 2D000	1	1	
_		1222/10/11/11							
Ga	alopper		'98 –						
100		25 231 8 11 1		WS-Rubber	Weatherstrip without insert		1	1	
ZE	urocode	4114ASRR							
	alopper	25 231 8 11 2	·98 –	WS-Rubber	Weatherstrip with insert	HR530120	1	1	
111		4114ASRRC		WS-Rubbel	weatherstrip with insert	HK550120	1	1	
_									
Ge	etz		'02 –						
		25 341 8 13 1		WS-Moulding OEM	Cover moulding	86131 1C 000	1	1	
Е	urocode	4128ASMH							
,		· 							
- Gr ≥ Gr	randeur Part No	25 241 8 13 1	·05 –	WS-Moulding upper	Cover moulding upper	86131 3L000	1	1	
177		4132ASMST		OEM OEM	oover moditaling appea	00101 02000	_	-	
<b>—</b> →	See sens	ors page 172.		l					
H-	100	·94 -	- '98						
		25 180 8 11 1		WS-Rubber OEM	Weatherstrip without insert	86 120 43000	1	1	/
E	urocode	4107ASRV							
			/O=-						
	Intra   Part No	'91 - 25 186 8 13 1	- '95	WS-Moulding	Cover moulding	86 130 28000	1	1	
		4106ASMS		110 Modifile	oover mounting	23 130 20000	_	1	
	Scan-No.		E /E 01						,
→	Recomme	ended foam rubber 5 007-1	ນ/ວ U(	Jo.	T.	I .	I	I	

#### HYUNDAI

r	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
L	antra II	·95 – ·00						
	Part No.		WS-Moulding upper black OEM	Cover moulding upper	86 131 29000	1	1	
	Part No. Eurocode	<b>25 190 8 13 3</b> 4111ASMHTC	WS-Moulding upper chrome OEM	Cover moulding upper	86 131 29100	1	1	
	Part No. Eurocode	<b>25 190 8 13 4</b> 4111ASMHLC	WS-Moulding left chrome OEM	Cover moulding left	86 133 29100	1	1	
	Part No. Eurocode	<b>25 190 8 13 5</b> 4111ASMHRC	WS-Moulding right chrome OEM	Cover moulding right	86 134 29100	1	1	
	Matrix I	01 –						
	Part No. Eurocode	<b>25 321 8 13 1</b> 4125ASMH	WS-Moulding OEM	Cover moulding	86 131 17000	1	1	
F	ony III	·91 – ·95						
	Part No. Eurocode Scan-No.	4105AKMH	WS-Installation kit OEM	Cover moulding upper Cover moulding left Cover moulding right	86 131 24000 86 133 24001 86 134 24001	1 1 1	3	
		<b>25 185 8 13 2</b> 4105ASMHT 1720-1	WS-Moulding upper OEM	Cover moulding upper	86 131 24000	1	1	
		<b>25 185 8 13 3</b> 4111ASMHL 1720-2	WS-Moulding left OEM	Cover moulding left	86 133 24001	1	1	
		<b>25 185 8 13 4</b> 4105ASMHR 1720-3	WS-Moulding right OEM	Cover moulding right	86 134 24001	1	1	
-	Recomme	ended foam rubber 5 007-15/5 00	03.					
S	S-Coupé	'91 –'96						
	Eurocode Scan-No.	<b>25 187 8 13 1</b> 4104ASMCT 1734 ended foam rubber 5 007-15/5 00	WS-Moulding upper	Cover moulding upper	86 131 23000	1	1	
1 3	Recomme	inded toant tubber 5 007-15/5 00	73.		1	I	' '	
_5	anta Fe	06/'00-						
		<b>25 301 8 13 1</b> 4123ASMR	WS-Moulding OEM	Cover moulding	86 131 26000	1	1	
c	Santa Fe	<b>II</b> 06 –						
¥ U Z	Part No.	<b>25 302 8 13 1</b> 4133ASMR	WS-Moulding OEM	Cover moulding	86 131 2B000	1	1	
S		'99 – '01 <b>25 236 8 13 1</b> 4126ASMV	WS-Moulding	Cover moulding	86 150 M2000	1	1	
-	Conote L	104 -100			1			
	onata I	'91 –'93	WC Moulding	Cover moulding	06 424 22004	1	1	XXXXX
		<b>25 184 8 13 1</b> 4103ASMS	WS-Moulding upper	Cover moulding upper	86 131 33001	1	1	
-3	Eurocode Recomme	<b>25 184 8 14 1</b> 4103AKCS ended foam rubber	WS-Clip kit	Clip 2108 001 Clip 2108 002 Clip 2108 003	86 141 33000 86 142 33000 96 143 33000	2	14	
5	007-15/5	003.		Clip 2108 004 Clip 2304 001	86 144 33000 MB 198536	2 • 6 ×		

#### HYUNDAI

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Sonata II	<u> </u>						
	25 188 8 13 2	WS-Installation kit	Cover moulding right	86 132 34100	1	3	
	4108AKMSC	chrome OEM	Cover moulding left	86 133 34100	1		/
Scan-No.	1904-1		Joint	86 137 34100	1		
	25 188 8 13 3	WS-Moulding right	Cover moulding right	86 132 34100	1	1	
Eurocode Scan-No.	4108ASMSRC	chrome OEM					
Scall-110.	1904-2						
	25 188 8 13 4	WS-Moulding left	Cover moulding left	86 133 34100	1	1	
Scan-No.	4108ASMSLC	chrome OEM					
	nded foam rubber 5 007-15/5 00	)3.					
Conoto III	100 /04/104						~ 1
Sonata III	'99 –/04/'01 – <b>25 189 8 13 1</b>	WC Moulding blook	Cover moulding	86 137 38000	1	1	
	4117ASMS	WS-Moulding black OEM	Cover moulding	ab 04/01:	1	1	/
	a Magentis (4414ASMS)	OLIVI		86 137 3D000			***************************************
Sonata IV	'05 –						
	25 195 8 13 1	WS-Moulding upper	Cover moulding upper	86 130 3K000	1	1	
	4130ASMST	OEM	3 - 17 -				
starex/H	<b>200/Satellite</b> '98 –						
Part No.	25 280 8 12 1	WS-Moulding OEM	Cover moulding	86 130 4A000	1	1	\
Eurocode	4116ASMV						
I				l			
erracan	'01 –						
	25 311 8 13 1	WS-Moulding OEM	Cover moulding	86 130 H1010	1	1	/
Eurocode	4124ASMR						
	00.000						
rajet Part No	03/'00 <b>– 25 270 8 13 1</b>	WS-Moulding OEM	Cover moulding	86 131 3A000	1	1	
	4120ASMV	Wo Modium g OZIM	cover medianig	00 101 0/1000	-	-	/
See senso	ors page 172.						
Tucson	'04 –						
	25 316 8 13 1	WS-Moulding OEM	Cover moulding	86 131 2E000	1	1	
_							1
Eurocode	4129ASMR						
Eurocode	4129ASMR						
Eurocode	4129ASMR	Ü					
Eurocode	4129ASMR						ISUZI
Eurocode	4129ASMR						ISUZI
	4129ASMR YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	ISUZI
MODEL	YEAR		COMPONENTS	ORIGINAL NO.	PCS.	UNIT	ISUZI
vodel Frooper I	YEAR '83 – '92	ТУРЕ					ISUZI
VODEL  Trooper I Part No.	YEAR '83 – '92 98 028 8 11 1		COMPONENTS  Weatherstrip without insert	ORIGINAL NO. 894294 0833	PCS.	UNIT 1	ISUZI
Trooper I Part No. Eurocode	YEAR  '83 – '92  98 028 8 11 1  6270ASRR	ТУРЕ					ISUZI
VODEL  Trooper I Part No.	YEAR  '83 – '92  98 028 8 11 1  6270ASRR	ТУРЕ					ISUZI
Frooper I Part No. Eurocode Scan-No.	YEAR  '83 – '92  98 028 8 11 1  6270ASRR 1272	ТУРЕ					ISUZI
Trooper I Part No. Eurocode Scan-No.	YEAR  '83 - '92  98 028 8 11 1  6270ASRR 1272	TYPE WS-Rubber	Weatherstrip without insert	894294 0833	1	1	ISUZI
Frooper I Part No. Eurocode Scan-No.	YEAR  '83 - '92  98 028 8 11 1  6270ASRR 1272  '93 - '98  80 161 8 13 2	ТУРЕ					ISUZI
rooper I Part No. Eurocode Scan-No.	YEAR  '83 - '92  98 028 8 11 1  6270ASRR 1272  '93 - '98  80 161 8 13 2  6276ASMRT	TYPE WS-Rubber	Weatherstrip without insert	894294 0833	1	1	ISUZI
Part No.  Frooper I  Part No.  Frooper II  Part No.  Eurocode  Scan-No.	YEAR  '83 - '92  98 028 8 11 1  6270ASRR 1272  '93 - '98  80 161 8 13 2  6276ASMRT 1821-3	TYPE WS-Rubber WS-Moulding upper	Weatherstrip without insert  Cover moulding upper	894294 0833 171 263	1	1	ISUZI
Part No.  Furocode Scan-No.  Frooper II Part No. Eurocode Scan-No.  Part No. Part No.	YEAR  '83 - '92  98 028 8 11 1 6270ASRR 1272  '93 - '98  80 161 8 13 2 6276ASMRT 1821-3  80 161 8 14 2	TYPE WS-Rubber	Weatherstrip without insert	894294 0833	1	1	ISUZU
Part No. Eurocode Scan-No.  Trooper II Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	YEAR  '83 - '92  98 028 8 11 1 6270ASRR 1272  '93 - '98  80 161 8 13 2 6276ASMRT 1821-3  80 161 8 14 2 6262AKCV	TYPE WS-Rubber WS-Moulding upper	Weatherstrip without insert  Cover moulding upper	894294 0833 171 263	1	1	ISUZU
Part No. Eurocode Scan-No.  Frooper II Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	YEAR  '83 - '92  98 028 8 11 1 6270ASRR 1272  '93 - '98  80 161 8 13 2 6276ASMRT 1821-3  80 161 8 14 2 6262AKCV	TYPE WS-Rubber WS-Moulding upper	Weatherstrip without insert  Cover moulding upper	894294 0833 171 263	1	1	ISUZI
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Also for O	YEAR  '83 - '92  98 028 8 11 1 6270ASRR 1272  '93 - '98  80 161 8 13 2 6276ASMRT 1821-3  80 161 8 14 2 6262AKCV 1821-2	TYPE WS-Rubber WS-Moulding upper	Weatherstrip without insert  Cover moulding upper	894294 0833 171 263	1	1	ISUZI

#### IVECO

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
			_					
		VIK-Saviem '75 - 71 151 8 11 1	WS-Rubber OEM	Woodhayatsin with incost	8000 1959 UC	1	4	
		9185ASRL	WS-Rubbel OEW	Weatherstrip with insert	8000 1959 00	1	1	
	Scan-No.	0796						
					1			
	Daily I	'79 – '98						
		<b>68 611 8 11 1</b> 3725ASRV	WS-Rubber	Weatherstrip without insert	9390 2026	1	1	
	Scan-No.							
I					I			
	Daily I Hi		3					
		<b>68 611 8 11 2</b> 3725ASRV1A	WS-Rubber	Weatherstrip without insert	9392 6149	1	1	
	Scan-No.							
	Daily II	·99 -						
		68 614 8 12 1	WS-Moulding	Cover moulding	081 438 53	1	1	
	Eurocode	3741ASMV		(Version II from 9/2000)	(9716 9308)			//
		pel Movano Eurocode						
	6296ASML 7247ASML.	and Renault Master Eurocode						
	Euro Carg	<b>50</b> '91 - '03 <b>71 180 8 11 1</b>	WS-Rubber	Weatherstrip without insert	081 438 51	1	1	
		3732ASRL	WS-Rubbel	weatherstrip without insert	061 436 51	1	1	
	Scan-No.	1751						
		l			1			
<u>-</u> :	Euro Carg				504.0504.00			
NEW		<b>71 181 8 13 1</b> 3744ASMLT	WS-Moulding upper	Cover moulding upper	504 058 103	1	1	1/2
Z								
	Euro Star	'/ <b>Stralis</b> '93 – '02						
	Part No.	71 163 8 11 1	WS-Rubber	Weatherstrip without insert	081 438 53	1	1	
	Eurocode Scan-No.	3733/3742ASRL						
	- Countrio	1070						
	Euro Tech	·92 -						
	Laro 1001	00 004 8 11 1	WS-Rubber	Weatherstrip without insert	081 438 52	1	1	
		3734ASRL 1877						
		1011						
	Turbo Sta	nr '84 -						
		71 161 8 11 1	WS-Rubber	Weatherstrip with insert	42 348 244	1	1	
		3729ASRL						100
	Scan-No.	1397						
	<u>JEEP</u>							
	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS	UNIT	
	Cherokee	• <b>!</b>						
	Part No.	59 952 8 14 1	WS-Clip kit	Clip 1401 001	55134797	26 •	26	<b>/</b>
	Eurocode NAGS-Nr.	AJ03AKCR						/
	MAGS-MI.	0332						
	Charakee	.II 04 04						_
	Cherokee Part No.	94 – '01 <b>59 140 8 13 1</b>	WS-Moulding	Cover moulding	552 35391 AB	1	1	
	Eurocode	9248ASMR						/
	NAGS-Nr.	1140						
	'		•	•	•			

#### **JEEP**

	MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Cherokee	; III	'01 –						
	Part No. NAGS-Nr.	<b>59 144 98 13 1</b> DW1449		WS-Moulding upper	Cover moulding upper	55 235 917AC	1	1	
	Grand Ch	erokee I	'93 – '98						
		59 114 28 13 1		WS-Moulding upper	Cover moulding upper	55 000 536	1	1	
	Eurocode NAGS-Nr.	SW114200A 1142							
	Over d Ob	avales a II	100 104						
	Grand Ch	59 134 68 13 1	'99 – '04	WS-Moulding upper	Cover moulding upper	55 135 592AC	1	1	
	Eurocode NAGS-Nr.	AJ07ASMRT 1346		To modium g apper	ooto:oa.ag appe.	00 100 002/10	_		
	→ See Sens	sors page 172.	l			I		1	
5	<b>Grand Ch</b>	erokee III	'04 –						
<b>≥</b>	Part No.	59 159 28 13 1		WS-Moulding upper	Cover moulding upper	55 394 511AA	1	1	_
Z	NAGS-NI.	AJ10ASMRT sors page 172.							
	Eagle/Re	negade 59 136 8 11 1	'76 – '86	WS-Rubber	Weatherstrip without insert		1	1	
		9193ASRR		ws-Rubber	weatherstrip without insert		1	1	\
	NAGS-Nr.	1136							
	Wrangler		'87 – '96						
		59 027 8 13 1	01 30	WS-Installation kit	Cover moulding		1	3	
		SW102700A			Inner Moulding		1		
	NAGS-Nr.	1027-1/1141			Joint		1		
		59 027 8 13 2		WS-Moulding	Cover moulding		1	1	
	NAGS-Nr.	1027-2/1141							
	Wrangler		<b>'</b> 97 –	WOM 11: 1		55 470 5074B	4	4	
	Part No. Eurocode	<b>59 285 8 13 1</b> AJ06ASMR		WS-Moulding	Cover moulding	55 176 567AB	1	1	\
		1285-1/1321							
									KIA
	MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Carens I		'99 – '06						
	Part No.	25 141 8 13 1		WS-Moulding OEM	Cover moulding	OK 2C3 50 600	1	1	/ - \
		4410ASMV							
	7 See Sens	sors page 172.		I	1	ı	1	ı	
5	Carens II		·06 –						
<b>≥</b>	Part No. Eurocode	25 143 8 13 1		WS-Moulding OEM	Cover moulding		1	1	/
Z	Luiocode	1		1					
	Carnival		·99 –						
		25 131 8 13 1		WS-Moulding OEM	Cover moulding	OK 552 63 401	1	1	/ - \
		4408ASMV							
	→ See Sens	sors page 172.		l .		1	1	1	
>	Cerato	0.040.040	·02 –	WO M		00464 05555		4	
¥	Part No.	<b>25 043 8 13 1</b> 4421ASMS		WS-Moulding	Cover moulding	86131 2F000	1	1	
Z	Larocoue	PATAGINIO		1					

### KIA

	MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	•							
		'96 – '00 <b>25 102 8 13 1</b> 4405ASMSTC	WS-Moulding upper incl. Clip OEM, chrome	Cover moulding upper	OK 9A0 506A0B	1	1	
	Joyce	'00 –						
		<b>25 151 8 13 1</b> 4416ASMV	WS-Moulding OEM	Cover moulding	86150 M3 000	1	1	
	Magentis	,						
		<b>25 013 8 13 1</b> 4414ASMS	WS-Moulding OEM	Cover moulding	86137 38000	1	1	
Ξ.	Magentis	11/'05 –						
N E	Eurocode	<b>25 014 8 13 1</b> 4427ASMS cors page 172.	WS-Moulding OEM	Cover moulding	86131 2G000	1	1	
=	Picanto	11/'05 –						
N E N		<b>25 088 8 13 1</b> 4422ASMH	WS-Moulding OEM	Cover moulding	86131 07000	1	1	
	Pregio	·98 –						
	Part No. Eurocode		WS-Moulding OEM	Cover moulding	OK 72 B63401A	1	1	
	Pride	·93 – ·00						<u> </u>
	Part No. Eurocode		WS-Installation kit OEM	Cover moulding lower Cover moulding left Cover moulding right Cover moulding upper left Cover moulding upper right	MDA0250604 MDA0250603 MDA0250602 MDA0250605 MDA0250601	1 1 1 1	5	X X X X X X
		<b>25 086 8 13 6</b> 4400ASMHB	WS-Moulding OEM	Cover moulding lower	MDA0250604	1	1	
		<b>25 086 8 13 5</b> 4400ASMHL	WS-Moulding OEM	Cover moulding left	MDA0250603	1	1	
		<b>25 086 8 13 4</b> 4400ASMHR	WS-Moulding OEM	Cover moulding right	MDA0250602	1	1	
		<b>25 086 8 13 3</b> 4400ASMHTL	WS-Moulding OEM	Cover moulding upper left	MDA0250605	1	1	
		<b>25 086 8 13 2</b> 4400ASMHTR	WS-Moulding OEM	Cover moulding upper right	MDA0250601	1	1	
		<b>25 086 8 14 1</b> 4400AKCH	WS-Clip kit OEM	Clip 2111 002	KKY0150609A	20 🗶	20	
	Retona Je							
		<b>25 061 8 13 1</b> 4413ASMR	WS-Moulding OEM	Cover moulding	A331 63 902C	1	1	
	Rio I	'00 – '05						
	Part No.		WS-Moulding OEM	Cover moulding	OK30A 50 600C	1	1	
	Rio II	·05 –						
N N N	Part No.	<b>25 003 8 13 1</b> 4426ASMH	WS-Moulding OEM	Cover moulding	86131 1G000	1	1	
_							l	

ORIGINAL NO. PCS. UNIT

#### KIA

Sephia	·93 – ·98						
	25 100 8 13 1	WS-Moulding upper	Cover moulding upper	OK201 50608C	1	1	<b>/</b>
	4401ASMSTB	black	cover meaning apper	0.1201 000000	_	-	
Scan-No.	1957						<i>1:</i>
Part No.	25 100 8 13 2	WS-Moulding upper	Cover moulding upper	0K203 50908B	1	1	
Eurocode 4	4401ASMSTC	chrome					
Scan-No.	1957-2						
			011 0111 001	01/00/ 50500		4.0	
	25 100 8 14 1	WS-Clip kit	Clip 2111 001	0K201 50782	12 •	12	
Eurocode 4 Scan-No.							
	lings reusable.						
- Side Illouid	illigs reusable.	ı		1	ı	1	
Sephia II/S	<b>Shuma</b> '98 – '04						
	25 041 8 13 1	WS-Moulding OEM	Cover moulding	OK2A3 50 600A	1	1	/
Eurocode	4409ASMH						/
			i				
Sportage I							
	25 095 8 13 1	WS-Moulding OEM	Cover moulding	OK018 50601H	1	1	/
Eurocode	4402ASMR						
1		I		I	ı	1	
Sportage I	·04 –						
	25 159 8 13 1	WS-Moulding OEM	Cover moulding	86131 1F000	1	1	
Eurocode		3-2					\
_							
Sorento	·02 –			0010=			
	25 096 8 13 1	WS-Moulding OEM	Cover moulding	86137 3E 000	1	1	/
Eurocode		I					
→ See Senso	rs page 172.			I	ı	1	
							LANCIA
							LAIVI
							LAIGIA
MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	LANGIA
-			COMPONENTS	ORIGINAL NO.	PCS.	UNIT	EANOIA
Dedra	'95 –'00						
Dedra Part No.	'95 –'00 <b>27 735 8 12 1</b>		COMPONENTS  Cover moulding	ORIGINAL NO. 824 48 114	PCS.	UNIT 1	
Dedra Part No.	'95 –'00 <b>27 735 8 12 1</b> 4727ASMH						
Dedra Part No. : Eurocode	'95 –'00 <b>27 735 8 12 1</b> 4727ASMH						
Part No. 2 Eurocode Scan-No. 2	'95 –'00 <b>27 735 8 12 1</b> 4727ASMH 1665						
Dedra Part No. : Eurocode Scan-No. :	'95 –'00 <b>27 735 8 12 1</b> 4727ASMH 1665	WS-Moulding OEM	Cover moulding	824 48 114	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2	'95 -'00 <b>27 735 8 12 1</b> 4727ASMH 1665 '99 - <b>27 835 8 12 1</b>						
Dedra Part No. : Eurocode Scan-No. :	'95 -'00 <b>27 735 8 12 1</b> 4727ASMH 1665 '99 - <b>27 835 8 12 1</b>	WS-Moulding OEM	Cover moulding	824 48 114	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2	'95 -'00 <b>27 735 8 12 1</b> 4727ASMH 1665 '99 - <b>27 835 8 12 1</b>	WS-Moulding OEM	Cover moulding	824 48 114	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2	'95 -'00 <b>27 735 8 12 1</b> 4727ASMH 1665 '99 - <b>27 835 8 12 1</b> 4734ASMH	WS-Moulding OEM	Cover moulding	824 48 114	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2 Eurocode 2	'95 -'00 <b>27 735 8 12 1</b> 4727ASMH 1665 '99 - <b>27 835 8 12 1</b> 4734ASMH	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding	824 48 114 465 47 054	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2 Eurocode 2	'95 -'00 27 735 8 12 1 4727ASMH 1665 '99 - 27 835 8 12 1 4734ASMH '85 - '95	WS-Moulding OEM	Cover moulding	824 48 114	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2 Eurocode 2  Y 10 Part No. 2	'95 –'00 27 735 8 12 1 4727ASMH 1665 '99 – 27 835 8 12 1 4734ASMH '85 – '95 27 730 8 13 1 4725ASMH	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding	824 48 114 465 47 054	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2 Eurocode 2  Y 10 Part No. 2 Eurocode 4	'95 –'00 27 735 8 12 1 4727ASMH 1665 '99 – 27 835 8 12 1 4734ASMH '85 – '95 27 730 8 13 1 4725ASMH	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding	824 48 114 465 47 054	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode 2  Y 10 Part No. Eurocode Scan-No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665 '99 - 27 835 8 12 1 4734ASMH '85 - '95 27 730 8 13 1 4725ASMH 1409	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding	824 48 114 465 47 054	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode 2  Y 10 Part No. Eurocode Scan-No. 2  Y 10  Y 10  Part No. 2  Part No. 2  Y 10	'95 -'00 27 735 8 12 1 4727ASMH 1665 '99 - 27 835 8 12 1 4734ASMH '85 - '95 27 730 8 13 1 4725ASMH 1409	WS-Moulding OEM WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode 2  Y 10 Part No. Eurocode Scan-No. 2  Y 10 Part No. 2  Part No. 2  Part No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665 '99 - 27 835 8 12 1 4734ASMH '85 - '95 27 730 8 13 1 4725ASMH 1409	WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding	824 48 114 465 47 054	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2 Eurocode 4  Y 10 Part No. 2 Eurocode Scan-No. 2  Y 10 Part No. 2 Eurocode Scan-No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95 27 730 8 13 1 4725ASMH 1409  '85 - '95 27 730 8 21 1 4725BSMH	WS-Moulding OEM WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode 2  Y 10 Part No. Eurocode Scan-No. 2  Y 10 Part No. 2  Part No. 2  Part No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95 27 730 8 13 1 4725ASMH 1409  '85 - '95 27 730 8 21 1 4725BSMH	WS-Moulding OEM WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2 Eurocode 4  Y 10 Part No. 2 Eurocode Scan-No. 2  Y 10 Part No. 2 Eurocode Scan-No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95 27 730 8 13 1 4725ASMH 1409  '85 - '95 27 730 8 21 1 4725BSMH	WS-Moulding OEM WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2 Eurocode 2  Y 10 Part No. 2 Eurocode 3  Scan-No. 2  Y 10 Part No. 2 Eurocode 3  Scan-No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95 27 730 8 13 1 4725ASMH 1409  '85 -'95 27 730 8 21 1 4725BSMH 1409-1	WS-Moulding OEM WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode Scan-No. 2  Y 10 Part No. Eurocode Scan-No. 2  Y 10 Part No. 2  Eurocode Scan-No. 2  Y 10 Part No. 2  Y 10 Part No. 2  Eurocode Scan-No. 3	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95 27 730 8 13 1 4725ASMH 1409  '85 -'95 27 730 8 21 1 4725BSMH 1409-1	WS-Moulding OEM WS-Moulding OEM BL-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1 1 1	1 1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode Scan-No. 2  Y 10 Part No. Eurocode Scan-No. 2  Y 10 Part No. 2  Eurocode Scan-No. 2  Y 10 Part No. 2  Y 10 Part No. 2  Eurocode Scan-No. 3	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95 27 730 8 13 1 4725ASMH 1409  '85 - '95 27 730 8 21 1 4725BSMH 1409-1	WS-Moulding OEM WS-Moulding OEM WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1	1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2 Eurocode 2  Y 10 Part No. 2 Eurocode 3 Scan-No. 2  Y 10 Part No. 2 Eurocode 5 Scan-No. 2  Y 11 Part No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95  27 730 8 13 1 4725ASMH 1409  '85 -'95  27 730 8 21 1 4725BSMH 1409-1  '96 - '03  27 000 8 12 1 4732ASMH	WS-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1 1 1	1 1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. 2 Eurocode 2  Y 10 Part No. 2 Eurocode Scan-No. 2  Y 10 Part No. 2 Eurocode Scan-No. 2  Y 10 Part No. 2 Eurocode Scan-No. 2  Y 11 Part No. 2 Eurocode Scan-No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95  27 730 8 13 1 4725ASMH 1409  '85 -'95  27 730 8 21 1 4725BSMH 1409-1  '96 - '03  27 000 8 12 1 4732ASMH	WS-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1 1 1	1 1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode Scan-No. 2  Y 10 Part No. Eurocode Scan-No. 2  Y 11 Part No. Eurocode Scan-No. 2  Y 11 Part No. Eurocode Scan-No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95 27 730 8 13 1 4725ASMH 1409  '85 - '95 27 730 8 21 1 4725BSMH 1409-1  '96 - '03 27 000 8 12 1 4732ASMH 1938	WS-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1 1 1	1 1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode Scan-No. 2  Y 10 Part No. Eurocode Scan-No. 2  Y 11 Part No. Eurocode Scan-No. 2  Y 11 Part No. Eurocode Scan-No. 2  Zeta	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95  27 730 8 13 1 4725ASMH 1409  '85 - '95  27 730 8 21 1 4725BSMH 1409-1  '96 - '03  27 000 8 12 1 4732ASMH 1938	WS-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert  Weatherstrip without insert  Cover moulding upper	824 48 114 465 47 054 75 66 912 75 66 914	1 1 1	1 1 1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode Scan-No. 2  Y 10 Part No. Eurocode Scan-No. 2  Y 11 Part No. Eurocode Scan-No. 2  Y 11 Part No. Eurocode Scan-No. 2  Zeta Part No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95 27 730 8 13 1 4725ASMH 1409  '85 -'95 27 730 8 21 1 4725BSMH 1409-1  '96 - '03 27 000 8 12 1 4732ASMH 1938	WS-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert  Weatherstrip without insert	824 48 114 465 47 054 75 66 912	1 1 1	1 1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode Scan-No. 2  Y 10 Part No. Eurocode Scan-No. 2  Y 11 Part No. Eurocode Scan-No. 2  Zeta Part No. Eurocode Scan-No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95  27 730 8 13 1 4725ASMH 1409-1  '85 -'03  27 700 8 12 1 4732ASMH 1938  '94 - '04  27 700 8 13 1 4730ASMV	WS-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert  Weatherstrip without insert  Cover moulding upper	824 48 114 465 47 054 75 66 912 75 66 914	1 1 1	1 1 1	
Part No. 2 Eurocode Scan-No. 2  Lybra Part No. Eurocode Scan-No. 2  Y 10 Part No. Eurocode Scan-No. 2  Y 11 Part No. Eurocode Scan-No. 2  Y 11 Part No. Eurocode Scan-No. 2  Zeta Part No. 2	'95 -'00 27 735 8 12 1 4727ASMH 1665  '99 - 27 835 8 12 1 4734ASMH  '85 - '95  27 730 8 13 1 4725ASMH 1409-1  '85 -'03  27 700 8 12 1 4732ASMH 1938  '94 - '04  27 700 8 13 1 4730ASMV	WS-Moulding OEM  WS-Moulding OEM  BL-Moulding OEM  WS-Moulding OEM	Cover moulding  Cover moulding  Weatherstrip without insert  Weatherstrip without insert  Cover moulding upper	824 48 114 465 47 054 75 66 912 75 66 914	1 1 1	1 1 1	

MODEL

YEAR

TYPE

COMPONENTS

#### LANDROVER

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Defender	<b>90/110</b> '83/'98-						
	Part No.		WS-Rubber	Weatherstrip without insert	MUC 3733	1	1	
	Eurocode	7012ASRR	W3-Rubbel	weatherstrip without insert	WIOC 3733	1		
	Scan-No.	1452						
	Scall-No.	1432						
				•	'			
	Discover	<b>v III</b> '04 –						
В		64 117 8 13 1	WS-Moulding upper	Cover moulding upper	DCB500130PVJ	1	1	
	Eurocode	7032ASMRT		3 1,1				
Z	→ See Sens	sors page 172.						
	Freeland	e <b>r l</b> '97 – '06						
	Part No.	64 001 8 13 1	WS-Moulding	Cover moulding (soft)	DCB 101230	1	1	\
	Eurocode	7028ASMR		incl. Butyl				/
	Dange De	204 (00						
	Range Ro		WC Olin Lit	Olin 2200 004		0 -	0	
			WS-Clip kit	Clip 3208 001		8	8	/-/
	Eurocode	7024AKCR						1.
'		I		ı		l	1	
		10						
	LEXU	JS						
	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
_	GE 300	·07 ·00						
<u>-</u>	GS 300	'97 – '00 47 404 8 13 1	WS-Moulding upper	Cover moulding upper	75531 30260	1	1	
EW.	Part No.	47 404 8 13 1	WS-Moulding upper	Cover moulding upper	75531 30260	1	1	
N N N	Part No.		WS-Moulding upper OEM	Cover moulding upper	75531 30260	1	1	
N E V	Part No.	47 404 8 13 1		Cover moulding upper	75531 30260	1	1	
NEW	Part No.	<b>47 404 8 13 1</b> 8307ASMST	ОЕМ	Cover moulding upper	75531 30260	1	1	
N M N	Part No. Eurocode	<b>47 404 8 13 1</b> 8307ASMST	ОЕМ	Cover moulding upper  Cover moulding	75531 30260 75533 53020	1	1	
N M N	Part No. Eurocode IS 200/IS Part No.	47 404 8 13 1 8307ASMST \$ 300 '99 - '05	ОЕМ					
NEW	Part No. Eurocode IS 200/IS Part No.	47 404 8 13 1 8307ASMST S 300 '99 - '05 47 405 8 13 2	OEM WS-Moulding without	Cover moulding				
NEW	Part No. Eurocode  IS 200/IS Part No. Eurocode	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS	WS-Moulding without rain channel	Cover moulding				
NEW	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS	WS-Moulding without rain channel	Cover moulding without rain channel	75533 53020	1	1	
NEW	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No.	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94	WS-Moulding without rain channel  WS-Moulding upper	Cover moulding				
NEW	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC	WS-Moulding without rain channel	Cover moulding without rain channel	75533 53020	1	1	
NEW	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No.	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1	WS-Moulding without rain channel  WS-Moulding upper chrome	Cover moulding without rain channel	75533 53020	1	1	
NEW	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No.	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC	WS-Moulding without rain channel  WS-Moulding upper chrome	Cover moulding without rain channel	75533 53020	1	1	
NEW	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400   Part No. Eurocode Scan-No. → Recomme	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0	WS-Moulding without rain channel  WS-Moulding upper chrome	Cover moulding without rain channel	75533 53020	1	1	
2	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No.	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0	WS-Moulding without rain channel  WS-Moulding upper chrome	Cover moulding without rain channel	75533 53020	1	1	
2	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400   Part No. Eurocode Scan-No. PRecomme	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0	WS-Moulding without rain channel  WS-Moulding upper chrome	Cover moulding without rain channel	75533 53020	1	1	
EWI	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No. → Recomme	47 404 8 13 1 8307ASMST \$ 300	WS-Moulding without rain channel  WS-Moulding upper chrome	Cover moulding without rain channel  Cover moulding upper	75533 53020 75531 50010	1	1	
2	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No. → Recomme	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0	WS-Moulding without rain channel  WS-Moulding upper chrome  03.	Cover moulding without rain channel  Cover moulding upper	75533 53020 75531 50010	1	1	
EWI	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No. → Recomme  LS 400 II Part No. Eurocode	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0 47 403 8 13 1 8296ASMSTC	WS-Moulding without rain channel  WS-Moulding upper chrome  03.	Cover moulding without rain channel  Cover moulding upper	75533 53020 75531 50010	1	1	
EWI	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No. → Recomme  LS 400 II Part No. Eurocode  RX 300 I	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0 47 403 8 13 1 8296ASMSTC	WS-Moulding without rain channel  WS-Moulding upper chrome  03.	Cover moulding without rain channel  Cover moulding upper  Cover moulding upper	75533 53020 75531 50010 75531 50020	1 1	1	
EWI	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No. → Recomme  LS 400 II Part No. Eurocode  RX 300 I Part No.	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0 47 403 8 13 1 8296ASMSTC	WS-Moulding without rain channel  WS-Moulding upper chrome  03.  WS-Moulding upper chrome  WS-Moulding upper chrome	Cover moulding without rain channel  Cover moulding upper	75533 53020 75531 50010	1	1	
EW!	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No. → Recomme  LS 400 II Part No. Eurocode  RX 300 I	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0 47 403 8 13 1 8296ASMSTC	WS-Moulding without rain channel  WS-Moulding upper chrome  03.	Cover moulding without rain channel  Cover moulding upper  Cover moulding upper	75533 53020 75531 50010 75531 50020	1 1	1	
EW!	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No. → Recomme  LS 400 II Part No. Eurocode  RX 300 I Part No.	47 404 8 13 1 8307ASMST 5 300 '99 - '05 47 405 8 13 2 8309ASMS '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0 47 403 8 13 1 8296ASMSTC	WS-Moulding without rain channel  WS-Moulding upper chrome  03.  WS-Moulding upper chrome  WS-Moulding upper chrome	Cover moulding without rain channel  Cover moulding upper  Cover moulding upper	75533 53020 75531 50010 75531 50020	1 1	1	
NEW!	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No. → Recomme  LS 400 II Part No. Eurocode  RX 300 I Part No. Eurocode  RX 300 I RX 300 I RX 300 I	47 404 8 13 1 8307ASMST  S 300 '99 - '05 47 405 8 13 2 8309ASMS  '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0 47 403 8 13 1 8296ASMSTC  '99 - '03  47 406 8 13 1 8322ASMRT	WS-Moulding without rain channel  WS-Moulding upper chrome  03.  WS-Moulding upper chrome  WS-Moulding upper chrome	Cover moulding without rain channel  Cover moulding upper  Cover moulding upper	75533 53020 75531 50010 75531 50020	1 1	1	
NEW!	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No. → Recomme  LS 400 II Part No. Eurocode  RX 300 I Part No. Eurocode  RX 300 I RX 300 I RX 300 I	47 404 8 13 1 8307ASMST  S 300 '99 - '05 47 405 8 13 2 8309ASMS  '89 - '94 47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0 47 403 8 13 1 8296ASMSTC  '99 - '03  47 406 8 13 1 8322ASMRT	WS-Moulding without rain channel  WS-Moulding upper chrome  03.  WS-Moulding upper chrome  WS-Moulding upper chrome	Cover moulding without rain channel  Cover moulding upper  Cover moulding upper	75533 53020 75531 50010 75531 50020	1 1	1	
EWI	Part No. Eurocode  IS 200/IS Part No. Eurocode  LS 400 I Part No. Eurocode Scan-No. → Recomme  LS 400 II Part No. Eurocode  RX 300 I Part No. Eurocode  RX 300 I Part No. Eurocode	47 404 8 13 1 8307ASMST  S 300 '99 - '05 47 405 8 13 2 8309ASMS  '89 - '94  47 401 8 13 1 8275ASMSTC 1691-1 ended foam rubber 5 007-15/5 0  '94 - '00  47 403 8 13 1 8296ASMSTC  '99 - '03  47 406 8 13 1 8322ASMRT	WS-Moulding without rain channel  WS-Moulding upper chrome  WS-Moulding upper chrome  WS-Moulding upper chrome	Cover moulding without rain channel  Cover moulding upper  Cover moulding upper	75533 53020 75531 50010 75531 50020 75531 48010	1 1 1	1 1 1	

#### MAN

MODEL	YEAR						
MODEL	TEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
F2/F7 Part No.	'71 - '87 72 121 8 11 1	WS-Rubber OEM	Weatherstrip with incert	81.96.120.0634	1	1	
	4904ASRL	WS-Rubbel OEW	Weatherstrip with insert	81.96.120.0634	1	1	100
Scan-No.							
→ Univ. filler	profile 6 202-25 applicable.						
F90 wide	'86 <b>–</b> '96						
Part No.		WS-Rubber OEM	Weatherstrip with insert	81.96.120.0905	1	1	
Eurocode	4907ASRL		profile with corners				
Scan-No.	1529						
Part No.	72 123 8 11 2	WS-Rubber	Weatherstrip with insert	81.96.120.0905	1	1	
	4907ASRL1		profile without corners				
Scan-No.	1529-1 profile 6 202-25 applicable.						
7 OHIV. HIICI	profite o 202 23 applicable.			<u>'</u>			
F90 narro		WO D Li	W 0	04.00.105.55		4	
	<b>72 124 8 11 1</b> 4908ASRL	WS-Rubber OEM	Weatherstrip with insert profile with corners	81.96.120.0908	1	1	
Scan-No.			prome with comers				
	profile 6 202-25 applicable.						
F2000 w	de '96 – '00						
Part No.		WS-Rubber	Weatherstrip with insert	81.96.121.0055	1	1	
Eurocode	4907ASRL1H		profiles with preheated		_	-	22.06
Scan-No.	1529-2		corners				
F2000 na	rrow '96 – '00						
	72 126 8 11 1	WS-Rubber OEM	Weatherstrip with insert	81.96.121.0087	1	1	
Eurocode	4908ASRL1H		profiles with preheated				
Scan-No.	l 1532-2 trip can also be used for MAN F90	horrow/wido	corners				
- Weathers	trip carr also be used for MAN 1 50	marrow/ wide.		'		'	
L2000	·93 <i>-</i>			04.00.404.0005			
	<b>72 150 8 11 1</b> 4909ASRL	WS-Rubber	Weatherstrip	81.96.121.0035	1	1	
Scan-No.							11/2
Part No.	<b>72 150 8 11 2</b> 4909ASRL1	WS-Rubber OEM	Weatherstrip	81.96.121.0035	1	1	
	1918-1						
TGA wide	·00 –						
	72 172 8 13 4	WS-Moulding upper	Cover moulding outer	PMA Produktion	1	1	
Eurocode	4912/4913ASMLT1	(39mm)	Ü				1/2
				I			
TGA wide	·00 <i>-</i>						
	72 172 8 13 1	WS-Moulding kit	Retainer moulding	81629 100 172		2	
Eurocode	4912/4913AKMLT	upper OEM (39mm)	Cover moulding outer	81629 100 195	1		1/4
Part No.	72 170 8 13 2	WS-Retainer Moulding	Retainer moulding	81629 100 172	1	1	
	4912/4913ASGLT	OEM	2209 mm				
Doub No.	70 170 0 10 0	WC Moulding OFM	Cover moviding and a	91600 100 105	1	1	
	<b>72 172 8 13 2</b> 4912/4913ASMLO	WS-Moulding OEM (39mm)	Cover moulding outer	81629 100 195	1	1	
Luitocode	1012/ TOTOMONIEU	(5511111)					
TCA wide	with sun visor '00 –						
	with sun visor '00 – 72 172 8 10 1	WS-Moulding kit upper	Cover moulding outer	81629 100 166	1	2	
	4912/4913ASML01	OEM (18.4mm)	Retainer moulding	81629 100 172		_	
	72 172 8 13 5	WS-Moulding upper	Cover moulding outer	81629 100 166	1	1	
Eurocode	4912/4913ASML01	OEM (18,4mm)					

YEAR

#### MAN

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	72 170 8 13 4 4911ASMLT1	WS-Moulding upper (39mm)	Cover moulding	PMA Produktion	1	1	11/2
	<b>72 170 8 13 1</b> 4911AKMLT	WS-Moulding kit upper OEM (39mm)	Retainer moulding Cover moulding outer	81629 100 173 81629 100 196	_	2	
Part No. Eurocode	<b>72 170 8 13 3</b> 4911ASMLO	WS-Moulding upper (39mm)	Cover moulding outer	81629 100 196	1	1	
	<b>72 170 8 13 6</b> 4911ASGLT	WS-Retainer OEM	Retainer moulding 2140 mm	81629 100 173	1	1	
TGA narre	ow with sun visor '00 –						
Part No.	<b>72 170 8 10 1</b> 4911AKML1	WS-Moulding kit upper OEM (18.4mm)	Cover moulding Retainer moulding	816 291 00167 816 291 00173	_	2	
	<b>72 170 8 13 5</b> 4911ASMLO1	WS-Moulding upper OEM (18,4mm)	Cover moulding outer	816 291 00167	1	1	
MAZ	DA						

COMPONENTS

ORIGINAL NO. PCS. UNIT

N				
	7	/ΛΑ	D	7.4

MODEL

121 II	'91 – 12/'95						
Part No.	30 173 8 13 1	WS-Moulding kit	Cover moulding lower	D061 50 604C	1	2	<b>/</b>
Eurocode		OEM	Cover moulding upper	D061 50 601A	1		/ <del>·</del> /
Scan-No.	1749						
Part No.	30 173 8 13 2	WS-Moulding upper	Cover moulding upper	D061-50-601A	1	1	
Eurocode		OEM					
Scan-No.	1749-1						
Part No.	30 173 8 13 3	WS-Moulding lower	Cover moulding lower	D061-50-604C	1	1	
	5139ASMSB	OEM					
Scan-No.	1749-3						
Part No.	30 173 8 14 1	WS-Clip kit	Clip 2103 010	B092-50-609	12 •	12	
	5139AKCS						
Scan-No.							
→ Side mou	ldings reusable.				l		
121 III	'01/'96 – '03						
	30 121 8 12 1	WS-Moulding	Weatherstrip without insert	1E00 63 902	1	1	
	5151ASMH						
Scan-No.	i 1996 file 5 001 applicable. Recommend	dad faans wybbau					
	Also for Ford Fiesta, Scan-No. 198						
2	·03 <i>-</i>						
Part No.	30 176 8 13 1	WS-Moulding	Cover moulding	DD10506019E	1	1	/
Eurocode	5165ASMH						
	I			I	l	l	
323	'77 – '80		011 0400 000	05.45.50.06.5			/•••••·•
Part No.		WS-Clip kit	Clip 2103 006	8545 50 609	20 •	20	/:/
Scan-No.	5111AKCH						/:/
	ended foam rubber 5 007-15.						
* IVECOUIIII	chaca roam rubber 5 007-15.						
323 II	'81 – '8 <b>4</b>						
Part No.		WS-Clip kit	Clip 2103 206	8545 50 609	19 •	19	1.
	5116AKCH			12.000000		1	//
Scan-No.							/.[
		1		1		1	The same of the sa

→ Recommended foam rubber 5 007-15.

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
000 111	(07.10)						
	'85 – '88 <b>30 215 8 14 1</b> 5125AKCH 1413	WS-Clip kit	Clip 2303 003 Clip 2203 001	HA01 50 609A B092 50 608	14 <b>●</b> 7 □	21	
→ Recomme	ended foam rubber 5 007-15.						
323 IV 3							
	<b>30 216 8 13 1</b> 5134ASMHT	WS-Moulding upper	Cover moulding upper	B4Y7 50 601A	1	1	
Scan-No.							
→ Recomme	ended foam rubber 5 007-15.						
Part No.	30 216 8 16 1	Fastener kit	Fastener 6103 001	NA01 50 797	2 •	7	
Eurocode	5134AKCHB		Fastener 6103 002	B455 50 796	5 🖧		
Scan-No.	1645-1						
323 IV 4	<b>doors</b> '89 – '94						
Part No.	30 220 8 13 1	WS-Moulding	Cover moulding	BW5F 50 601A	1	1	
Eurocode Scan-No.	5135ASMST 1650						/
	ended foam rubber 5 007-15.						
323 IV 5	<b>doors</b> '89 – '94						( \)
	30 218 8 13 1	WS-Moulding upper	Cover moulding upper	BW5F 50 601A	1	1	
	5136ASMHT 1651-1						
							-
Part No.	30 218 8 16 1	Fastener kit	Fastener 6103 001	NA01 50 797	7 🕁	7	000000
Part No. Eurocode Scan-No.	5136AKSH 1651		Fastener 6103 001	NA01 50 797	7 ⊕	7	000000
Part No. Eurocode Scan-No. → Side moul	5136AKSH		Fastener 6103 001	NA01 50 797	7 💠	7	
Part No. Eurocode Scan-No. → Side mould upper mould	5136AKSH 1651 Idings reusable. 5 002/5 021 fo ding applicable '4 doors 9/'94 – '98	or .					
Part No. Eurocode Scan-No. → Side moul upper moulc  323 V 3/ Part No.	5136AKSH 1651 Idings reusable. 5 002/5 021 for Iding applicable <b>'4 doors</b> 9/'94 – '98 <b>30 318 8 13 1</b>	r	Fastener 6103 001  Cover moulding	NA01 50 797	1	1	
Part No. Eurocode Scan-No. → Side moul upper moulc  323 V 3/ Part No.	5136AKSH 1651 dings reusable. 5 002/5 021 for ding applicable (4 doors 9/'94 – '98 30 318 8 13 1 5150ASMH	or .					
Part No. Eurocode Scan-No.  → Side moul upper moulc  323 V 3/ Part No. Eurocode Scan-No.	5136AKSH 1651 dings reusable. 5 002/5 021 for ding applicable (4 doors 9/'94 – '98 30 318 8 13 1 5150ASMH	or .					
Part No. Eurocode Scan-No.  → Side moul upper moulo  323 V 3/ Part No. Eurocode Scan-No.  → Recomme	5136AKSH 1651 Idings reusable. 5 002/5 021 for ding applicable  (4 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947 Inded foam rubber 5 007-15.  (4 doors 9/'94 – '98	WS-Moulding OEM	Cover moulding	BC1M 50 6AXB	1	1	
Part No. Eurocode Scan-No.  → Side moul upper moulo  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 3/ Part No.	5136AKSH 1651 Idings reusable. 5 002/5 021 for Iding applicable 74 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947 Inded foam rubber 5 007-15. 74 doors 9/'94 – '98 30 318 8 13 2	WS-Moulding OEM WS-Moulding					
Part No. Eurocode Scan-No.  → Side moul upper moulo  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 3/ Part No.	5136AKSH 1651 Idings reusable. 5 002/5 021 for ding applicable  (4 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947 Inded foam rubber 5 007-15.  (4 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1	WS-Moulding OEM	Cover moulding	BC1M 50 6AXB	1	1	
Part No. Eurocode Scan-No.  ⇒ Side moul upper moulc  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 3/ Part No. Eurocode Scan-No.	5136AKSH 1651 Idings reusable. 5 002/5 021 for ding applicable  (4 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947 Inded foam rubber 5 007-15.  (4 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1	WS-Moulding OEM WS-Moulding	Cover moulding	BC1M 50 6AXB	1	1	
Part No. Eurocode Scan-No.  ⇒ Side moulupper moulco  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme	5136AKSH 1651 Idings reusable. 5 002/5 021 for ding applicable  74 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947 Inded foam rubber 5 007-15.  74 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1 1947-1 Inded foam rubber 5 007-15.  8 doors 9/'94 – '98 8 doors 9/'94 – '98	WS-Moulding OEM  WS-Moulding alternativ	Cover moulding  Cover moulding	BC1M 50 6AXB	1	1	
Part No. Eurocode Scan-No.  ⇒ Side moul upper moulco  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 5 Part No.	5136AKSH 1651 Idings reusable. 5 002/5 021 for ding applicable  74 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947 Inded foam rubber 5 007-15.  74 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1 1947-1 Inded foam rubber 5 007-15.  80 9/'94 – '98 30 316 8 13 1	WS-Moulding OEM  WS-Moulding alternativ	Cover moulding	BC1M 50 6AXB	1	1	
Part No. Eurocode Scan-No.  → Side moul upper moulc  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 3/ Part No. Eurocode Scan-No.  → Recomme	5136AKSH 1651 Idings reusable. 5 002/5 021 for ding applicable  74 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947 Inded foam rubber 5 007-15.  74 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1 1947-1 Inded foam rubber 5 007-15.  75 doors 9/'94 – '98 30 316 8 13 1 5149ASMHT 1948	WS-Moulding OEM  WS-Moulding alternativ	Cover moulding  Cover moulding	BC1M 50 6AXB	1	1	
Part No. Eurocode Scan-No.  → Side moul upper moulc  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 3/ Part No. Eurocode Scan-No.  → Recomme	5136AKSH 1651 Idings reusable. 5 002/5 021 for ding applicable  74 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947 Inded foam rubber 5 007-15.  74 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1 1947-1 Inded foam rubber 5 007-15.  75 doors 9/'94 – '98 30 316 8 13 1 5149ASMHT	WS-Moulding OEM  WS-Moulding alternativ	Cover moulding  Cover moulding	BC1M 50 6AXB	1	1	
Part No. Eurocode Scan-No.  ⇒ Side moul upper moulc  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 5/ Part No. Eurocode Scan-No.  ⇒ Recomme	5136AKSH 1651  Idings reusable. 5 002/5 021 for ding applicable  (4 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947  Inded foam rubber 5 007-15.  (4 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1 1947-1 Inded foam rubber 5 007-15.  Idoors 9/'94 – '98 30 316 8 13 1 5149ASMHT 1948  Inded foam rubber 5 007-15.  30 316 8 13 1 5149ASMHT 1948  Inded foam rubber 5 007-15.	WS-Moulding OEM  WS-Moulding alternativ	Cover moulding  Cover moulding	BC1M 50 6AXB	1	1	
Part No. Eurocode Scan-No.  ⇒ Side moul upper moulc  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 5/ Part No. Eurocode Scan-No.  ⇒ Recomme	5136AKSH 1651  Idings reusable. 5 002/5 021 for ding applicable  74 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947  Inded foam rubber 5 007-15.  74 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1 1947-1 Inded foam rubber 5 007-15.  Idoors 9/'94 – '98 30 316 8 13 1 5149ASMHT 1948  Inded foam rubber 5 007-15.	WS-Moulding OEM  WS-Moulding alternativ  WS-Moulding upper	Cover moulding  Cover moulding  Cover moulding upper	BC1M 50 6AXB  BC1M 50 6AXB  B01A 50 601B	1 1 8 🗆	1	
Part No. Eurocode Scan-No.  → Side moul upper moulc  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 5 Part No. Eurocode Scan-No.  → Recomme	5136AKSH 1651 Idings reusable. 5 002/5 021 for ling applicable  74 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947 Inded foam rubber 5 007-15.  74 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1 1947-1 Inded foam rubber 5 007-15.  75 doors 9/'94 – '98 30 316 8 13 1 5149ASMHT 1948 Inded foam rubber 5 007-15.  76 doors 9/'94 – '98 30 316 8 13 1 5149ASMHT 1948 Inded foam rubber 5 007-15.	WS-Moulding OEM  WS-Moulding alternativ  WS-Moulding upper  Clip kit OEM	Cover moulding  Cover moulding  Cover moulding upper  Clip 2102 100	BC1M 50 6AXB  BC1M 50 6AXB  B01A 50 601B	1 1 8	1	
Part No. Eurocode Scan-No.  ⇒ Side moul upper moulc  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 5  Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 5  Part No. Eurocode Scan-No.  ⇒ Recomme	5136AKSH 1651 dings reusable. 5 002/5 021 for dings reusable. 5 003 18 8 13 1 5150ASMH 1947-1 1948-1948-1948-1948-1948-1948-1948-1948-	WS-Moulding OEM  WS-Moulding alternativ  WS-Moulding upper  Clip kit OEM	Cover moulding  Cover moulding  Cover moulding upper  Clip 2102 100	BC1M 50 6AXB  BC1M 50 6AXB  B01A 50 601B	1 1 8	1	
Part No. Eurocode Scan-No.  ⇒ Side moul upper moulc  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 5  Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 5  Part No. Eurocode Scan-No.  ⇒ Recomme	5136AKSH 1651 Idings reusable. 5 002/5 021 for ling applicable  74 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947 Inded foam rubber 5 007-15.  74 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1 1947-1 Inded foam rubber 5 007-15.  80 316 8 13 1 5149ASMHT 1948 Inded foam rubber 5 007-15.  30 316 8 14 1 5149AKCH	WS-Moulding OEM  WS-Moulding alternativ  WS-Moulding upper  Clip kit OEM	Cover moulding  Cover moulding  Cover moulding upper  Clip 2102 100 Clip 2103 101	BC1M 50 6AXB  BC1M 50 6AXB  B01A 50 601B  B01A 50 9H3B B01A 50 9H4B	1 1 2 2	1 1 10	
Part No. Eurocode Scan-No.  ⇒ Side moul upper moulc  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 3/ Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 5  Part No. Eurocode Scan-No.  ⇒ Recomme  323 V 5  Part No. Eurocode Scan-No.  ⇒ Recomme	5136AKSH 1651 dings reusable. 5 002/5 021 for dings reusable. 5 003 18 8 13 1 5150ASMH 1947-1 1948-1948-1948-1948-1948-1948-1948-1948-	WS-Moulding OEM  WS-Moulding alternativ  WS-Moulding upper  Clip kit OEM  WS-Moulding	Cover moulding  Cover moulding  Cover moulding upper  Clip 2102 100 Clip 2103 101	BC1M 50 6AXB  BC1M 50 6AXB  B01A 50 601B  B01A 50 9H3B B01A 50 9H4B	1 1 2 2	1 1 10	
Part No. Eurocode Scan-No.  → Side moul upper moulco  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 3/ Part No. Eurocode Scan-No.  → Recomme  323 V 5/ Part No. Eurocode Scan-No.  → Recomme  323 V 5/ Part No. Eurocode Scan-No.  → Recomme  323 V 5/ Part No. Eurocode Scan-No.  → Recomme	5136AKSH 1651  dings reusable. 5 002/5 021 for ding applicable  (4 doors 9/'94 – '98 30 318 8 13 1 5150ASMH 1947  ended foam rubber 5 007-15.  (4 doors 9/'94 – '98 30 318 8 13 2 5150ASMH1 1947-1 ended foam rubber 5 007-15.  doors 9/'94 – '98 30 316 8 13 1 5149ASMHT 1948 ended foam rubber 5 007-15.  30 316 8 14 1 5149AKCH  (5 doors '98 – '03 30 320 8 13 1 5155ASMH	WS-Moulding OEM  WS-Moulding alternativ  WS-Moulding upper  Clip kit OEM  WS-Moulding	Cover moulding  Cover moulding  Cover moulding upper  Clip 2102 100 Clip 2103 101	BC1M 50 6AXB  BC1M 50 6AXB  B01A 50 601B  B01A 50 9H3B B01A 50 9H4B	1 1 2 2	1 1 10	

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
5	·05 –						
Part No.	30 401 8 13 1	WS-Moulding OEM	Cover moulding	C235 50 601	1	1	
<b>&gt;</b>	5168ASMV						_ \
Part No.	30 401 8 13 2	WS-Moulding	Cover moulding	C235 50 601	1	1	
	5168ASMV1	J					
→ See Sens	sors page 172.	I		1			
626 I Sec							
	<b>30 141 8 14 1</b> 5113AKCH	WS-Clip kit	Clip 2103 206	8545 50 609	20 •	20	
Scan-No.							(.)
→ Recomme	ended foam rubber 5 007-15.						
626 II Co							A. SXex. Y. XeX.
	<b>30 144 8 14 1</b> 5122AKCS	WS-Clip kit	Clip 2103 004 Clip 2303 002	H001 50 609 G030 50 925	14 ● 8 □		<i>-</i>
Scan-No.			Clip 2303 009	G030 50 6A9	5 ×		/
→ Recomme	ended foam rubber 5 007-15.						
1		1	1	1		1	
626 II Se		WC Olin Lii	Olin 0400 004	11004 50 000	4.1	0.7	/**********
	<b>30 143 8 14 1</b> 5123AKCH	WS-Clip kit	Clip 2103 004 Clip 2303 002	H001 50 609 G030 50 925	14 ● 8 □		
Scan-No.			Clip 2303 009	G030 50 6A9	5 X		\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.\.
→ Recomme	ended foam rubber 5 007-15.						
	edan/Estate	'87/'88 – '91					
Part No. Eurocode		WS-Moulding chrome	Cover moulding	6212 50 601A	1	1	/
Scan-No.							
Part No.	30 145 8 13 2	WS-Moulding black	Cover moulding with	GRY1 50 601AB	1	1	
Eurocode		OEM (rain channel)	rain channel	GRT1 30 001AB		1	
Scan-No.	1554-1	,					
Part No.	30 145 8 13 3	WS-Moulding black	Cover moulding without	GM60 50 601A	1	1	
Eurocode	5129ASMS	OEM	rain channel	acc cc cc2	_	-	
Scan-No.	1554-2 ended foam rubber 5 007-15.						
7 Recomme	ended toant rubber 5 007-15.	ı	I	1			
	oup <b>é FLH</b> '88 – '91 <b>30 146 8 13 1</b>	WC Mandaline had	On the second dispersion of the second	GJ52 50 601 A	1	4	
	5133ASMH	WS-Moulding black OEM	Cover moulding without rain channel	GJ52 50 601 A	1	1	\
Scan-No.							
Part No.	30 146 8 13 3	WS-Moulding black	Cover moulding with	GRY8 50 601 B	1	1	
	5133ASMHG	OEM (rain channel)	rain channel	GK10 30 001 B	_	1	
Scan-No.	1553-2						
Part No.	30 146 8 13 2	WS-Moulding chrome	Cover moulding	GJ51 50 601 A	1	1	
	5133ASMHC		, and the second				
Scan-No.	l 1553-1 ended foam rubber 5 007-15.						
	edan 4 doors '92 – '97 30 147 8 12 1	WC Moulding blook	Cover moulding	GTOH 50 6AXB	1	1	
	5141ASMS	WS-Moulding black OEM	Cover moulding	GIOU SO BAYR	1	1	
Scan-No.							
I → Recomme	ended foam rubber 5 007-15.	I	l	1		I	
	edan 4 doors US Version	'92 – '97					
	30 147 8 12 2	WS-Moulding chrome	Cover moulding	GAYN 50 6AXB	1	1	
Scan-No.	5141ASMSC 1791-1						/
	ended foam rubber 5 007-15.						-

MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Part No. Eurocode Scan-No.	dan 5 doors '92 – '98 30 149 8 13 1 5142ASMH 1792 nded foam rubber 5 007-15.	WS-Moulding OEM	Cover moulding	GTOA 50 6AXB	1	1	
626 V Se	dan 4/5 doors	·97 – 11/·99					
Part No.	<b>30 449 8 13 1</b> 5153AKMH	WS-Moulding kit OEM	Cover moulding Retainer left side Retainer right side	GE4T 50 601E GA2A 50 6B2 (OEM No.=kit, left + right)	1 1 1	3	
Eurocode	<b>30 449 8 13 2</b> 5153ASMHG nded foam rubber 5 007-15.	WS-Moulding OEM	Cover moulding with rain channel	GE4T 50 601E	1	1	
→ Recomme	nded toant tubber 5 007-15.	l	l	1		1	
Part No.	dan 4/5 doors 30 449 8 13 4 5153ASMH	12/'99 –'02 WS-Moulding 0EM	Cover moulding without rain channel	GG2M 50 601A	1	1	
626 V Est							
Eurocode	<b>30 450 8 13 1</b> 5156ASMEG nded foam rubber 5 007-15.	WS-Moulding OEM	Cover moulding with rain channel	G14S 50 601B	1	1	
626 V Est	tate 11/'99 – '02						
Part No.	30 450 8 13 2 5156ASME	WS-Moulding OEM	Cover moulding without rain channel	G18K 50 601A	1	1	
6 Sedan/	Estate '02 –						
Eurocode	<b>30 452 8 13 1</b> 5164ASMS ors page 172.	WS-Moulding	Cover moulding	GJ6A 50 601C	1	1	
Demio	·98 – '03						
Part No. Eurocode	<b>30 805 8 13 1</b> 5157ASMV	WS-Moulding	Cover moulding	D201 50 601	1	1	
	<b>30 805 8 16 1</b> 5157AKSV	WS-Fastener kit OEM	Clip 610 3010	D201 50 797	7 <b>X</b>	7	××××××
MPV I	·95 – 9/'99						
Part No.	<b>30 801 8 13 1</b> 5152ASMVT	WS-Moulding upper	Cover moulding upper	8AL2 50 6A0A	1	1	•ו•ו•ו
	<b>30 801 8 14 1</b> 5152AKCV	WS-Clip kit	Clip 2103 010 Clip 2403 017 Clip 2403018	B092 50 609 LA01 50 6A8A LA01 50 6A9A	8 ● 6 □ 4 X	18	
MPV II	10/'99 –						
	<b>30 803 8 13 1</b> 5160ASMV	WS-Moulding	Cover moulding	LC62 50 601B	1	1	
MX 3	'91 – '98						
Eurocode Scan-No.	<b>30 162 8 12 1</b> 5140ASMC 1786 nded foam rubber 5 007-15.	WS-Moulding OEM	Cover moulding	E040 50 601B	1	1	
MX 5 I	'90 – '98						
Part No.	<b>30 161 8 13 1</b> 5138AKMT	WS-Installation kit	Cover moulding Retainer upper	NAY1 50 601 NAO1 50 894	1	2	
Part No.	30 161 8 16 1	Fastener kit	Fastener 6103 001	NA01 50 797	2 +	7	• • • • • •
Eurocode Scan-No.	5138AKCT		Fastener 6103 002	B455 50 796	5 💠		

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	MX 5 II	·98 – ·05						
	Part No.	30 160 8 13 1	WS-Moulding	Cover moulding	NA01 50 601A	1	1	
		5138ASMTT1H profile 5 001 applicable.						
-	MX 5 III	·05 –						
×	Part No.	30 260 8 13 1	WS-Moulding	Cover moulding	NE51 50 601A	1	1	
Z	Eurocode	5170ASMT						
	MX 6	·91 – ·97						
	Part No. Eurocode	<b>30 165 8 13 1</b> 5143ASMC	WS-Moulding OEM	Cover moulding	GAYR 50 6AXB	1	1	
	Scan-No.	1790						
	→ Recomme	ended foam rubber 5 007-15.						
	Premacy Part No.	'99 – '05 <b>30 825 8 13 1</b>	WS-Moulding	Cover moulding	C100 50 601B	1	1	
	Eurocode	5159ASMV		over modiumg	0100 00 0015	_	_	
	→ Fits also Cut to requi	Mazda E2000 VAN, Eurocode 516 red length.	TADIVIV.					
	RX 8	·03 <i>-</i>						
	Part No. Eurocode	<b>30 156 8 13 1</b> 5167ASMC	WS-Moulding OEM	Cover moulding	FE15 50 601	1	1	/
	Part No. Eurocode	<b>30 156 8 13 2</b> 5167ASMC1	WS-Moulding	Cover moulding	FE15 50 601	1	1	
	Tribute	·01 –	WO M. LU		5004 50 0044	4	4	
	Part No. Eurocode	<b>30 501 8 13 1</b> 5162ASMR	WS-Moulding	Cover moulding with Aluminium channel	EC01 50 601A	1	1	/
	→ Also for F	 ord Maverik Eurocode 3558ASMR						
	Xedos 6	·92 – ·99						
	Part No.	30 249 8 13 1	WS-Moulding OEM	Cover moulding	C100 50 6AXC	1	1	
	Eurocode Scan-No.	5144ASMS 1844						
	→ Recomme	ended foam rubber 5 007-15.						
	Xedos 9	·93 – ·98	WC Maulding OFM	Cover moulding includin	TAO 4 EO CAO 4	1	4	
	Eurocode	<b>30 251 8 13 1</b> 5146ASMS	WS-Moulding OEM	Cover moulding incl. clip	TA04 50 6A04	1	1	
	Scan-No.  → Recomme	1910 ended foam rubber 5 007-15.						
	мсс							
	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Smart Fo	<b>rTwo</b> '97 –						
	Part No.	08 901 8 13 1	WS-Moulding OEM	Cover moulding	C000680V007	1	1	
	Eurocode	5350ASMH						
	Smart Fo	r <b>Four</b> '04 –						
×	Part No.	08 910 8 13 1	WS-Moulding	Cover moulding	C000680V007	1	1	
Z		5359ASMH						
		<b>08 910 8 13 2</b> 5359ASMHB	WS-Moulding OEM	Moulding lower	4548360080	1	1	
		ors page 172.						
	Smart Ro							
		<b>08 905 8 13 1</b> 5355ASMT	WS-Moulding soft	Cover moulding	C0009406V003	1	1	
		ors page 172.						

#### MERCEDES

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	A-Class V	<b>V168</b> '97 – '04						
		31 001 8 13 1	WS-Moulding upper	Cover moulding upper	168 671 0136	1	1	
	Eurocode	5342ASMHT		J				
					100 070 0100			
		<b>31 001 8 13 2</b> 5342AKMHLR	WS-Moulding left +	A-Pillar moulding left	168 670 0108	1	2	
		ors page 172.	right OEM	A-Pillar moulding right	168 670 0208	1		
	* 000 00110	oro page 172.				'		
Ξ.		<b>V169/B-Class W245</b> '05 –						
<b>.</b>		31 003 8 14 1	WS-Clip kit	Clip black for A-Pillar Roof		10	10	0
N N	Eurocode	5358AKCH	(Cover moulding roof)	moulding				//
		I		I .			1	
	C-Class V	V202 Sedan / Estate	·93 – ·00					e n
	Part No.	31 325 8 13 3	WS-Moulding upper	Cover moulding upper	202 670 0022	1	1	\\
		5334ASMST1C	Anodic oxidated	metal Anodic oxidated				/ <del>·</del>
	Scan-No.	1865-1						//
	Part No.	31 325 8 13 4	WS-Moulding upper	Cover moulding upper	202 671 0730	1	1	
		5334ASMST	OEM	plastic	202 011 0100	_	_	
	Scan-No.	1865-2		•				
	→ See Sens	ors page 172.						
	Part No.	31 325 8 14 1	WC Clin kit OEM	Clin (A nillor) 2407004	201 609 0660	0 •	16	
		5334AKCSH	WS-Clip kit OEM	Clip (A-pillar) 3407004 Clip (roof moulding)	201 698 0660 201 988 4478	8 • 8 ×	10	
	Scan-No.			3407003	201 300 4410	0 ~		
	0.01							
		<b>V203 Sedan / Estate '</b> 00 – <b>31 329 8 13 1</b>	MC Moulding upper	Cover modulding was as	203 670 0539	1	4	
		5351ASMST	WS-Moulding upper OEM	Cover moulding upper	203 670 0539	1	1	
		ors page 172.	OEM .					
		<b>V203 Coupé</b> '01 –						
		31 332 8 13 1	WS-Moulding upper OEM	Cover moulding upper	203 670 0639	1	1	
		5352ASMCT ors page 172.	OEIVI					
	. 000 00110	0.0 page 1.2.	'	•				
		<b>V203 Coupé</b> '01 –						
		31 332 8 13 2	WS-Moulding upper	Cover moulding for glass	203 671 10530	1	1	_
		5352ASMCT1H ors page 172.	metal OEM	roof version				
	* 000 00110	010 page 112.	'		'			
	CLK W20	<b>8 Cabrio</b> '97 – '03						
		31 522 8 13 1	WS-Moulding upper	Cover moulding upper	208 670 0422	1	1	
		5341ASMTT	OEM					
	→ See Sens	ors page 172.						
			•	·	•			
	CLK W20							
		31 520 8 13 1	WS-Moulding upper	Cover moulding upper	208 670 0322	1	1	
		5341ASMCT ors page 172.	OEM	metal, anodic oxidated				
	7 Jee Jens	ors page 172.						
	CLK W20							
		31 523 8 13 1	WS-Moulding upper	Cover moulding upper	209 670 0622	1	1	
	Eurocoae	5353ASMCT	OEM	metal, anodic oxidated				
		•	•	·	•			
	E-Class V	<b>115 Sedan</b> '68 – '75						
		31 213 8 11 1	WS-Rubber	Weatherstrip with insert	115 671 0239	1	1	
		5315ASRS						/
	Scan-No.	0045						
- 1		1	1	T.		'	1	
	E-Class V	V123 Sedan/Estate	'76 – '82					
		37 611 8 11 1	WS-Rubber	Weatherstrip with insert	123 670 0039	1	1	
		5320ASRS						
	Scan-No.	0830						
- 1		I control of the cont	II.	I control of the cont	1	ı	I .	

#### MERCEDES

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
E-Class V	<b>/123 Sedan</b> '76 – '82						
	37 611 8 21 1	BL-Rubber OEM	Weatherstrip with insert	123 670 0239	1	1	
Eurocode Scan-No.	5320BSRS 0830-1						
Scall-No.	0630-1						
E Oless V	<b>14.02 F</b> -1-1- (70, 100)						
	<b>123 Estate</b> '76 – '82 <b>31 609 8 21 1</b>	BL-Rubber OEM	Weatherstrip with insert	123 740 0656	1	1	
Eurocode	5320BSRE	22.10333.02.11	Wednesday was meet	120 / 10 0000	-	_	
Scan-No.	0830-2						
		T		1			1
	/124 Sedan/Coupé	'85 –'94					<i>₽</i> 3
	<b>31 601 8 13 1</b> 5328ASGSB	WS-Retainer moulding lower OEM	Moulding lower		1	1	\ <u></u>
Scan-No.		lower o'Em					//
Dout No.	31 601 8 14 1	WS-Clip kit	Clip (A-Pillar) 3407004	201 698 0660	8 •	16	
	5328AKCSH	WS-Clip Kit	Clip (roof moulding)	201 988 4478	8 <b>x</b>	10	
Scan-No.	1394-2		3407003				
1		I	l	I	l	I	
	<b>124 Estate</b> '85 –'94						
	<b>31 603 8 21 1</b> 5328BSRE	BL-Rubber OEM	Weatherstrip with insert	124 740 0056	1	1	
Scan-No.							
E-Class V	<b>/210</b>						
	31 701 8 13 2	WS-Moulding upper	Cover moulding upper metal	210 670 0922	1	1	_
	5337ASMST						
→ See Sens	ors page 172.	I	I				
	/210 Estate '96 – '03		-				
	<b>31 703 8 23 1</b> 5337BSME	BL-Moulding OEM	Cover moulding	210 745 0280	1	1	/==\
20.00000	000.202						
F.Class V	/211 Sedan Glass roof	·02 –					
	31 705 8 13 1	WS-Moulding upper	Cover moulding for glass	211 670 0622	1	1	
	5354ASMST	metal OEM	roof version				
→ See Sens	ors page 172.	I		I	l	1	
G-Class V							
	<b>75 461 8 11 1</b> 5327ASRR	WS-Rubber OEM	Weatherstrip without insert	460 671 0320	1	1	/
Scan-No.							
1			l		l	I	
G-Class V	<b>V463</b> 09/'97 – '06						
	75 461 8 11 2	WS-Rubber OEM	Weatherstrip without insert	460 671 0220	1	1	-
	5327ASRR1H ors page 172.						
SLK I R1	<b>70</b> '96 – '04 <b>31 518 8 13 1</b>	WS-Moulding upper	Cover moulding upper	170 671 0330	1	1	
	5339ASMTT	OEM upper	oover moulding upper	TIO 01T 0990	*	_	
SLK II R1	<b>71</b> '04 –						
11	31 519 8 13 1	WS-Moulding upper	Cover moulding upper	171 671 0030	1	1	
	5339ASMTT ors page 172.	OEM					
207/307			Weatherstein with and in a	604 674 0000	1	1	
	<b>75 322 8 11 1</b> 5419ASRV	WS-Rubber	Weatherstrip without insert	601 671 0020	1	1	111
381	'74 – '89						
Part No.	75 311 8 11 1	WS-Rubber	Weatherstrip without insert	381 671 0020	1	1	
Eurocode	5416ASRL						1
I	l	I	I	I	I	I	

#### **MERCEDES**

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
381 II	'89 – '97						
Part No.	75 312 8 11 1	WS-Rubber OEM	Weatherstrip without insert	381 671 0039	1	1	
Eurocode	5416ASRL1						100
Scan-No.	0743-1						
Part No.	75 312 8 11 2	WS-Rubber	Weatherstrip without insert	381 671 0039	1	1	
Eurocode	5416ASRL2						
Scan-No.	0743-2						
314	'65 – '82						
Part No.	75 261 8 11 1	WS-Rubber	Weatherstrip without insert	314 671 0320	1	1	
Eurocode	5405ASRL						530
Scan-No.	0527						
670	·86 –						
Part No.	75 266 8 11 1	WS-Rubber	Weatherstrip without insert	670 671 0020	1	1	
Eurocode	5424ASRL						100
Scan-No.	1467						
673	·83 – ·93						
	75 264 8 11 1	WS-Rubber OEM	Weatherstrip without insert	673 671 0020	1	1	
Eurocode	5422ASRL						
Scan-No.	1239						
				I			
Actros	·96 –						
Part No.	75 315 8 11 1	WS-Rubber	Weatherstrip without insert	941 671 0120	1	1	
Eurocode	5429ASRL						
Atego/Ax							
		WC Moulding	Cover moulding	072 670 0020T	1	1	
Part No.	75 364 8 12 2	WS-Moulding	Cover moulding	973 670 0039T	1	1	
Part No.		WS-Moulding	Cover moulding	973 670 0039T	1	1	
Part No. Eurocode	<b>75 364 8 12 2</b> 5430AKML	WS-Moulding	Cover moulding	973 670 0039T	1	1	
Part No. Eurocode	<b>75 364 8 12 2</b> 5430AKML '05 –	-					
Part No. Eurocode  Atego II Part No.	75 364 8 12 2 5430AKML '05 – 75 364 8 12 3	WS-Moulding WS-Moulding	Cover moulding  Cover moulding	973 670 0039T 973 671 0120	1	1	
Part No. Eurocode  Atego II Part No.	<b>75 364 8 12 2</b> 5430AKML '05 –	-					
Part No. Eurocode  Atego II Part No. Eurocode	75 364 8 12 2 5430AKML '05 – 75 364 8 12 3 5430ASML	-					
Part No. Eurocode  Atego II Part No. Eurocode	75 364 8 12 2 5430AKML '05 – 75 364 8 12 3 5430ASML uck/Citaro Bus '98 –	WS-Moulding	Cover moulding	973 671 0120	1	1	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr Part No.	75 364 8 12 2 5430AKML  '05 –  75 364 8 12 3 5430ASML  uck/Citaro Bus 75 211 8 10 1	WS-Moulding WS-Rubber left and	Cover moulding  Cover moulding left		1		
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr Part No.	75 364 8 12 2 5430AKML '05 – 75 364 8 12 3 5430ASML uck/Citaro Bus '98 –	WS-Moulding	Cover moulding	973 671 0120	1	1	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr Part No. Eurocode	75 364 8 12 2 5430AKML '05 – 75 364 8 12 3 5430ASML uck/Citaro Bus 75 211 8 10 1 5432ASML	WS-Moulding WS-Rubber left and right OEM	Cover moulding  Cover moulding left	973 671 0120	1	1	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr. Part No. Eurocode	75 364 8 12 2 5430AKML '05 – 75 364 8 12 3 5430ASML uck/Citaro Bus 75 211 8 10 1 5432ASML '88 – '96	WS-Moulding WS-Rubber left and right OEM	Cover moulding  Cover moulding left Cover moulding right	973 671 0120 957 671 10020	1 1 1	2	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr Part No. Eurocode  MB 100 Part No.	75 364 8 12 2 5430AKML  '05 –  75 364 8 12 3 5430ASML  '98 –  75 211 8 10 1 5432ASML  '88 – '96	WS-Moulding WS-Rubber left and right OEM	Cover moulding  Cover moulding left	973 671 0120	1	1	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr. Part No. Eurocode  MB 100 Part No. Eurocode	75 364 8 12 2 5430AKML  '05 –  75 364 8 12 3 5430ASML  '98 –  75 211 8 10 1 5432ASML  '88 – '96  75 330 8 13 1 5423ASMVT	WS-Moulding WS-Rubber left and right OEM	Cover moulding  Cover moulding left Cover moulding right	973 671 0120 957 671 10020	1 1 1	2	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr. Part No. Eurocode  MB 100 Part No. Eurocode Scan-No.	75 364 8 12 2 5430AKML  '05 –  75 364 8 12 3 5430ASML  '98 –  75 211 8 10 1 5432ASML  '88 – '96  75 330 8 13 1 5423ASMVT 1578	WS-Moulding WS-Rubber left and right OEM	Cover moulding  Cover moulding left Cover moulding right	973 671 0120 957 671 10020	1 1 1	2	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr Part No. Eurocode  MB 100 Part No. Eurocode Scan-No.  Butyl glued	75 364 8 12 2 5430AKML  '05 –  75 364 8 12 3 5430ASML  '98 –  75 211 8 10 1 5432ASML  '88 – '96  75 330 8 13 1 5423ASMVT	WS-Moulding WS-Rubber left and right OEM	Cover moulding  Cover moulding left Cover moulding right	973 671 0120 957 671 10020	1 1 1	2	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr Part No. Eurocode  MB 100 Part No. Eurocode Scan-No.  Butyl glued	75 364 8 12 2 5430AKML  '05 –  75 364 8 12 3 5430ASML  '98 –  75 211 8 10 1 5432ASML  '88 – '96  75 330 8 13 1 5423ASMVT 1578  windscreen Totalseal (Bostik able Part No.: 13 36 12 03.	WS-Moulding WS-Rubber left and right OEM WS-Moulding upper	Cover moulding  Cover moulding left Cover moulding right	973 671 0120 957 671 10020	1 1 1	2	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr. Part No. Eurocode  MB 100 Part No. Eurocode Scan-No. Butyl glued 0 mm) reusa	75 364 8 12 2 5430AKML  '05 –  75 364 8 12 3 5430ASML  '98 –  75 211 8 10 1 5432ASML  '88 – '96  75 330 8 13 1 5423ASMVT 1578  windscreen Totalseal (Bostik able Part No.: 13 36 12 03.	WS-Moulding WS-Rubber left and right OEM WS-Moulding upper	Cover moulding  Cover moulding left Cover moulding right	973 671 0120 957 671 10020	1 1 1	2	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr Part No. Eurocode  MB 100 Part No. Eurocode Scan-No. Butyl glued 10 mm) reusa  Sprinter I Part No.	75 364 8 12 2 5430AKML  '05 –  75 364 8 12 3 5430ASML  '98 –  75 211 8 10 1 5432ASML  '88 – '96  75 330 8 13 1 5423ASMVT 1578  windscreen Totalseal (Bostik able Part No.: 13 36 12 03.  High  '95 – '06	WS-Moulding WS-Rubber left and right OEM WS-Moulding upper	Cover moulding  Cover moulding left Cover moulding right  Cover moulding upper	973 671 0120 957 671 10020 631 987 0556	1 1 1	1 1	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr Part No. Eurocode  MB 100 Part No. Eurocode Scan-No. Butyl glued 10 mm) reusa  Sprinter I Part No.	75 364 8 12 2 5430AKML  '05 –  75 364 8 12 3 5430ASML  '08 – '98 –  75 211 8 10 1 5432ASML  '88 – '96  75 330 8 13 1 5423ASMVT 1578 windscreen Totalseal (Bostik able Part No.: 13 36 12 03.  High '95 – '06  75 333 8 12 1 5427ASMV	WS-Moulding WS-Rubber left and right OEM WS-Moulding upper	Cover moulding  Cover moulding left Cover moulding right  Cover moulding upper	973 671 0120 957 671 10020 631 987 0556	1 1 1	1 1	
Part No. Eurocode  Atego II Part No. Eurocode  Econic Tr. Part No. Eurocode  MB 100 Part No. Eurocode Scan-No. Butyl glued 0 mm) reusa  Sprinter I Part No. Eurocode Scan-No.	75 364 8 12 2 5430AKML  '05 –  75 364 8 12 3 5430ASML  '08 – '98 –  75 211 8 10 1 5432ASML  '88 – '96  75 330 8 13 1 5423ASMVT 1578 windscreen Totalseal (Bostik able Part No.: 13 36 12 03.  High '95 – '06  75 333 8 12 1 5427ASMV	WS-Moulding  WS-Rubber left and right OEM  WS-Moulding upper	Cover moulding  Cover moulding left Cover moulding right  Cover moulding upper	973 671 0120 957 671 10020 631 987 0556	1 1 1	1 1	

#### **MERCEDES**

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS	. UNIT	
	Eurocode Scan-No.	75 335 8 12 1 5426ASMV 1971 ng guarantees better fitting of the	WS-Moulding OEM windscreen.	Cover moulding	901 671 0320	1	1	0
N N	Sprinter I Part No. Eurocode → See Sens	'06 – <b>75 336 8 13 1</b> 5439ASMV ors page 172.	WS-Moulding OEM	Cover moulding	906 671 0020	1	1	0
		<b>Class</b> '96 – '03 <b>75 340 8 13 1</b> 5428ASMV	WS-Moulding upper OEM	Cover moulding upper incl. Butyl	638 671 0021	1	1	×××××××××××××××××××××××××××××××××××××××
		<b>75 340 8 13 2</b> 5428AKMVLR	WS-Moulding left + right OEM	Cover moulding right Cover moulding left	638 698 0079 638 698 0179	1 1	2	0 0 0 0
		<b>75 340 8 14 2</b> 5428AKCVS	WS-Clip kit OEM	Clip 3407 001 (black) Clip 3407 002 (white)	638 984 0861 638 984 0961	4 (4 )	.   •	
		<b>75 340 8 14 3</b> 5428AKCVS1	WS-Clip kit OEM	Clip 3407 001 (black) Clip 3407 002 (white)	638 984 0861 638 984 0961	5 <b>(</b> 5 <b>)</b>	- 10	
		<b>75 340 8 16 1</b> 5428AKCV	Fastener kit OEM, Dealership	Fastener 3407 005	638 627 0008	5 4	5	
O Z	Eurocode	<b>ano</b> '03 – <b>75 343 8 13 2</b> 5438ASMV ors page 172.	WS-Moulding	Cover moulding	639 671 1220	1	1	0

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT

Calibilia	<u> </u>						
	<b>32 270 8 13 1</b> 5646ASMHT	WS-Moulding upper soft	Cover moulding upper	MB 944 691	1	1	
→ Also for Vo	olvo S40/V40 Eurocode 8824ASN	IST and Space					/(
Star Eurocoo	de 5655ASMVT.						
See clips pa	ge 119.						
	040						
Colt II + L	ancer <b>C10</b> '84 – '87						
Part No.	32 213 8 13 1	WS-Installation kit	Cover moulding upper	MB 346 297	1	3	
Eurocode	5622AKMH	(black)	Cover moulding right	MB 384 677	1		/
Scan-No.	1354		Cover moulding left	MB 384 678	1		
→ Recomme	nded foam rubber 5 007-15/5 00	)3.					
Colt II + L	ancer <b>C10</b> '84 – '87						
Part No.	32 213 8 13 2	WS-Installation kit	Cover moulding upper	MB 346 300	1	3	
Eurocode	5622AKMHC	(chrome)	Cover moulding right	MB 384 676	1		/
Scan-No.	1354-1		Cover moulding left	MB 384 680	1		
→ Recomme	nded foam rubber 5 007-15/5 00	03.				T	

MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Part No. Eurocode Scan-No.	<b>32 215 8 13 1</b> 5632ASMHT	WS-Moulding upper	Cover moulding upper	MB 479 652	1	1	
Scan-No. → Recomm	32 215 8 14 1 5632AKCH 1591-1 ended foam rubber 5 007-15/5 00 tsubishi Lancer Scan-No. 1590.	WS-Clip kit (Sc.1590)	Clip 2104 015	MB 479 817	8 •	8	
Eurocode Scan-No  → Also for Upper cove	32 217 8 13 1 5641ASMHT	.6 '95 applicable.	Cover moulding upper	MB 696 789	1	1	
Part No. Eurocode  Part No. Eurocode	ancer CJO '96 – '04 32 218 8 13 1 5647ASMHT 32 218 8 14 1 5647AKCH nended foam rubber 5 007-15/5 0	WS-Moulding upper WS-Clip kit	Cover moulding upper Clip 2204 006	MB 191 589 MB 880 455	1 8 •	1 8	
Part No.	<b>Z3 3 doors</b> 03/'05 – 32 220 8 13 1 5676ASMHT	WS-Moulding upper OEM	Cover moulding upper	MR 957 106	1	1	
THE STATE OF THE S	doors 06/'04 – 32 219 8 13 1 5672ASMHT	WS-Moulding upper OEM	Cover moulding upper	MR 957 106	1	1	
Part No. Eurocode Scan-No.	<b>32 156 8 13 1</b> 5640ASMCT	WS-Moulding upper	Cover moulding upper	MB 479 089	1	1	
Eurocode Scan-No.	ended foam rubber	WS-Clip kit	Clip 2104 007 Clip 2104 006	MB 551 717 MB 479 449	6 □ 2 •	8	
Part No. Eurocode Scan-No. → Also for No. 1618.	30 4 doors '88 – '92 32 057 8 14 1 5630AKCS 1573 Witsubishi Galant E30 HTB Scan- Mouldings reusable. Recommen- ubber 5 007-15/5 003.	WS-Clip kit	Clip 2204 004 Clip 2304 001	MB 567 120 MB 198 536	6 ● 14 □	20	
Part No. Eurocode Scan-No. → Also for No. 1618.	30 5 doors '88 – '92 32 059 8 14 1 5634AKCH 1618 Mitsubishi Galant E30 HTB Scan- Mouldings reusable. Recommen- ubber 5 007-15/5 003.	WS-Clip kit	Clip 2204 004 Clip 2304 001	MB 567 120 MB 198 536	6 ● 14 □	20	
Eurocode Scan-No	32 357 8 13 1 5643ASMH	WS-Moulding black	Cover moulding	MB 109 829	1	1	

	MODEL	YEAR	TVOE	COMPONENTS	ODIOINAL NO	PCS.	UNIT	
			TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNII	
	Eurocode	<b>10</b> '97 – <b>32 360 8 13 1</b> 5649ASMST ended foam rubber 5 007-15/5 00	WS-Moulding upper	Cover moulding upper	MR 192 674	1	1	
	Grandis	·04 <i>-</i>						/• ×\
	Part No. Eurocode	<b>32 006 8 13 1</b> 5673ASMVT	WS-Moulding upper OEM	Cover moulding upper	MR 957 625	1	1	
NEW		<b>32 006 8 14 1</b> 5673AKCV	WS-Clip kit OEM	Clip Clip Clip Clip Clip Clip Clip Clip		2 X 2 0 1 1 1 1 0 1 2 0 1 2 2 1 1 2 2 1 2 2 2 2 2 2 2 2 2 2 2 2	22	
	L200 Pic	<b>k up</b> '87 – '96						
	Part No. Eurocode Scan-No.	<b>57 053 8 14 1</b> 5628AKCP	WS-Clip kit	Clip 2304 001	MB 198 536	14 •	14	
	L200 Pic	<b>k up</b> '96 –						
	Part No.	<b>57 055 8 13 1</b> 5650ASMP	WS-Moulding black OEM	Cover moulding	MR 401 336	1	1	
		<b>57 055 8 13 2</b> 5650ASMPC	WS-Moulding chrome OEM	Cover moulding	MR 401 337	1	1	
	L300 II	·87 – ·97						
	Part No.	<b>32 253 8 14 1</b> 5629AKCV	WS-Clip kit	Clip 2304 001 Clip 2404 002	MB 198 536 MB 565 771	19 <b>X</b> 2 ●	21	
	Lancer C	<b>60 Sedan/HTB</b> '88 - '92						
	Part No.	<b>32 112 8 13 1</b> 5633ASMHT	WS-Moulding upper black	Cover moulding upper	MB 479 970	1	1	
		<b>32 112 8 13 2</b> 5633ASMHTC 1590-2	WS-Moulding upper chrome	Cover moulding upper	MB 479 971	1	1	
		<b>32 112 8 14 1</b> 5633AKCHT 1590	WS-Clip kit	Clip 2104 015	MB 479 817	8 •	8	
	Lancer C	AO Sedan/Estate '93-'96						_
	Part No.	<b>32 116 8 13 1</b> 5642ASMHT	WS-Moulding	Cover moulding upper	MB 696 789	1	1	
	Lancer So	edan/Estate '03 –						∆/ \^
ī	Part No.	<b>32 120 8 13 1</b> 5670ASMST	WS-Moulding upper	Cover moulding upper	MR 520 285	1	1	
≥	Part No.	32 120 8 14 1	WS-Clip kit A-Pillar	Clip		4 X	16	N N
NEW		5670AKCSS	ОЕМ	Clip Clip Clip Clip Clip		4		

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	MODEL	IEAN	1172	COMPONENTS	ORIGINAL NO.	F03.	UNIT	
	Outlande	r '03 –						/
	Part No.	<b>32 001 8 13 1</b> 5668ASMRT	WS-Moulding upper OEM	Cover moulding	MR 573 809	1	1	
		<b>32 001 8 13 2</b> 5668ASMRT1	WS-Moulding upper	Cover moulding	MR 573 809	1	1	
	Part No.	32 001 8 14 1	WS-Clip kit OEM	Clip		2 •	16	
NEW	Eurocode	5668AKCR		Clip Clip Clip Clip Clip Clip		2 □ 4 ■ 2 △ 2 ▲ 2 •		
	Pajero I	·82 – ·90						
		<b>32 231 8 11 1</b> 5621ASRR 1307-1	WS-Rubber	Weatherstrip without insert	MB 198 775	1	1	
	Pajero I	'82 – '90						
		<b>32 231 8 11 2</b> 5621ASRRC 1307	WS-Rubber	Weatherstrip with insert	MB 198 776	1	1	
	Pajero II	·91 – ·00						
		<b>32 230 8 13 1</b> 5637ASMRT 1760	WS-Moulding upper metal	Cover moulding upper	MB 645 728	1	1	X X X X X
		<b>32 230 8 13 2</b> 5637ASMRB 1760-2	WS-Moulding lower	Cover moulding lower	MB 683 750	1	1	
	Eurocode Scan-No.	<b>32 230 8 14 1</b> 5637AKCR 1760-1 ended foam rubber 5 007-15/5 00	WS-Clip kit	Clip 2304 001	MB 198 536	14 ×	14	
	Deleve III	400						
	Pajero III Part No.	'00 – 32 536 8 13 1	WS-Moulding OEM,	Cover moulding	MR 557 009	1	1	
		5661ASMR	Dealership	ooran maanang				
	Pajero Pi							×
		<b>32 530 8 13 1</b> 5660ASMRT	WS-Moulding upper	Cover moulding upper	MR 447 999	1	1	·
		<b>32 530 8 13 2</b> 5660ASMRB page 124.	WS-Moulding lower OEM, Dealership	Cover moulding lower	MR 351 444	1	1	
	Pajero Sp	oort '99 –						
	Part No.	<b>32 528 8 13 1</b> 5650ASMR	WS-Moulding OEM, Dealership	Cover moulding	MR 274 057	1	1	
						1	'	
	Eurocode Scan-No.	<b>32 240 8 13 1</b> 5645ASMV	WS-Moulding	Cover moulding	MR 192 210	1	1	
		· ·						
	Eurocode Scan-No.	<b>32 238 8 13 1</b> 5638ASMV 1766	WS-Moulding	Cover moulding	MB 667 211	1	1	
		ile 5 037 applicable. ded foam rubber 5 007-15/5 003.						

IVIII	OUBISHI						
MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
WODEL	ILAN	1172	COMPONENTS	ORIGINAL NO.	F 03.	ONII	
Space St							
	32 440 8 13 1	WS-Moulding upper	Cover moulding upper soft	MB 944 691	1	1	
	5655ASMVT	 					
	litsubishi Carisma Eurocode 5646	SASMH1 and Volvo					
	urocode 8824AKSS.						
See clips pa	age 124.			1	1	1	
Space Wa	agon l '84 – '90						c1
Part No.	32 235 8 13 1	WS-Installation kit	Cover moulding left	MB 292 000	1	3	
Eurocode	5623AKMV		Cover moulding right	(OEM Nr. kit)	1		
Scan-No.	1349		Cover moulding upper		1		"
→ Recomme	ended foam rubber 5 007-15/5 00	03.		1			
C W/							
Space Wa		WOM III		MD 007 040	4	4	
	32 236 8 13 1	WS-Moulding	Cover moulding	MB 667 210	1	1	/
	5639ASMV						
Scan-No.							
→ Univ. proi 5 007-15/5	ile 5037 applicable. Recommend	ed toam rubber					
5 007-15/5	0003.			1	1	1	
Space Wa	<b>agon III</b> 09/'98 – '04						
	32 237 8 13 1	WS-Moulding upper	Cover moulding upper	MR 293 962	1	1	
Eurocode	5658ASMVT						
	I	I			I	1	
NISS	AN						
M 199	AIN						
MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
III O D L L	IEAN		OUM! OREN!O	ORIGINAL NO.	100.	Oitti	
	<b>13 Coupé</b> '91 – '94						/×
	18 353 8 13 1	WS-Moulding upper	Cover moulding upper	72752 61Y00	1	1	×
Eurocode	5985ASMCT						/3/
Scan-No.	1698						-
350Z	·03 –						
	18 001 8 10 1	WS-Moulding kit	Cover moulding upper	72752 CD000	1	2	
	6027AKMCT	vv 3-iviouiuifig Kit	Cover moulding upper	72752 CD000 72725 CD000	1	2	
			Retainer upper	12125 00000	1		
→ See dam	foam rubber on roll page 108.	I and the second	I	I	1	1	
Almera N	<b>15</b> '95 – '00						
	18 451 8 13 2	WS-Moulding kit	Cover moulding upper	72752 0N000	1	2	
rait No.							

Eurocode Scan-No.		WS-Moulding upper	Cover moulding upper	72752 61Y00	1	1	X X X
350Z	·03 –						
Part No. Eurocode	<b>18 001 8 10 1</b> 6027AKMCT foam rubber on roll page 108.	WS-Moulding kit	Cover moulding upper Retainer upper	72752 CD000 72725 CD000	1	2	
Almera N	<b>15</b>						
	<b>18 451 8 13 2</b> 6001AKMH 2004-1	WS-Moulding kit	Cover moulding upper Retainer upper	72752 0N000 72725 0N000	1	2	
	<b>18 451 8 13 1</b> 6001ASMHT 2004	WS-Moulding upper	Cover moulding upper	72752 0N000	1	1	
Eurocode Scan-No.	<b>18 451 8 13 3</b> 6001ASGHT 2004-2 Inded foam rubber 5 007-15/5 00	WS-Retainer upper OEM	Retainer upper	72725 0N000	1 ****	1	
Almera N	<b>16 3/5 doors</b> '00 –						
	<b>18 454 8 13 1</b> 6007ASMHT	WS-Moulding upper	Cover moulding upper	72752 BM400	1	1	
Almera Ti	<b>no</b> 08/'00 –						
Part No.	<b>18 458 8 13 1</b> 6014ASMVT	WS-Moulding upper	Cover moulding upper	72751 BU 400	1	1	

#### NISSAN

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Bluebird 1		WO I I II II I I I I I		70750 0 4000	4	0	
Eurocode	<b>18 140 8 13 1</b> 5969AKMHC	WS-Installation kit chrome	Inner moulding Retainer	72752 D4002 72725 D4000	1	2	
Scan-No.	1466 ile 5 002/5 021 applicable.						"
	led foam rubber 5 007-15/5 003.						
Interstar							
	66 143 8 13 1	WS-Moulding	Cover moulding	82001 06346	1	1	/
	6023ASMV Opel Movano, Renault Master and I	ı veco Daily II.					
Maxima I	·89 – '95						<i>s</i> ==3
	18 140A 8 13 1	WS-Moulding kit upper	Inner moulding upper	72752 86E00	1 -	2	
Eurocode Scan-No.	5979AKMS	black	Retainer upper	72725 85E00	1 🖾		/(
Scall-No.	1009						
Maxima I	'95 – '00						
	<b>18 240 8 13 1</b> 5996AKMST	WS-Moulding kit black	Inner moulding upper	72751 40400	1	2	//
	1 5996AKMS1 ended foam rubber 5 007-15/5 00	ı )3.	Retainer upper	72725 40410	1 🚃		
	,						
Maxima I	'00 – '04						
	18 241 8 13 1	WS-Moulding kit upper	Cover moulding upper	72752 2Y000 72725 2Y000	1	1-	
Eurocode	6015AKMST		Retainer	12125 21000	1 📟		
Micra K1	.0 '83 – '91						
	18 330 8 11 1	WS-Rubber	Weatherstrip without insert	72710 01B00	1	1	
Eurocode Scan-No.	5956ASRH						
ooun no	1201						
Part No.	18 330 8 21 1	BL-Moulding	Weatherstrip without insert	90350 01B19	1	1	
Eurocode Scan-No.	5956BSMH						
Scall-No.	1201-1						
Micra K1	<b>1</b> '92 – '02						
	18 430 8 12 1	WS-Moulding	Cover moulding	PMA Version	1	1	
Scan-No.	5988ASMH 1832-6		(one-piece moulding)				
	e moulding for easier fitting.						
Micra K1							
	<b>18 432 8 13 1</b> 6011ASMH	WS-Moulding	Cover moulding	72750 AX600	1	1	
	ors page 172.	ı					
- Micra CC	·05 –						
<u> </u>	18 434 8 13 1	WS-Moulding OEM	Cover moulding	72750 BC100	1	1	
Eurocode	6039ASMT						
Murano	· ·05 –						
	66 331 8 13 2	WS-Side moulding kit	Side moulding left	72763 CA000	1	2	
	6032AKMRL	OEM	Retainer left	72725 CA010	1		//
Z Part No.	66 331 8 13 3	WS-Side moulding kit	Side moulding right	72762 CA000	1	2	
Eurocode	6032AKMRR	OEM	Retainer right	72725 CA010	1		
→ See uppopage 103.	er self adhesive profile 5051-5						
- Note	·06 <i>-</i>						
Part No.	18 041 8 13 1	WS-Moulding	Cover moulding		1	1	<b> </b>
Eurocoue	6041ASMV ors page 172.	I					
- See sens	ora page 112.		I control of the cont	I .	1	1	

#### NISSAN

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Pathfinde	e <b>r l</b> '97 – '05						
Part No.		WS-Moulding kit	Cover moulding upper	72752 0W000		2	
Eurocode	6005AKMRT		Retainer upper	72725 0W000	1 🚃		
					'		
Patrol I	·81 – ·97						
Part No. Eurocode	<b>66 041 8 11 1</b> 5957ASRR	WS-Rubber	Weatherstrip without insert	72710 06J00	1	1	/
Scan-No.	1206						
Patrol I	·81 – ·97						
Part No.	66 041 8 11 2	WS-Rubber	Weatherstrip with insert	72710 08J10	1	1	
Eurocode Scan-No.	5957ASRR1 1206-1						
Scall-No.	1200-1						
Patrol II	·00						
Patrol II	'98 – 66 045 8 13 1	WS-Moulding OEM	Cover moulding	72751 VB000	1	1	
Eurocode	6006ASMR		0	1 1 1 1 1 1			/
					I		
Prärie M1	<b>LO</b> '83 – '87						
	18 335 8 13 1	WS-Installation kit	Inner moulding	72752 04R00	1	2	
Eurocode Scan-No.	5959AKME		Retainer	72616 P0125	1 📟		
	ended foam rubber 5 007-15/5 00	03.					-
Drörio Ma	11 (89 (06						
Prärie M1 Part No.	11 '88 - '96 18 336 8 13 1	WS-Moulding upper	Inner moulding upper	72752 30R01	1	2	
	5978AKME	The meaning appear	Retainer upper	72725 30R01	1 ****	_	//
Scan-No.							7
→ Reconnine	ended foam rubber 5 007-15/5 00						
Primasta							
	<b>66 134 8 13 1</b> 6022ASMVT	WS-Moulding upper	Cover moulding upper	77003 13531	1	1	
	enault Trafic and Opel Vivaro.						
WS-Clip 400	00307 applicable.						
Primera F	<b>10 Sedan</b> '90 – '96						
	18 331 8 13 2	WS-Moulding kit upper		72752 90J00		2	
Eurocode Scan-No.			Retainer upper	72752 50J00	1 🚃		//
- Countrion	17101						4
	18 331 8 13 1	WS-Moulding upper	Inner moulding upper	72752 90J00	1	1	
Scan-No.	5981ASMHT 1718						
		I					
	<b>18 331 8 13 3</b> 5981ASGS	WS-Retainer upper	Retainer upper	72725 50J00	1 🚃	1	
	mouldings reusable.	-					
Recommend	ded foam rubber 5 007-15/5 003	•					
			 	I	<u> </u>	I	
	<b>V10 Estate</b> '90 – '97						/o and o
	<b>18 333 8 13 1</b> 5983ASMET	WS-Moulding upper	Inner moulding upper	72752 70N00	1	1	
Scan-No.							
		I					
	18 333 8 13 2	WS-Retainer upper OEM	Retainer upper	72725 70N00	1 🚃	1	
Furncedo	1 598 345 (31)		i e e e e e e e e e e e e e e e e e e e	I .	1	1	
<b>Eurocode</b> → Side moul	dings reusable.	I OLIN					
→ Side moul							

#### NISSAN

/IODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	44						
Primera P							1 0 10 × 0 × 1 × 0 × 0 × 1
	18 531 8 11 1	WS-Moulding metal	Cover moulding upper	7251 2F000	1	8	- JAMANA
Eurocode	6002ASMHT	upper	incl. clips		7		
Dart No.	18 531 8 14 1	WS-Clip kit	Clip 2105 008	72826 01P00	6 ×	6	
	6002AKCH	W3-OIIP KIL	Clip 2103 008	72820 01700	0 ^	0	
Luiocode	OOOZAROTI						
Primera P	<b>12</b> '02 –						
Part No.	18 538 8 13 1	WS-Moulding OEM	Cover moulding	72750 AV600	1	1	/ - \
Eurocode	6020ASMS						/
See senso	ors page 172.						
erena	'93 – '01					_	
	66 101 8 13 1	WS-Moulding kit OEM	Cover moulding upper	72752 9C001	1	3	
	5992AKMV		Cover moulding right	72760 9C015	1		//
Scan-No.			Cover moulding left	72761 90005	1		-
Recomme	nded foam rubber 5 007-15/5 00	J3.	l	1		ı	
unny B1		WO M . I !! !!		70750 = 7105	4		
	18 320 8 13 1	WS-Moulding kit	Cover moulding	72752 57A02	1	2	
	5973AKMC		Retainer	72725 57A02	1 🖾	1	///
Scan-No.	14/0						
unny P4	<b>2 Sedan/Estate</b> '86 – '90						
	2 Sedan/Estate 86 - 90 18 319 8 13 1	WS-Moulding kit	Cover moulding chrome	72752 D4002	1	2	
	5971AKME	WS-Moulding kit chrome	Retainer	72752 D4002 72725 D4000	1 🗰	- 1	
Scan-No.		GIIOIIIG	Notalliel	12120 04000	T (VXXX)		1//
	ssan Bluebird T12 Scan-No. 1460	3.					
		-		1	1	1	
Iniversal nro	ofile 5 002/5021 applicable					1	
	ofile 5 002/5021 applicable. led foam rubber 5 007-15/5 003.						
tecommend	led foam rubber 5 007-15/5 003.						
Recommend	ed foam rubber 5 007-15/5 003. <b>3 Sedan</b> '86 – '90		Cover moulding	72752 501400	1		
unny N1 Part No.	led foam rubber 5 007-15/5 003.  3 Sedan '86 - '90 18 318 8 13 1	WS-Moulding kit	Cover moulding	72752 50M00	1	2	
Sunny N1 Part No. Eurocode	ded foam rubber 5 007-15/5 003. <b>3 Sedan</b> '86 – '90 <b>18 318 8 13 1</b> 5967AKMH		Cover moulding Retainer	72752 50M00 72725 50M00	11 xxxx	-	
ecommend Junny N1. Part No. Eurocode Scan-No.	ded foam rubber 5 007-15/5 003. <b>3 Sedan</b> '86 – '90 <b>18 318 8 13 1</b> 5967AKMH  1478		_			-	
ecommend unny N1. Part No. Eurocode Scan-No. Univ. profil	ded foam rubber 5 007-15/5 003. <b>3 Sedan</b> '86 – '90 <b>18 318 8 13 1</b> 5967AKMH	WS-Moulding kit	_			-	
Part No. Eurocode Scan-No. Univ. profilecommend	3 Sedan '86 - '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003.	WS-Moulding kit	_			-	
Eurocode Scan-No. Univ. profilecommend	3 Sedan '86 - '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003.	WS-Moulding kit	Retainer		1 ****	-	
ecommend unny N1 Part No. Eurocode Scan-No. Univ. profile ecommend unny N1. Part No.	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 led foam rubber 5 007-15/5 003. 4 Sedan '91 – '96	WS-Moulding kit	Retainer  Cover moulding upper	72725 50M00		2	
ecommend unny N1 Part No. Eurocode Scan-No. Univ. profilecommend unny N1. Part No.	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003.  4 Sedan '91 – '96 18 351 8 13 2 5984AKMH	WS-Moulding kit	Retainer	72725 50M00 72752 50C00	1	2	
Part No. Univ. profilecommend Unny N1. Part No. Univ. profilecommend Unny N1. Part No. Eurocode Scan-No.	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003.  4 Sedan '91 – '96 18 351 8 13 2 5984AKMH	WS-Moulding kit	Retainer  Cover moulding upper	72725 50M00 72752 50C00	1	2	
Part No. Eurocode Scan-No. Univ. profil decommend Sunny N1. Part No. Eurocode Scan-No. Screwed n	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003.  4 Sedan '91 – '96 18 351 8 13 2 5984AKMH 1699-1	WS-Moulding kit  WS-Moulding upper	Retainer  Cover moulding upper	72725 50M00 72752 50C00	1	2	
Part No. Eurocode Scan-No. Univ. profil Recommend Funny N1. Part No. Eurocode Scan-No. Screwed m Recommend	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003. 4 Sedan '91 – '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. led foam rubber 5 007-15/5 003.  '86 – '93	WS-Moulding kit  WS-Moulding upper	Retainer  Cover moulding upper	72725 50M00 72752 50C00 72725 50C10	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2	
Part No. Eurocode Scan-No. Univ. profil Recommend Funny N1. Part No. Eurocode Scan-No. Screwed m Recommend	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003. 4 Sedan '91 – '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. led foam rubber 5 007-15/5 003.	WS-Moulding kit  WS-Moulding upper	Retainer  Cover moulding upper	72725 50M00 72752 50C00	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2	
Part No. Eurocode Scan-No. Univ. profil tecommend Gunny N1. Part No. Eurocode Scan-No. Screwed medecommend Cerranol Part No.	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003. 4 Sedan '91 – '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. led foam rubber 5 007-15/5 003.  '86 – '93	WS-Moulding kit WS-Moulding upper	Cover moulding upper Retainer upper	72725 50M00 72752 50C00 72725 50C10	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2	
ecommend  Funny N1  Part No.  Eurocode  Scan-No.  Univ. profil  ecommend  Gunny N1  Part No.  Eurocode  Scan-No.  Screwed mecommend  Cerrano  Part No.	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003.  4 Sedan '91 – '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. led foam rubber 5 007-15/5 003.  '86 – '93 66 019 8 13 1 5966AKMPT	WS-Moulding kit WS-Moulding upper	Cover moulding upper Retainer upper Cover moulding upper	72725 50M00 72752 50C00 72725 50C10	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2	
Recommend  Sunny N1 Part No. Eurocode Scan-No. Univ. profil Recommend  Sunny N1 Part No. Eurocode Scan-No. Screwed n Recommend  Terrano I Part No. Eurocode Scan-No. Eurocode Scan-No.	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003.  4 Sedan '91 – '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. led foam rubber 5 007-15/5 003.  '86 – '93 66 019 8 13 1 5966AKMPT	WS-Moulding kit  WS-Moulding upper	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)	72725 50M00  72752 50C00 72725 50C10  72752 010G00	1 2 2	1	
Part No. Eurocode Scan-No. Univ. profile Recommend Sunny N1 Part No. Eurocode Scan-No. Screwed n Recommend Cerrano I Part No. Eurocode Scan-No. Part No. Part No. Part No.	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 lee 5 002/5021 applicable. led foam rubber 5 007-15/5 003.  4 Sedan '91 – '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. led foam rubber 5 007-15/5 003.  '86 – '93 66 019 8 13 1 5966AKMPT 1450-1 66 019 8 14 1	WS-Moulding kit WS-Moulding upper	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)  Clip 2205 001	72725 50M00  72752 50C00 72725 50C10  72752 010G00  01553 03361	1 1 2	1	
Part No. Eurocode Scan-No. Univ. profile decommend Sunny N1 Part No. Eurocode Scan-No. Screwed n decommend Cerrano I Part No. Eurocode Scan-No. Part No. Eurocode Scan-No.	3 Sedan	WS-Moulding kit  WS-Moulding upper	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)	72725 50M00  72752 50C00 72725 50C10  72752 010G00	1 1 2	1	
Bunny N1. Part No. Eurocode Scan-No. Duniv. profil decommend Sunny N1. Part No. Eurocode Scan-No. Screwed mecommend Part No. Eurocode Scan-No. Part No. Eurocode Scan-No. Part No. Eurocode Scan-No.	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003. 4 Sedan '91 – '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. led foam rubber 5 007-15/5 003.  '86 – '93 66 019 8 13 1 5966AKMPT 1450-1 66 019 8 14 1 5966AKCP 1450	WS-Moulding kit  WS-Moulding upper  WS-Moulding upper	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)  Clip 2205 001 Clip 2205 002	72752 50M00 72752 50C00 72725 50C10  72752 010G00 01553 03361 01553 03371	1 1 2 0	1 4	
Recommend  Furny N1  Part No.  Eurocode  Scan-No.  Univ. profil  Recommend  Furny N1  Part No.  Eurocode  Scan-No.  Screwed m  Recommend  Furny N1  Part No.  Eurocode  Scan-No.  Part No.  Eurocode  Scan-No.  Part No.  Eurocode  Scan-No.  Part No.  Furocode  Furny No.  Furny No.  Furny No.	3 Sedan '86 – '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003.  4 Sedan '91 – '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. led foam rubber 5 007-15/5 003.  '86 – '93 66 019 8 13 1 5966AKMPT 1450-1 66 019 8 14 1 5966AKCP 1450 66 019 8 16 1	WS-Moulding kit  WS-Moulding upper	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)  Clip 2205 001	72725 50M00  72752 50C00 72725 50C10  72752 010G00  01553 03361	1 1 2	1 4	
Recommend  Sunny N1 Part No. Eurocode Scan-No. Univ. profil Recommend  Sunny N1 Part No. Eurocode Scan-No. Screwed n Recommend  Part No. Eurocode Scan-No.	3 Sedan '86 - '90 18 318 8 13 1 5967AKMH 1478 lee 5 002/5021 applicable. leed foam rubber 5 007-15/5 003.  4 Sedan '91 - '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. leed foam rubber 5 007-15/5 003.  '86 - '93 66 019 8 13 1 5966AKMPT 1450-1 66 019 8 14 1 5966AKCP 1450 66 019 8 16 1 5966AKSP	WS-Moulding kit  WS-Moulding upper  WS-Moulding upper	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)  Clip 2205 001 Clip 2205 002	72752 50M00 72752 50C00 72725 50C10  72752 010G00 01553 03361 01553 03371	1 1 2 0	1 4	
Part No. Eurocode Scan-No. Screwed n Part No. Eurocode Scan-No. Screwed n Part No. Eurocode Scan-No.	3 Sedan '86 - '90 18 318 8 13 1 5967AKMH 1478 le 5 002/5021 applicable. led foam rubber 5 007-15/5 003.  4 Sedan '91 - '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. led foam rubber 5 007-15/5 003.  '86 - '93 66 019 8 13 1 5966AKMPT 1450-1 66 019 8 16 1 5966AKSP 1450-2	WS-Moulding kit  WS-Moulding upper  WS-Moulding upper	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)  Clip 2205 001 Clip 2205 002	72752 50M00 72752 50C00 72725 50C10  72752 010G00 01553 03361 01553 03371	1 1 2 0	1 4	
Recommend  Sunny N1 Part No. Eurocode Scan-No.  Sunny N1 Part No. Eurocode Scan-No.  Screwed n Recommend  Furn No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	3 Sedan '86 - '90 18 318 8 13 1 5967AKMH 1478 lee 5 002/5021 applicable. leed foam rubber 5 007-15/5 003.  4 Sedan '91 - '96 18 351 8 13 2 5984AKMH 1699-1 nouldings reusable. leed foam rubber 5 007-15/5 003.  '86 - '93 66 019 8 13 1 5966AKMPT 1450-1 66 019 8 14 1 5966AKCP 1450 66 019 8 16 1 5966AKSP	WS-Moulding kit  WS-Moulding upper  WS-Moulding upper  WS-Clip kit	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)  Clip 2205 001 Clip 2205 002	72752 50M00 72752 50C00 72725 50C10  72752 010G00 01553 03361 01553 03371	1 1 2 0	1 4	
Recommend Sunny N1 Part No. Eurocode Scan-No. Univ. profile Recommend Sunny N1. Part No. Eurocode Scan-No. Part No. Eurocode Scan-No. Part No. Eurocode Scan-No. Part No. Eurocode Scan-No. Screwed m Recommend	3 Sedan	WS-Moulding kit  WS-Moulding upper  WS-Moulding upper  WS-Clip kit	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)  Clip 2205 001 Clip 2205 002	72752 50M00 72752 50C00 72725 50C10  72752 010G00 01553 03361 01553 03371	1 1 2 0	1 4	
Recommend  Sunny N1 Part No. Eurocode Scan-No.  Univ. profile Recommend  Sunny N1 Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	3 Sedan	WS-Moulding kit  WS-Moulding upper  WS-Moulding upper  WS-Clip kit	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)  Clip 2205 001 Clip 2205 002  Fastener 6105 001	72752 50C00 72752 50C10 72752 50C10 72752 010G00 01553 03361 01553 03371	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 4 6	
Recommend Sunny N1 Part No. Eurocode Scan-No. Univ. profil Recommend Sunny N1 Part No. Eurocode Scan-No.	3 Sedan	WS-Moulding kit  WS-Moulding upper  WS-Moulding upper  WS-Clip kit	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)  Clip 2205 001 Clip 2205 002	72752 50M00 72752 50C00 72725 50C10  72752 010G00 01553 03361 01553 03371	1 1 2 0	1 4	
Recommend Sunny N1 Part No. Eurocode Scan-No. Univ. profil Recommend Sunny N1 Part No. Eurocode Scan-No.	3 Sedan	WS-Moulding kit  WS-Moulding upper  WS-Moulding upper  WS-Clip kit	Cover moulding upper Retainer upper  Cover moulding upper (self-adhesive)  Clip 2205 001 Clip 2205 002  Fastener 6105 001	72752 50C00 72752 50C10 72752 50C10 72752 010G00 01553 03361 01553 03371	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 4 6	

#### NISSAN MODEL YEAR ORIGINAL NO. PCS. UNIT COMPONENTS **Urvan E24 '**87 – Part No. 66 032 8 11 1 WS-Rubber 72710 01N00 Weatherstrip without insert Eurocode 5974ASRV Scan-No. 1525 X-Trail Part No. 66 301 8 13 1 WS-Moulding OEM Cover moulding 72752 8H300 Eurocode 6018ASMR **OPEL** MODEL YEAR COMPONENTS ORIGINAL NO. PCS. Agila Part No. 35 021 8 12 1 WS-Moulding Cover moulding 470 0434 Eurocode 6291ASMV → Also for Suzuki Wagon R. Fastener 6207001 applicable. **'81 – '88** Part No. 35 517 8 11 1 WS-Moulding 108 618 1 Weatherstrip 6244ASRH Eurocode 1190 Scan-No. Astra F **'91 – '98** Part No. 35 451 8 12 1 WS-Moulding OEM Weatherstrip 110 281 1 6257ASMH Eurocode Scan-No. 1769 Part No. 35 451 8 12 2 110 281 WS-Moulding 1 Weatherstrip 1 Eurocode 6257ASMH1 Astra F Sedan 3/5 doors '91 - '98 Part No. 35 453 8 22 1 BL-Rubber 170 744 1 Weatherstrip Eurocode 6257BSMH Scan-No. 1769-2

Weatherstrip

Weatherstrip

170 742

110 285

1

1

**BL-Rubber** 

WS-Rubber OEM

93 - '00

Astra F Estate

Astra F Cabrio

**Eurocode** 6257BSME **Scan-No.** 1769-1

Part No. 35 448 8 12 1

**Eurocode** 6260ASMT **Scan-No.** 1876

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Eurocode	'98 – '04 <b>35 457 8 13 1</b> 6284AKMH ding upper, lacquered on the backside.	WS-Moulding upper + lower soft	Cover moulding upper Cover moulding lower	163 859 163 860	1	2	
Part No. Eurocode	<b>35 457 8 13 6</b> 6284AKMH1	WS-Moulding upper + lower rigid	Cover moulding upper Cover moulding lower	163 859 163 860	1	2	
Part No. Eurocode	<b>35 457 8 13 2</b> 6284ASMHT	WS-Moulding upper soft	Cover moulding upper	163 859	1	1	
Part No. Eurocode	<b>35 457 8 13 4</b> 6284ASMHT1	WS-Moulding upper rigid	Cover moulding upper	163 859	1	1	
Part No. Eurocode	<b>35 457 8 13 5</b> 6284ASMHB1	WS-Moulding lower soft	Cover moulding lower	163 860	1	1	
Part No. Eurocode	<b>35 457 8 13 3</b> 6284ASMHB	WS-Moulding lower rigid	Cover moulding lower	163 860	1	1	
Eurocode	<b>35 457 8 14 1</b> 6284AKCHS page 120.	WS-Clip kit A-Pillar OEM	Clip 1102 002 (white) Clip 1103 003 (grey)	188 574 188 573	2 □ 4 ●	6	
	<b>state</b> '98 - '04 <b>35 460 8 21 1</b> 6284BSME	BL-Rubber	Weatherstrip without insert	170 658	1	1	
Part No.	<b>sedan 4 doors</b> '98 – '04 <b>35 457 8 22 1</b> 6284BSMS	BL-Rubber OEM	Weatherstrip without insert	170 657	1	1	
Part No. Eurocode	- Astra GTC '04 – 35 466 8 16 1 6302AKCHB ener page 120.	WS-Fastener kit OEM	Fastener	510 4988	5 🕏	5	
Calibra Part No. Eurocode Scan-No.	'90 - '00 <b>35 551 8 12 1</b> 6256ASMC 1694	WS-Moulding OEM	Weatherstrip	110 276	1	1	
	'94 - '01 <b>35 638 8 22 1</b> 6259BSMV 1855-2	BL-Rubber OEM	Weatherstrip without insert	129 010	1	1	
Combo B	'01 –	WS-Moulding upper	Cover moulding upper	110 206	1	1	
Eurocode	6292ASMVT	soft	<u> </u>				
Part No. Eurocode	<b>35 231 8 13 2</b> 6292ASMVL	WS-Moulding left OEM	Cover moulding left	163 871	1	1	
	<b>35 231 8 13 3</b> 6292ASMVR	WS-Moulding right OEM	Cover moulding right	163 872	1	1	
	<b>35 231 8 13 4</b> 6292ASMVB	WS-Moulding lower OEM	Cover moulding lower	110 205	1	1	
	'82 - '92 <b>35 437 8 11 1</b> 6245ASRH 1250	WS-Rubber	Weatherstrip without insert	108 619	1	1	

MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	<b>5 doors</b> '82 – '9:						
Part No.	35 437 8 21 1	BL-Rubber OEM	Weatherstrip without insert	170 108	1	1	
Eurocode	6245BSRH						-
Scan-No.	1250-1						
Corsa B	'93 –'00						
	35 637 8 12 1	WS-Moulding OEM	Cover moulding	110 282	1	1	
Eurocode	6259ASMH	Tro modium g o 2 m	e e e e e e e e e e e e e e e e e e e	110 202	_	-	
Scan-No.							
Part No.	35 637 8 12 2	WS-Moulding	Cover moulding	110 282	1	1	
Eurocode	6259ASMH1						
l						1	
Corsa B 3	<b>doors</b> '93 –'00						
		BL-Rubber	Weatherstrip	170 745	1	1	-
Eurocode	6259BSMH						
Scan-No.	1855-1				1		
		I		I			
Corsa B 5	<b>doors</b> '93 –'00						
	35 639 8 20 1	BL-Moulding kit OEM	Cover moulding upper	129 005	1	2	
			Cover moulding lower	129 004	1		
Scan-No.	1855-7		I				
Corsa C	·00·						
	35 640 8 10 2	WS-Moulding kit	Cover moulding upper	110 202	1	4	
	6290AKMH1		Cover moulding lower	110 203	1	'	
			Cover moulding left	163 865	1		
			Cover moulding right	163 866	1		
Part No.	35 640 8 10 1	WS-Moulding upper:	Cover moulding upper	110 202	1	2	
	6290AKMH	WS-Moulding upper + lower	Cover moulding upper Cover moulding lower	110 202	1	2	
Luitootue	OZJONINII I	IOWCI	COVER MOUNTING TOWER	110 203	_		
Part No.	35 640 8 13 1	WS-Moulding upper	Cover moulding upper	110 202	1	1	
Eurocode	6290ASMHT	soft	J				
	35 640 8 13 2	WS-Moulding lower	Cover moulding lower	110 203	1	1	
Eurocode	6290ASMHB						
Part No.	35 640 8 13 4	WS-Moulding left	Cover moulding left	163 865	1	1	
	6290ASMHL	OEM	SOVER INCUIDING ICIL	100 000	*	1	
	35 640 8 13 3	WS-Moulding right	Cover moulding right	163 866	1	1	
	6290ASMHR	OEM					
	ar in side cover clip 1102 004						
usable. See	page 120.	T contract to	I	I .	I	I	
Frontera	·91 – 7/·98						
	80 115 8 13 1	WS-Installation kit	Cover moulding upper	110 284	1	3	
	6258AKMR		Cover moulding left	110 279	1		
Scan-No.	1776		Cover moulding right	110 280	1		
	90 115 9 12 2	WS Moulding upper	Cover moulding upper	110 204	1	1	
Doub No.	80 115 8 13 2	WS-Moulding upper	Cover moulding upper	110 284	1	1	
	6258ASMRT			I .			
Eurocode	6258ASMRT 1776-1					4	
Eurocode Scan-No.	1776-1						
Eurocode Scan-No.	1776-1 '99		Congressoridicativa	140,000		2	
Eurocode Scan-No. Frontera Part No.	1776-1 1	WS-Installation kit	Cover moulding upper	110 296	1	3	
Eurocode Scan-No. Frontera Part No.	1776-1 '99		Cover moulding left	110 295	1	3	
Eurocode Scan-No. Frontera Part No.	1776-1 1	WS-Installation kit				3	
Eurocode Scan-No. Frontera Part No. Eurocode	1776-1 1	WS-Installation kit	Cover moulding left	110 295	1	3	

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Kadett C	Sedan/Estate '73 - '78						~
Part No.	35 411 8 11 1	WS-Rubber OEM	Weatherstrip without insert	108 599	1	1	
	6238ASRH 0740-1						
Scall-No.	0740-1						
Kadett C	Sedan/Estate '73 - '78						
	35 412 8 11 2	WS-Rubber OEM	Weatherstrip with insert	108 586	1	1	
Eurocode Scan-No.	6238ASRH1H						
ocan-ito.	0140						
Kadett D	'79 – '83						
	35 432 8 11 1	WS-Rubber	Weatherstrip without insert	108 616	1	1	
Scan-No.	6243ASRH 1088						
Kadett E	'84 – '92						
	35 442 8 12 1	WS-Moulding	Weatherstrip	110 274	1	1	
Scan-No.	6247ASMH 1367						
	profile 5 002 applicable.	l					
	<b>Sedan 3/5 doors</b> '84-'92						
	<b>35 442 8 22 1</b> 6247BSMH	BL-Moulding	Weatherstrip	170 732	1	1	
Scan-No.							
Kadett E	<b>Estate 3/5 doors</b> '84-'92						
	35 444 8 22 1	BL-Moulding OEM	Weatherstrip	170 733	1	1	
Scan-No.	6247BSME 1367-3						
Meriva	·03 <i>-</i>						
	35 041 8 13 1	WS-Moulding upper	Cover moulding upper	110 217	1	1	
	6288ASMVT ar in side cover clip 1102 004	soft					
usable. See	·						
Monterv	·92 – ·98						
	80 161 8 13 1	WS-Moulding upper	Cover moulding upper	171 263	1	1	/·
	6262ASMRT						/-/
Scan-No.	1821						•••••
	80 161 8 14 1	WS-Clip kit	Clip 1102 001	162 968	8 •	8	
Eurocode Scan-No.	6262ASCV						
	uzu Trooper II Scan-No. 1821-2/3.						
Movano	·99 /'00 <b>–</b>						
	80 201 8 13 1	WS-Moulding	Cover moulding	440 4164	1	1	
	6296ASML iat Iveco Daily 99- Eurocode 3741	A CAAN / = = = d	(Version II from 9/2000)				1/2
	ster 2/'98 Eurocode 77247ASML.						
	er 4000 306 usable.				1		
Omega A	'86 – '93						
	<b>35 325 8 12 1</b> 6252ASMS	WS-Moulding	Weatherstrip	110 270	1	1	
Scan-No.							
→ Univ. prof	file 5 002 applicable. spacer, Part	No. 4000 501.		1	1	1	
Omega A							
	35 227 8 22 1	BL-Moulding OEM	Weatherstrip	170 731	1	1	
Scan-No.	6252BSME 1493-2						
	ile 5 011 applicable.						

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Omega B	·94 <i>-</i>						
Part No. Eurocode Scan-No.	<b>35 328 8 10 1</b> 6261AKMS6 1923-10	WS-Installation kit OEM	Inner moulding left Inner moulding right Inner moulding lower	163 905 163 906 163 901	1 1 1	6	
			Inner moulding upper Cover moulding upper Cover moulding lower	163 904 163 851 163 864	1 1 1		
	35 328 8 13 1	WS-Cover moulding kit	• ,	01 63 851	1	2	
Eurocode Scan-No.	6261AKMS0 1923	OEM	Cover moulding lower	01 63 864	1		
	35 328 8 13 2	WS-Track moulding kit		01 63 901	1	4	
Eurocode Scan-No.	6261AKMSI 1923-1	OEM	Inner moulding upper Inner moulding right Inner moulding left	01 63 904 01 63 906 01 63 905	1 1 1		
Omogo P	Custom made article (04						
Part No.	Custom-made article '94- 35 328 8 10 2	WS-Cover moulding kit	Cover moulding upper		1	2	
Eurocode Scan-No.	6261AKMH6A 1923-13	C	Cover moulding lower		1		
Part No. Eurocode	<b>35 328 8 12 1</b> 6261ASMH	WS-Cover moulding	Cover moulding upper		1	1	
Scan-No.	1923-12						
	35 328 8 12 2	WS-Cover moulding	Cover moulding lower		1	1	
Eurocode Scan-No.	6261ASMHB 1923-11						
→ Pay atten	tion to the revised application guid	eline !					
Omega B		DI Turali lit OFM	lance and a social discount of the second of	470 700	4	2	
	<b>35 330 8 23 1</b> 6261BKME	BL-Track kit OEM	Inner moulding lower right Inner moulding lower left	170 700 170 700	1	3	
Scan-No.  → Cover mo	1923-8 oulding reusable.		Inner moulding upper/Side	170 701	1		
Omega B	<b>Sedan</b> '94 –						
Part No.	35 328 8 23 1	BL-Moulding kit OEM	Cover moulding	170 651	1	2	
Eurocode Scan-No.	6261BKMS 1923-9		Cover moulding lower	170 652	1		
Senator F							
Part No.	<b>35 612 8 12 1</b> 6252AKMSC	WS-Installation kit chrome, OEM	Cover moulding Cover moulding lower	110 272 110 273	1	2	/
Scan-No.		Dealership	cover modium g rower	110 270	_		
Sintra	·96 – ·00						
Part No.	80 180 8 13 1	WS-Moulding	Cover moulding	110 200	1	1	
	6281ASMV Pontiac Transporter '96.						
Tigra I	·94 – ·00						
Part No.	35 554 8 13 1	WS-Moulding kit OEM	Cover moulding upper	01 10 286	1	4	/
Eurocode Scan-No.	6263AKMC 1929		Cover moulding right Cover moulding left	01 10 288 01 10 291	1 1		
			Cover moulding lower	01 10 289	1	I	
Tigra Twi		WC Mandalina CEN	Cover meantains	100.004	1	1	
Part No. Eurocode	<b>35 555 8 13 1</b> 6303ASMT	WS-Moulding OEM	Cover moulding	108 801	1	1	
Part No.	35 555 8 13 2	WS-Moulding lower	Cover moulding lower	110 203	1	1	'
Eurocode	6303ASMTB	OEM OEM	22.3	_10 200	_	-	
	I	l	l	l	I	I	

	MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Vectra A	·88 – '95						
	Part No.	<b>35 521 8 12 1</b> 6253ASMH	WS-Moulding OEM	Weatherstrip	110 275	1	1	
N W N		<b>35 521 8 12 2</b> 6253ASMH1	WS-Moulding	Weatherstrip	110 275	1	1	
Z								
	Vectra A	<b>4 doors</b> '88 – '95						
		<b>35 521 8 22 1</b> 6253BSMS	BL-Moulding OEM	Weatherstrip	170 740	1	1	
	Scan-No.  → Universal	1589-1 profile 5 011 applicable.						
		•		i				
	Vectra B	'95 – 03/'02	WO	0 111 1	100.050	4	_	,
		<b>35 524 8 13 5</b> 6277AKMH	WS-Installation kit OEM	Cover moulding upper Track moulding lower	163 856 163 907	1	5	
		1990-4	OLIVI	Cover moulding lower OEM	163 853	1		/
				Cover moulding left OEM		_		
				Cover moulding right OEM	163 869	1		
					163 870	1		
	Part No.	35 524 8 13 1	WS-Moulding	Track moulding lower	163 907	1	2	
	Eurocode	6277AKMHT/B	lower/inner + upper	Cover moulding upper	163 856	1		
	Scan-No.	1990	OEM					
	Part No.	35 524 8 13 2	WS-Side moulding	Cover moulding left OEM	163 869	1	2	
	Eurocode	6277AKMHR/L	OEM	Cover moulding right OEM	163 870	1		
	Scan-No.	1990-1						
	Part No.	35 524 8 13 6	WS-Moulding upper	Cover moulding upper	163 856	1	1	
	Eurocode Scan-No.	6277ASMHT	OEM					
	Cover more	ulding specially treated on the bac pages to the lacquer because of to						
		35 524 8 13 3	WS-Moulding	Cover moulding lower/outer	163 853	1	1	
		6277ASMHB0 1990-2	lower/outer OEM					
	Part No.	35 524 8 13 7	WS-Moulding	Track moulding lower/inner	163 907	1	1	
		6277ASMHBI	lower/inner OEM					
	Scan-No.	1990-7						
	Vectra B	<b>Sedan 4 doors</b> '95 – '03						
		35 524 8 22 1	BL-Moulding OEM	Weatherstrip	170 655	1	1	
	Eurocode	6277BSMS		·				
	Vectra B	Estate '06 '03						
		Estate '96 – '03 35 527 8 23 1	BL-Moulding OEM	Weatherstrip	170 660	1	1	
		6277BSME	DE MODIANIS CEM	Wednesday	170 000	_		
	Missage							
	Vivaro	'01 –	WS-Moulding upper	Cover moulding upper		1	1	
		6300ASMVT	wo-woulding upper	Cover modiums upper		1	1	10
		enault Trafic (7252ASMVT).						
	Zafira I	'99 – '05						
	Part No.	35 701 8 10 1	WS-Installation kit	Cover moulding upper	163 861	1	2	
	Eurocode	6283AKMV1	(PMA Version)	Cover moulding lower	163 862	1		
	Part No.	35 701 8 13 2	WS-Moulding upper	Cover moulding upper	163 861	1	1	
		6283ASMVT	(PMA Version)	3 67				
	Part No.	35 701 8 13 3	WS-Moulding lower	Cover moulding lower	163 862	1	1	
		6283ASMVB	(PMA Version)					
- 1		l	l	T.	I	1	1	

#### **OPEL** MODEL YEAR ORIGINAL NO. PCS. UNIT COMPONENTS Zafira I **.**99 – **.**05 Part No. 35 701 8 23 1 BL-Rubber OEM 170 746 Cover moulding Eurocode 6283BSMV Zafira II Part No. 35 702 8 13 1 WS-Moulding OEM Cover moulding 110 220 Eurocode 6307ASMV → See Sensors page 172. **PEUGEOT** MODEL ORIGINAL NO. PCS. UNIT 1007 Part No. 36 001 8 10 1 WS-Installation kit Cover moulding upper 8120 P 2 Eurocode 6547AKMH Cover moulding lower 8251 T9 1 36 001 8 13 1 Part No. WS-Moulding upper Cover moulding upper 8120 P 1 Eurocode 6547ASMHT **OEM** Part No. 36 001 8 13 2 WS-Moulding lower Cover moulding lower 8251 TP 6547AKCHS Eurocode Part No. 36 001 8 14 1 WS-Clip kit OEM Clip 8110 24 8 8 Eurocode 6547AKCHS → See clips page 121. Part No. 36 221 8 10 1 WS-Moulding kit Cover moulding 81 20 69 3 Eurocode 6520AKMH 85 20 80 Spacer Part No. 36 221 8 13 1 WS-Moulding Cover moulding 1 1 Eurocode 6520ASMH Scan-No. 1770 → See spacer page 121. '91 – '05 106 Part No. 36 221 8 22 1 BL-Moulding OEM Weatherstrip 87 45 58 1 Eurocode 6520BSMH Scan-No. 1770-1 → Also for Citroen Saxo Scan-No. 1998-1. 2051 + 1**'83 \_ '97** Part No. 36 331 8 11 1 WS-Rubber Weatherstrip without insert 81 20 64 1 Eurocode 6514ASRH Scan-No. '89 – '97 205 II Part No. 36 332 8 21 1 87 45 37 **BL-Moulding** Weatherstrip 1 Eurocode 6514BSMH1 Scan-No. 1296-2 206 98 – '06 Part No. 36 336 8 10 1 WS-Moulding kit 8120 F2 Cover moulding upper 1 3 6539ASMHT1 Eurocode Fastener 8123 58 2 Part No. 36 336 8 13 1 WS-Moulding upper Cover moulding upper 8120 F2 \*\*\*\*\*\* 6539ASMHT Eurocode Part No. 36 336 8 14 1 8565 40 WS-Fastener kit Fastener 10 14

Spacer

WS-Moulding OEM

Fastener

Cover moulding

8123 58

6962 07

81 20 G8

2

2

1

Eurocode 6539AKCH

**Eurocode** 6545ASMT → See sensors page 172.

206 CC Cabrio Part No. 36 340 8 13 1

#### PEUGEOT

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
306 Seda	n/ <b>Estate</b> '93 – '01						
	36 621 8 10 1	WS-Installation kit	Track moulding upper	81 20 70	1	4	
	6521AKMH1		Cover moulding	81 20 91	1	'	/
			Spacer self-adhesive	8123 58	2		-
	36 621 8 13 1	WS-Installation kit	Inner moulding upper	81 20 70	1	2	
	6521AKMH		Cover moulding	81 20 91	1		
Scan-No.	1846						
Part No	36 621 8 13 2	WS-Track moulding	Inner moulding upper	81 20 70	1	1	
	6521ASGHT	upper	milet medianig apper	012070	*	-	
Scan-No.	1846-1						
	36 621 8 13 3	WS-Moulding	Cover moulding	81 20 91	1	1	
	6521ASMH						
Scan-No.	11846-2 er page 121.	I					
• See Space	er page 121.			1	1	1	
306 Cabr	' <b>io</b> '93 – '02						
Part No.		WS-Installation kit	Cover moulding	81 20 75	1	2	
Eurocode	6524AKMT		Track moulding inner	81 20 70	1		
							-
	36 625 8 13 1	WS-Moulding OEM	Cover moulding upper	81 20 75	1	1	
	6524ASMT						
see space	er page 121.	I control of the cont	T.	I .	I .	1	
309	'85 – '93						~
	36 615 8 11 1	WS-Rubber OEM	Weatherstrip without insert	81 20 61	1	1	
Eurocode	6516ASRH		,				
Scan-No.	1455						
105 Soda	n/Estate '87 – '96						
Part No.		WS-Moulding	Weatherstrip with insert	81 20 67	1	1	
Eurocode		W3-Moulding	weatherstrip with insert	81 20 07	1	1	
Scan-No.							
	36 415 8 12 2	WS-Moulding kit	Cover moulding upper	81 21 04	1	5	
	6518KMSC	chrome	Cover moulding right	82 21 06	1		
Scan-No.	1534-2		Cover moulding left Corner joints	83 21 05 81 23 52	1 2		
!	I	I and the second	Corner Joints	101 23 32	12	1	
405 Seda	<b>an 4 doors</b> '87 – '96						$\sim$
Part No.	36 415 8 21 1	BL-Moulding OEM	Weatherstrip	83 46 32	1	1	
	6518BSMS						
Scan-No.	1534-1						
ļ		I	T	I	I	T	
406	·96 – ·04						
	36 426 8 13 1	WS-Moulding upper	Cover moulding upper	81 20 98	1	8	·/
	6525AKMST	incl. Clip+ Spacer	Spacer 4000 403	81 23 64	3	d -	/
Scan-No.			Clip 4000 404	81 23 65	4		•/
	36 426 8 13 2	WS-Moulding	Cover moulding upper	81 20 98	1	1	
	6525ASMST						
Scan-No.	1993-1 /spacer page 121.						
- oce dilps/	Opaco page 121.	·	<u>'</u>	·		<u> </u>	
106 Coup	<b>vé</b> '97 – '05						
Part No.	36 430 8 13 1	WS-Moulding OEM	Cover moulding	81 20E3	1	1	/
Eurocode	6538ASMC						
		l		l		I	
107 Sada	n/Estate '04 –						_
	36 432 8 14 1	WS-Clip kit OEM	Clin	8123 89	6 ↔	10	
	6544AKCSS	WS-CIIP KIL UEWI	Clip Clip	8123 89	2 0	10	
	pper self-adhesive profile 5060-2	0 page 102.	Clip	8123 90	2 •		
	pacer page 121.	80			-		
	F					•	

#### PEUGEOT

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
806	'94 – '04						
Part No.	36 720 8 13 1	WS-Moulding	Cover moulding	81 20 83	1	1	
Eurocode	6522ASMV						/
Scan-No.	1931						
	at Ulysse/Fiat Scudo Scan-No. 19						
Lancia Zeta	Scan-No. 1925 and Peugeot 806	Scan-No. 1931.		l			
Partner	·96 <i>-</i>						
Part No.	81 201 8 13 1	WS-Moulding incl.	Cover moulding	81 20 A6	1	4	/
Eurocode	6537AKMV	Spacer	Spacer	96 060 797	3	ı	
→ Also for C	itroen Berlingo Eurocode 2724AS	MV.					
Boxer	·94 –/98 –						
Part No.	36 000 8 12 1	WS-Moulding OEM	Weatherstrip without insert	81 20 88	1	1	
Eurocode	6523ASMV1H		-				10
Scan-No.	1927						
→ Also for F	iat Ducato II, Citroen Jumper.						
→ Spacer ki	t 68 204 8 16 1 applicable.						

#### PONTIAC

MODEL	YEAF	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Transpor	<b>t l</b> '90 – '96						
Part No.	59 061 8 13 1	WS-Moulding upper	Cover moulding	2111 755	1	1	
Eurocode	AP29ASMVT						
NAGS-Nr.	DW1061						
	I		I				
Transpor	<b>t II/Montana</b> '96 – '00						
_	59 293 8 13 1	WS-Moulding	Cover moulding	110 200	1	1	
Eurocode	6281ASMV						
NAGS-No.	DW1293						"
→ Also for	Opel Sintra.						

#### PORSCHE

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO. PCS.	UNIT	
911/912	<b>Coupé</b> '64 – '88					
Part No.	37 211 8 11 2	WS-Rubber wide	Weatherstrip with insert	911 541 225 03 1	1	
Eurocode	6709ASRC	OEM	·			
Scan-No.	0509-1					
911/912	<b>? Coupé</b> '88 –					~ ~
	37 211 8 11 1	WS-Rubber narrow	Weatherstrip with insert	91154122500 1	1	
	6709ASRC1	OEM	weatherstrip with insert	911 341 223 00 1	1	//
Scan-No.		OLIVI				
Scall-No.	0309					
	•		•			
964 Cou	p <b>é</b> '88 – '93					
Part No.	37 221 8 21 1	WS-Rubber	Weatherstrip without insert	96454122500 1	1	
Eurocode	6716ASRC					
Scan-No.	1711					
996	08/'97-					
Part No.		WS-Moulding OEM	Track moulding with	996 541 531 01 1	1	/
Eurocode	6721ASGT	inner	Aluminium channel			//
Boxster	100 0 <del>7</del> //00					~
	'96 – 07/'02		O a company and all in at	000 544 504 04 4	4	
Part No.	37 422 8 13 1	WS-Moulding	Cover moulding	996 541 521 01 1	1	/
Eurocode	6720ASMT					
1	I control of the second of the	I .	I .	I I	1	

ORIGINAL NO. PCS. UNIT

#### PORSCHE

<u></u> .	Boxster	08/'02	– '05						
	Part No.	37 422 8 13 1		WS-Moulding OEM	Track moulding black with	986 541 521 01	1	1	/
#	Eurocode	6720ASGT		inner	Aluminium channel				
_									
Ξ.	Boxster S	08/'02	– '05 <u> </u>						
1	Part No.	37 422 8 13 3		WS-Moulding OEM	Track moulding silver with	986 545 410	1	1	//
#	Eurocode	6720ASGT1		inner	Aluminium channel	09A4			
~									

COMPONENTS

MODEL

YEAR

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
5 C40/B	<b>40 Super 5</b> '84 – '96						~ ~
Part No.	39 225 8 13 5	WS-Installation kit	Track moulding	77 00 778 786	1	4	
Eurocode	7227AKMH1	incl. inner pinchweld	Cover moulding	77 00 778 789	1		///
Scan-No.	1373-8	moulding	Joint	77 00 778 785	1		
			Inner pinchweld moulding	77 00 776 102	1 ****	l	
Part No.	39 225 8 13 1	WS-Installation kit	Track moulding	77 00 778 786	1	3	
	7227AKMH	Wo-installation kit	Cover moulding	77 00 778 789	1	3	
	1373		Joint	77 00 778 785			
	10.0		Joine		_		
	39 225 8 13 3	WS-Moulding inner	Track moulding	77 00 778 786	1	1	
	7227ASGH						
Scan-No.	1373-5						
Part No.	39 225 8 13 4	WS-Moulding outer	Cover moulding	77 00 778 789	1	1	
Eurocode	7227ASMHO						
Scan-No.	1373-6						
Part No.	39 225 8 15 1	WS-Track profil	Track moulding on 50 m roll	77 00 778 786	1	50 m	
	7227ASMHIR	Tro Track prom	Track mounting on co miles		_	00	
	1373-1						
	39 225 8 15 2	WS-Cover profil	Cover moulding on 50m roll	77 00 778 789	1	50 m	
	7227ASMHOR						
Scan-No.	1373-2						
Part No.	39 225 8 13 2	Inner pinchweld	Inner moulding	77 00 778 102	1 🚃	1	
Eurocode	7227ASMHI	moulding					
Scan-No.	1373-3						
Part No.	39 225 8 13 6	WS-Inner moulding	Track moulding incl.	77 00 778 786	1	2	
	7227A		Inner pinchweld moulding	77 00 778 102			
	1373-9						
	39 225 8 12 1	WS-Moulding soft	Cover moulding (one part)	PMA Version	1	1	
	7227ASMH						/
→ Replace	s the kit (7227AKMH).						
'							
9 + 11	·82 – ·89						
	39 246 8 11 1	WS-Rubber	Weatherstrip without insert	77 00 776 161	1	1	
Eurocode	7224ASRH						
	•						
19 Sedan		WO		77.00.705.500	4	4	
	39 713 8 13 1	WS-Installation kit	Cover moulding	77 00 785 520		4	//
	7231AKMH		Track moulding	77 00 785 513			//
Scan-No.	1607		Spacer 4000 301	77 00 789 274	2		
Part No.	39 713 8 13 2	WS-Track moulding	Track moulding	77 00 785 513	1	1	
Eurocode	7231ASGH		_				
Scan-No.	1607-2						
Dart No.	39 713 8 13 3	WS-Moulding outer	Cover moulding	77 00 785 520	1	1	
	7231ASMH	wo-woulding outer	Cover mounting	11 00 160 020	_	_	
Scan-No.							
Juli-110.	1001-0						
1	1	1	* The state of the	t and the second	1	1	

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	21 Sedar							
		<b>39 513 8 13 1</b> 7230AKMS 1479	WS-Installation kit	Track moulding upper Cover moulding right Cover moulding left Joint	77 00 768 901 77 01 202 745 77 01 202 745 77 00 773 126	1	4	
	25	'84 – '92						
		<b>39 531 8 13 3</b> 7226ASGH 1370-2	WS-Track	Track moulding	77 00 776 788	1	1	
	Clio I	'91 <i>–</i> 08/'98						
		<b>39 227 8 13 1</b> 7232AKMH	WS-Installation kit	Track moulding Cover moulding Spacer 4000 301	77 00 797 665 77 00 797 664 77 00 789 274	1	4	
NEW		<b>39 227 8 13 6</b> 7232ASMH2	WS-Moulding outer OEM	Cover moulding	77 00 797 664	1	1	
O'		<b>39 227 8 13 5</b> 7232ASGH3	WS-Moulding inner OEM	Track Moulding	77 00 827 503	1	1	
		<b>39 227 8 13 2</b> 7232ASMH	WS-Moulding outer	Cover moulding	77 00 797 664	1	1	
		<b>39 227 8 13 3</b> 7232ASGH	WS-Moulding inner	Track Moulding	77 00 797 665	1	1	
	Clio I	'91 <i>-</i> 08/'98						
	Eurocode	<b>39 227 8 12 1</b> 7232ASMH1 s the kit (7232AKMH).	WS-Moulding soft	Cover moulding (one part) Spacer 4000 301	PMA Version 77 00 789 274	2	3	
	Clio I	·91 <i>-</i> 08/'98						~ ~
	Part No.	<b>39 227 8 23 1</b> 7232BSRH	BL-Rubber	Weatherstrip without insert	77 00 797 453	1	1	
	Clio II	09/'98 – '05						
		<b>39 327 8 13 1</b> 7248AKMH6	WS-Installation kit OEM	Cover moulding upper with Spoiler Cover moulding upper Cover moulding right Cover moulding left Spacer 4000 302	77 01 205 825 (OEM-No.=kit)	1 1 1 2	6	
	Clio II	09/'98 – '05						
NEW	Eurocode	39 327 8 13 6 7248AKMH5 e for Clio II with Glass roof!	WS-Installation kit OEM	Cover moulding upper Cover moulding right Cover moulding left Spacer 4000 302		1 1 2	5	
	Clio II	09/'98 – '05						
NEN		<b>39 327 8 13 2</b> 7248AKMH4	WS-Installation kit OEM	Cover moulding upper Cover moulding upper with Spoiler Cover moulding left Cover moulding right		1 1 1	4	
-:	Clio II	09/'98 – '05						
NEW		<b>39 327 8 13 5</b> 7248AKMH3	WS-Installation kit OEM	Cover moulding upper Cover moulding left Cover moulding right		1 1 1	3	
<u>-</u>	Clio III	·05 <i>-</i>			0000			
NEW	Part No. Eurocode  → See sens	<b>39 330 8 13 1</b> 7262ASMHT ors page 172.	WS-Moulding upper OEM	Cover moulding	8200 299 634	1	1	

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Espace I	'84 – '91						
	Eurocode	<b>39 540 8 12 1</b> 7228AKMV 1425	WS-Installation kit	Cover moulding upper Cover moulding lower (self-adhesive)	60 25 001 265 60 25 001 265	1	2	
	Espace II	'91 –09 / '96						<b>—</b>
		39 543 8 12 1	WS-Installation kit	Cover moulding right	60 25 107 150	1	3	
	Eurocode Scan-No.	7234AKMV 1750	OEM	Cover moulding left Joint	60 25 107 149 60 25 104 416			
				(self-adhesive)				
	Espace II	'91 <i>–</i> 09/'96						
		<b>39 543 8 22 1</b> 7234BSRV	BL-Rubber OEM	Weatherstrip without insert	60 25 100 281	1	1	
		1750-1						
	Espace II	10/'96 – '02						
	Espace II Part No.	39 544 8 13 1	WS-Installation kit	Cover moulding right	60 253 047 09	1	3	
	Eurocode	7243AKMV	OEM	Cover moulding left Joint (self-adhesive)	60 253 047 10 60 253 048 42	1		
	Espace I	·02 –						7
		39 548 8 10 1	WS-Installation kit	Cover moulding upper	77 01 208 195	1	8	/
	Eurocode	7251AKMV	OEM	Cover moulding left Cover moulding right		1		/ <u>·</u>
				Foam rubber		2		
				Adhesive pads		2		
			I	Spacer	1	1		
	Kangoo I	<sup>'</sup> 98 – 10/'01		-				
		<b>39 216 8 10 1</b> 7246AKMV5	WS-Installation kit OEM	Cover moulding Inner pinchweld moulding	77 00 303 096 77 00 400 204		5	//
				Cover moulding lower	77 00 303 429	1		
				Spacer 4000 302	77 00 838 570	2	ıl	
-	Kangoo I	'98 – 10/'01						
NEW		<b>39 216 8 10 3</b> 7246AKMV4	WS-Installation kit OEM	Cover moulding Cover moulding lower	77 00 400 204 77 00 303 429		4	/
Z	Luiocode	7240ANWY4	OLIVI	Spacer 4000 302	77 00 838 570			
	Kangoo I	'98 – 10/'01						
¥		39 216 8 10 2	WS-Installation kit	Cover moulding	77 00 400 204	1	3	
ž	Eurocode	7246AKMV3	OEM	Spacer 4000 302	77 00 838 570	2	ı	
		I	I	I	1	1	1	
-: ≥:	Kangoo I	'98 – 10/'01	WOM III .		77.00.400.004	4	4	
NE		<b>39 216 8 13 6</b> 7246ASMV1	WS-Moulding outer OEM	Cover moulding outer	77 00 400 204	1	1	
Z								
		<b>39 216 8 13 1</b> 7246ASMV	WS-Moulding outer soft	Cover moulding outer	77 00 400 204	1	1	
			-5.0					
	Kangoo I	+II '98–11/'01 39 216 8 13 2	WS-Moulding inner	Inner pinchweld moulding	77 00 303 096	1	1	
		7246ASGV	Wo woulding inner	miler pineriwela modianig	77 00 303 030			
	Dart No.	39 216 8 13 3	WS Moulding lower	Cover moulding lower	77 00 303 429	1	1	
O'Z		7246ASMVB	WS-Moulding lower OEM	Cover modiums lower	11 00 303 429	1		
	Kangoo I	11/'01 –						
E W		39 216 8 10 5	WS-Installation kit	Cover moulding	82 00 105 499		5	
W N	Eurocode	7246AKMV51H	OEM	Inner pinchweld moulding Cover moulding lower	77 00 303 096 77 00 303 429			
				Spacer 4000 302	77 00 838 570		ı	
	Kangoo I	11/'01-						
N E N		39 216 8 10 4	WS-Installation kit	Cover moulding	82 00 105 499	1	4	\
Ħ	Eurocode	7246AKMV41H	OEM	Cover moulding lower	77 00 303 429			
		I .	I	Spacer 4000 302	77 00 838 570	2	II	

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
5	Kangoo I							
×		<b>39 216 8 10 6</b> 7246AKMV31H	WS-Installation kit OEM	Cover moulding Spacer 4000 302	82 00 105 499 77 00 838 570		3	/
Z	Eurocode	1240ANWVSIII	OLIVI	Spacer 4000 302	11 00 838 310			
	Manage a H	44.004						~ -
ΕW	Kangoo I	11/'01 – 39 216 8 13 7	WS-Moulding OEM	Cover moulding	82 00 105 499	1	1	
		7246ASMV1H1	Wo Woulding OLW	Cover mounting	02 00 103 433	_	_	/
	Doub No.	20.040.0.40.5	NA/O Marculation	Oncome and discon	00 00 405 400	4	4	
		<b>39 216 8 13 5</b> 7246ASMV1H	WS-Moulding	Cover moulding	82 00 105 499	1	1	
	Laguna I	Sedan/Estate '94 - '00						
<b>≥</b>		39 516 8 10 1	WS-Moulding upper +	Cover moulding upper	77 00 823 043	1	3	/×
Ë	Eurocode	7237AKMHT	Spacer OEM	Spacer 4000 304	77 00 827 631			
				Spacer 4000 305	77 00 827 632	1		
		39 516 8 13 3	WS-Moulding upper	Cover moulding upper	77 00 823 043	1	1	
	Eurocode	7237ASMHT	OEM					
	Part No.	39 516 8 14 1	WS-Clip kit OEM	Clip	77 03 077 330	12	22	
		7237AKCHT		Clip	77 03 077 331	8 X		
	→ Clip only	usable for Sedan!		Clip	77 03 077 332	2		
		39 516 8 14 2	WS-Clip kit OEM	Clip	77 01 469 147	10 X	12	/ <u>*</u>
		7237AKCET usable for Estate !		Clip	77 01 469 148	2 •		\(\frac{x}{x}\)
	4 Clip Offig	usable for Estate :						· · ·
	Laguna II	Sedan/Estate '01 -						
		Sedan/Estate '01 – 39 519 8 10 1	WS-Installation kit	Cover moulding upper		1	5	
	Eurocode	7249AKMH	OEM	Cover moulding left	8200000799	1		/
				Cover moulding right Spacer 4000 302	8200000798	1 2 <b></b>		1
				Spacer 4000 302		<b>Z</b>		
		39 519 8 13 1	WS-Moulding upper	Cover moulding upper		1	1	
	Eurocode	7249ASMHT						
		39 519 8 13 2	WS-Moulding left	Cover moulding left	8200000799	1	1	
	Eurocode	7249ASMHL	OEM					
	Part No.	39 519 8 13 3	WS-Moulding right	Cover moulding right	8200000798	1	1	
	Eurocode	7249ASMHR	OEM					
		I	I	I	1		I	
	Megane/							
		<b>39 333 8 13 1</b> 7239AKMH	WS-Installation kit	Cover moulding Spacer 4000 302	77 00 838 339 77 00 838 570		3	
	Scan-No.							
					· '			
	Megane I	<b>Coupé 3 doors</b> '96 – '02						
		39 333 8 23 2	WS-Moulding OEM	Weatherstrip	77 00 838 374	1	1	
	Scan-No.	7240BSMC 2019-2						
		2010 2						
	Megane-L	<b>Sedan 4 doors</b> '96 – '02						~ _
		39 333 8 23 3	WS-Moulding OEM	Weatherstrip	77 00 841 684	1	1	
		7239BSMS						
	Scan-No.	2019-3						
					'			
		<b>Sedan 5 doors</b> '96 – '02	WC Moulding OFM	Weatherstrip	77.00.939.334	1	1	
		<b>39 333 8 23 1</b> 7239BSMH	WS-Moulding OEM	Weatherstrip	77 00 838 234	Т	1	
	Scan-No.							
	l							

	MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
					i	i			
	Megane I		'02 –						
		39 725 8 13 1		WS-Moulding OEM	Cover moulding	82 00 220 440	1	1	
		7260ASMH							
	→ See Sens	sors page 172.			I	l			
	Megane S	Scénic I	'96 <b>–</b> '03						
		39 334 8 13 1	30 - 03	WS-Installation kit	Cover moulding	77 00 419 692	1	3	
		7245AKMV		W3-IIIStaliation kit	Spacer 4000 302	77 00 419 092	2	3	/
	Luiocouc	1240AINIV			Space1 4000 302	11 00 000 010			'
		'		'					
	Megane S	Scénic II	·03 –						
	Part No.	39 728 8 13 2		WS-Moulding OEM	Cover moulding	82 00 097 498	1	1	
	Eurocode	7257ASMVI			_				/
	→ See Senso	ors page 172.							
			10.4						
	Modus		<u> </u>				_		×
-		39 041 8 13 1		WS-Moulding	Cover moulding upper	82 00 220 737	1	1	× ×
¥	Eurocode	7263ASMVT							*/ // ×
뿔	Dout No.	39 041 8 14 1		WS-Clip kit OEM	Clip	77 01 060 537	10	10	
		7263AKCV		WS-CIIP KIL OLIVI	Clip	77 01 000 557	10	10	
		sors page 172.							
	. 550 00110				·	·			
	Safrane		·92 – ·02						
	Part No.	39 532 8 13 1		WS-Moulding upper	Cover moulding upper soft	77 00 806 889	1	3	
	Eurocode	7235AKMHT		incl. Spacer	Spacer 4000 303	77 00 099 039	2		
		l				I		l	
	To do to the		/00						
	Twingo		·93 –				_		
		39 122 8 10 1		WS-Installation kit	Weatherstrip	77 00 820 273		4	
ď	Eurocode			OEM	Spacer 4000 301	77 00 789 274	2 ====		
ž	Scan-No.	1849-3			Inner pinchweld moulding	77 00 844 402	1 📟		
	Part No.	39 122 8 13 1		WS-Moulding incl.	Weatherstrip	77 00 820 273	1	3	
	Eurocode			Spacer OEM	Spacer 4000 301	77 00 789 274	2	3	
	Scan-No.			Opacoi ozm	Spacer root dol	77 00 700 27 1			
ON/	Part No.	39 122 8 13 4		WS-Moulding OEM	Cover moulding	77 00 820 273	1	1	
	Eurocode	7236AKMH							
Z									
		39 122 8 13 2		Inner pinchweld	Inner pinchweld moulding	77 00 844 402	1 🟻	1	
	Eurocode			moulding OEM,					
	Scan-No.	1849-2		Dealership					
		I			ı	I			
	Twingo		'93 <b>–</b>						~
		39 122 8 22 1	Ĭ	BL-Rubber OEM	Weatherstrip without	77 00 821 179	1	1	
		7236BSRH			insert				
	Scan-No.	1849-1							
					l				
	M	AE 200 /E00	-/00-						
		AE 380/500	·90 –	MO March III	0	F0.00.000 F0	4	4	
		82 105 8 13 1		WS-Moulding	Cover moulding	50 00 938 526	1	1	
	Scan-No.	7233ASML							7
	Scan-No.	1725							
- 1		1			•	1			
	Master I		'81 – 97'						
		82 141 8 11 1		WS-Rubber	Weatherstrip without insert	77 00 351 012	1	1	
	Eurocode	7223ASRV							//
	Master II		'97 –						
		82 143 8 10 1		WS-Installation kit	Cover moulding	77 00 351 250		3	
	Eurocode	7247ASMV1			Spacer	77 00 351 266	2		1/1/2
	Dort No	82 143 8 13 1		WS-Moulding	Cover moulding	77 00 351 250	1	1	'
		7247ASMV		**O-Modiumg	oover modiumg	11 00 351 250	_	_	
	Larooud	. Z I I / GIVIV							
		·		·	·			·	
	Midlum		'99 –						
		82 173 8 13 1		WS-Moulding	Cover moulding		1	1	19
		7253ASML							1/2
- 1	→ Self-adhe	sive spacer 4000 308	B usable. Pag	ge 120.				l	

#### RENAULT

REN	AULT						
MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Premium	<u> </u>						
	82 171 8 13 1	WS-Moulding	Cover moulding	50 10 220 413	1	1	
Eurocode	7242ASML						
1	I	I		1	l	1	
Trafic I	·82 – ·00						
Part No.	82 131 8 11 1	WS-Rubber	Weatherstrip without insert	77 00 765 629B	1	1	
Eurocode	7222ASRV						11/2
Scan-No.	1199						
	1	!				'	
Trafic II	·01 <i>-</i>						
	82 134 8 13 1	WS-Moulding	Cover moulding upper		1	1	
	7252ASMVT						
	Opel Vivaro Eurocode 6300ASMVT 4000 307 applicable.	•					
· · · · · · · · · · · · · · · · · · ·	Todo dor applicable.		'		'	•	
ROV	FR						
MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
200	·90 – ·95						
Part No.	09 218 8 13 1	WS-Moulding upper	Cover moulding upper	DCB 10011	1	1	
Eurocode	7016ASMHT	Wo Woulding apper	Cover moditaling appea	DOD 10011	_	-	
Scan-No.	1726						
	<b>09 218 8 14 1</b> 7016AKCH	Fastener kit	Fastener 6102 200	91517 SJ4 003	8 🗆	8	
Scan-No.							
	Honda Concerto, Scan 1654.						
			i				
200/25/		WO.M. LII	0 11: 1/ (0): 1	DOD 40074	4	4	
	<b>09 318 8 13 1</b> 7027ASMH	WS-Moulding soft	Cover moulding (soft) incl. Butyl	DCB 10074	1	1	/
Luiocode	7027ASWIT		Dutyi				
Part No.	09 318 8 13 2	WS-Moulding rigid	Cover moulding	DCB 10074	1	1	
Eurocode	7027ASMH1						
	I	I		I			
400/45/	' <b>MG ZS</b> '95 –						
	09 340 8 13 1	WS-Moulding upper	Cover moulding upper	73151 ST3 AE	1	1	*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\*\
Eurocode	7025ASMHT						
Doub No.	00 040 0444	WO Olive Lite	01:- 0400 050	045 44 070500	8 ▼	4.0	17
	<b>09 340 8 14 1</b> 7025AKCH	WS-Clip kit	Clip 2102 053 Clip 2102 055	915 11 ST3E00 915 20 SR3003		18	
Luiocouc	1025AROTI		Clip 2102 056	915 18 SR300			
MOED	data:						
MGF Roa	dster '95 – 09 318 8 13 1	WS-Moulding soft	Cover moulding without	DCB 100970	1	1	
	7027ASMT	W3-Modialing Soft	Aluminium channel	PMH	1	1	/
SAA	B						
MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
900/9-3	<b>3/5 doors</b> '94 – '02						
	42 125 8 13 1	WS-Moulding upper	Cover moulding upper	43 29 991	1	1	
Eurocode	7408ASMHT	0.11	O THE				
Scan-No.	1870						
I		I	I	I	l	l	
900/9-3	Cabriolet '94 – '03						
	42 128 8 13 1	WS-Moulding OEM,	Cover moulding metal black	43 70 557	1	1	
	7409ASMT	Dealership	<u></u>				

# CARS/TRUCKS

## SAAB

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	0.2 /4 4-							
	9-3/4 do	ors '02 – 42 151 8 13 2	WS-Moulding upper	Cover moulding upper	12 78 96 96	1	1	
		7411ASMST	The manner of the	and the second second		_	_	
			I					
	9000	'86 – '97						
	Part No. Eurocode	<b>42 133 8 13 2</b> 7406AKMH	WS-Moulding OEM	Track moulding left Track moulding right	92 78 318 92 78 300	1	5	//
	Scan-No.	1505-1		Cover moulding	42 50 320	1		
				Joint	92 78 334	2		
	Part No.	42 133 8 13 7	WS-Moulding outer	Cover moulding outer	425 0320	1	1	
	Eurocode	7406ASMH	OEM					
	Part No.	42 133 8 13 5	WS-Moulding left	Track moulding left	92 78 318	1	1	
	Eurocode	7406ASGHL	OEM	_				
	Part No.	42 133 8 13 6	WS-Moulding right	Track moulding right	92 78 300	1	1	
	Eurocode	7406ASGHR	OEM					
			I	I	l			
								SCANIA
		·						
	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	2 Sories	<b>82-113/143</b> '82 – '95						
		83 061 8 11 1	WS-Rubber	Weatherstrip without insert	03564 903	1	1	
	Eurocode	7505ASRL		·				
	Scan-No.	1118-1						
	4 Sovice	<b>94/114/144</b> '96 – '04						
		83 063 8 11 1	WS-Rubber	Weatherstrip without insert	1366 851	1	1	
	Eurocode	7506ASRL						
	I	I	I	I	I	l		
								SEAT
	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Alhambra	·96 –						
	Part No.	38 420 8 13 1	WS-Moulding upper	Cover moulding upper	7MO 853 306A	1	1	
	Eurocode	7606ASMVT						
ΕW	Part No.	38 420 8 16 1	WS-Fastener kit	Fastener	7M3 853 585	10 🗘	10	0,00,000
M N		7606AKCVB ner page 122.						77,7,000
				·				
Š	Alhambra Part No	'03 – 38 420 8 13 2	WS-Moulding kit	Waterpannel moulding kit	left	3	3	
Ш Z		7606AKMVB	lower OEM	Waterpainier mountaing inc	centre	Ŭ		
_					right			
	Alhambra							
		<b>38 420 8 22 1</b> 7606BSMV	BL-Moulding OEM, Dealership	Weatherstrip	7M0 845 533C	1	1	
		of Poods Siviv	Dealership					
	Cordoba	<b>3/5 doors</b> '94 – '00						
		38 119 8 14 1	WS-Clip kit	Clip 3106 002	191 853 733A	8	8	/•
	Eurocode Scan-No.	7604AKCH1						/:/
	Scall-NO.	1000-1						

## SEAT

MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Ibino I		105 100						
Ibiza I Part No.	38 015 8 11 1	'85 – '93	WS-Rubber	Weatherstrip without insert	SE022515160A	1	1	
Eurocode	7601ASRH		W3-Rubbel	weatherstrip without insert	3L022313100A	1		/
Scan-No.	1396							
Ibiza II		'93 – '01						
Part No.	38 017 8 13 3		WS-Moulding upper	Cover moulding upper	1L0 845 121	1	1	
Eurocode	7604ASMHT		OEM					-/
Scan-No.	1866-2							
Part No.	38 017 8 14 1		WS-Clip kit	Clip 3106 002	191 853 733A	8 •	8	
	7604AKCH			0 6 2 2 2 2 2 2	101 000 7 007			
Scan-No.	1866-1							
→ See clips	page 122.			I				
Ibiza II		'93 <b>–</b> '01						_
Part No.	38 017 8 10 1		WS-Installation kit	Cover moulding upper	1L0 845 121	1	3	
Eurocode	7604AKMH2		OEM	Adhesive profile left	1L0 853 791	1		
Scan-No.	1866-5			Adhesive profile right	1L0 853 791	1		"
				I				
Marbella	/Terra	'87 – '03						
Part No.	38 018 8 11 1		WS-Rubber	Weatherstrip without insert	440 3813	1	1	
	7600ASRH							
Scan-No.		4400						
AISO IOI	Fiat Panda, Scan-No	. 1106.		T .	1		ı	
Toledo I		'91 – '00						( )
Part No.	38 031 8 13 1		WS-Moulding upper	Cover moulding upper	1L0 845 121	1	1	./
Eurocode Scan-No.	7603ASMHT 1763		OEM					/:/
Scan-No.	1703							14
Part No.	38 031 8 13 2		WS-Adhesive profile	Adhesive profile left	1L0 853 791	1	2	
Eurocode	7603AKMHI		left + right OEM	Adhesive profile right	1L0 853 791	1		
Scan-No.	1763-1							
Part No.	38 031 8 14 1		WS-Clip kit	Clip 3106 002	191 853 733A	8 •	8	
	7603AKCH			0p 0.100 002	101 000 1 00/1	•		
Scan-No.	1763-3							
→ See clips	page 122.							
Toledo II	/Leon	'99 – '05						· • • • • • • • • • • • • • • • • • • •
	38 033 8 14 1		WS-Clip kit A-Pillar	Clip	1M0 854 541A		12	/ <del>:</del> /
	7608AKCSS		OEM		1MO 854 719A	2 X		/-
→ See clips	page 122.							
SSA	NGYONG							
MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Musso		·95 – ·02						

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Musso	<u>'95 – '02</u>						
	Part No.	45 001 8 13 1	WS-Moulding upper	Cover moulding upper	791 220 5000	1	1	
	Eurocode	3007ASMRT	OEM					
	Kvron	·06 –						
NEW		45 014 8 13 1	WS-Moulding OEM	Cover moulding	791 200 9001	1	1	/
٣	Eurocode	3020ASMR		<u> </u>				
_								
	Rexton	·02 –						
2			WO.M. LII		704 040 0004	4	4	
		45 010 8 13 1	WS-Moulding upper	Cover moulding upper	791 210 8001	1	1	
NEW	Eurocode	3015ASMR	OEM					
	Rodius	·05 –						
N E N	Part No.		WS-Moulding OEM	Cover moulding	791 202 1000	1	1	/
ш		3019ASMV						
Z								

# CARS/TRUCKS

## SUBARU

MODEL		YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Imprezza	Sedan	10/'00 –						
Part No.	44 076 8 13 1		WS-Moulding OEM	Cover moulding	65058 FE010	1	1	
Eurocode	7926ASMS							
-	_							
Imprezza	Estate 44 077 8 13 1	10/'00 –	WC Maulding OFM	Cavernerulding	CEOES FEOO	1	1	
1 1 1	7927ASMH		WS-Moulding OEM	Cover moulding	65058 FE000	Т	1	
Eurocode	7927ASIVIII							
Forester		'97 – '02						
	44 100 8 13 1		WS-Moulding upper	Cover moulding upper	65023 FC010	1	1	
	7923ASMRT			a construction of the cons		_	-	:/
Part No.	44 100 8 14 1		WS-Clip kit	Clip 2109 007	91017 FA010	8 •	8	
Eurocode	7923AKCR							
Forester		·02 <i>-</i>						
	44 102 8 13 1		WS-Moulding OEM	Cover moulding	65058 SA000	1	1	
Eurocode	7928ASMR							
			1	1			1	
Legacy I	44 050 8 13 1	'90 – '94	WS-Moulding upper	Cover moulding metal	65023 AA030	1	8	••••••
	7912ASMST		incl. Clip	Cover moulding metal Clip 2109 001	00023 AAU3U	1 7 •	0	
Scan-No.			ilici. Clip	Clip 2103 001		, •		1
D (N	44.050.0444		WO OF 1.1	01: 0400 004	05005 440404	0 -	0	
	<b>44 050 8 14 1</b> 7912AKCST		WS-Clip kit	Clip 2109 001	65025 AA0404	8 •	8	
Scan-No.								
Legacy II		'94 – '98						
	44 051 8 13 1	'94 – '98	WS-Moulding upper	Cover moulding upper	65023 AC000	1	1	
Part No. Eurocode	<b>44 051 8 13 1</b> 7919ASMST	'94 – '98 —		Cover moulding upper	65023 AC000	1	1	
Part No.	<b>44 051 8 13 1</b> 7919ASMST	'94 – '98 <u></u>		Cover moulding upper	65023 AC000	1	1	
Part No. Eurocode Scan-No.	<b>44 051 8 13 1</b> 7919ASMST	·94 – ·98		Cover moulding upper  Clip 2109 002	65023 AC000 65025 AC050	1		
Part No. Eurocode Scan-No. Part No.	<b>44 051 8 13 1</b> 7919ASMST 1909	·94 – ·98	WS-Moulding upper	Clip 2109 002 Clip 2109 003		1 <b>•</b> 1 $\triangle$	22	
Part No. Eurocode Scan-No. Part No.	<b>44 051 8 13 1</b> 7919ASMST 1909 <b>44 051 8 14 1</b> 7919AKCS	·94 – ·98	WS-Moulding upper	Clip 2109 002	65025 AC050	1 • 1 △ 2 □	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	<b>44 051 8 13 1</b> 7919ASMST 1909 <b>44 051 8 14 1</b> 7919AKCS	·94 – ·98	WS-Moulding upper	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005	65025 AC050 65025 AC060 65026 AC040 65026 AC010	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	<b>44 051 8 13 1</b> 7919ASMST 1909 <b>44 051 8 14 1</b> 7919AKCS 1909-1	·94 – ·98	WS-Moulding upper	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	<b>44 051 8 13 1</b> 7919ASMST 1909 <b>44 051 8 14 1</b> 7919AKCS 1909-1	·94 – ·98	WS-Moulding upper	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000 65026 AC050	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou	<b>44 051 8 13 1</b> 7919ASMST 1909 <b>44 051 8 14 1</b> 7919AKCS 1909-1 Ildings reusable.		WS-Moulding upper	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou	<b>44 051 8 13 1</b> 7919ASMST 1909 <b>44 051 8 14 1</b> 7919AKCS 1909-1 Ildings reusable.	·94 – ·98	WS-Moulding upper	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000 65026 AC050 65026 AC060	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou	44 051 8 13 1 7919ASMST 1909 44 051 8 14 1 7919AKCS 1909-1 Ildings reusable.		WS-Moulding upper	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000 65026 AC050	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou	<b>44 051 8 13 1</b> 7919ASMST 1909 <b>44 051 8 14 1</b> 7919AKCS 1909-1 Ildings reusable.		WS-Moulding upper	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000 65026 AC050 65026 AC060	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou	44 051 8 13 1 7919ASMST 1909 44 051 8 14 1 7919AKCS 1909-1 Ildings reusable. 44 057 8 13 1 7925ASMS	.66, – 66,	WS-Moulding upper	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000 65026 AC050 65026 AC060	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou	44 051 8 13 1 7919ASMST 1909 44 051 8 14 1 7919AKCS 1909-1 Ildings reusable. 44 057 8 13 1 7925ASMS		WS-Moulding upper WS-Clip kit WS-Moulding OEM	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012 Cover moulding	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000 65026 AC050 65026 AC060	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou  Legacy III Part No. Eurocode  Legacy IV Part No.	44 051 8 13 1 7919ASMST 1909 44 051 8 14 1 7919AKCS 1909-1 Ildings reusable. 44 057 8 13 1 7925ASMS	.66, – 66,	WS-Moulding upper	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000 65026 AC050 65026 AC060	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou  Legacy III Part No. Eurocode  Legacy IV Part No.	44 051 8 13 1 7919ASMST 1909  44 051 8 14 1 7919AKCS 1909-1 Idings reusable.  44 057 8 13 1 7925ASMS	.66, – 66,	WS-Moulding upper WS-Clip kit WS-Moulding OEM	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012 Cover moulding	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000 65026 AC050 65026 AC060	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou  Legacy III Part No. Eurocode  Legacy IV Part No.	44 051 8 13 1 7919ASMST 1909  44 051 8 14 1 7919AKCS 1909-1 Idings reusable.  44 057 8 13 1 7925ASMS	.66, – 66,	WS-Moulding upper WS-Clip kit WS-Moulding OEM	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012 Cover moulding	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000 65026 AC050 65026 AC060	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou  Legacy III Part No. Eurocode  Legacy IV Part No. Eurocode  Justy I 5 6 Part No.	44 051 8 13 1 7919ASMST 1909  44 051 8 14 1 7919AKCS 1909-1 Idings reusable.  44 057 8 13 1 7925ASMS  44 059 8 13 1 7929ASMS	,03 – ,03 – 66,	WS-Moulding upper WS-Clip kit WS-Moulding OEM	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012 Cover moulding	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC000 65026 AC050 65026 AC060	1	22	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou  Legacy III Part No. Eurocode  Legacy IV Part No. Eurocode  Justy I 5 6 Part No.	44 051 8 13 1 7919ASMST 1909  44 051 8 14 1 7919AKCS 1909-1 Iddings reusable.  44 057 8 13 1 7925ASMS  44 059 8 13 1 7929ASMS	,03 – ,03 – 66,	WS-Moulding upper  WS-Clip kit  WS-Moulding OEM  WS-Moulding OEM	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012  Cover moulding  Cover moulding	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC050 65026 AC060 65026 AC060 65058 AE000	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou  Legacy III Part No. Eurocode  Legacy IV Part No. Eurocode  Justy I 5 Part No. Eurocode	44 051 8 13 1 7919ASMST 1909  44 051 8 14 1 7919AKCS 1909-1 Iddings reusable.  44 057 8 13 1 7925ASMS  44 059 8 13 1 7929ASMS	,69 – ,03 – ,03 –	WS-Moulding upper  WS-Clip kit  WS-Moulding OEM  WS-Moulding OEM	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012  Cover moulding  Cover moulding	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC050 65026 AC060 65026 AC060 65058 AE000	1	1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou  Legacy III Part No. Eurocode  Legacy IV Part No. Eurocode  Justy I 5 Part No. Eurocode	44 051 8 13 1 7919ASMST 1909  44 051 8 14 1 7919AKCS 1909-1 Idings reusable.  44 057 8 13 1 7925ASMS  44 059 8 13 1 7929ASMS  doors 44 227 8 13 1 7922ASMH	,03 – ,03 – 66,	WS-Moulding Upper  WS-Clip kit  WS-Moulding OEM  WS-Moulding OEM	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012  Cover moulding  Cover moulding	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC050 65026 AC060 65026 AC060 65058 AE000	1	1 1	
Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  → Side mou  Legacy III Part No. Eurocode  Legacy IV Part No. Eurocode  Justy I 5 o Part No. Eurocode  Justy II 5 Part No.	44 051 8 13 1 7919ASMST 1909  44 051 8 14 1 7919AKCS 1909-1 Iddings reusable.  44 057 8 13 1 7925ASMS  44 059 8 13 1 7929ASMS	,69 – ,03 – ,03 –	WS-Moulding upper  WS-Clip kit  WS-Moulding OEM  WS-Moulding OEM	Clip 2109 002 Clip 2109 003 Clip 2109 004 Clip 2109 005 Clip 2109 010 Clip 2109 011 Clip 2109 012  Cover moulding  Cover moulding	65025 AC050 65025 AC060 65026 AC040 65026 AC010 65026 AC050 65026 AC060 65026 AC060 65058 AE000	1	1	

## SUZUKI

	MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
		an <b>3/5 doors</b> '95 – '01						
		<b>55 097 8 13 1</b> 8013ASMH	WS-Moulding OEM	Cover moulding	84611 70F005PK	1	1	/
	Eurocoue	OUTSASIMIT			70F005FK			
	Baleno	·95 – ·02						
		55 105 8 13 1	WS-Moulding	Cover moulding	84611 60 G00	1	1	
	Eurocode	8016ASMH	J					
	Grand Vit				0.4044.05.000			
		<b>55 803 8 13 1</b> 8020ASMR	WS-Moulding	Cover moulding	84611 65 D00	1	1	
					l			
_	Grand Vit	ara II '05 –						
<b>≥</b>		55 805 8 13 1	WS-Moulding OEM	Cover moulding	84611 65 J00	1	1	/
Z	Eurocode	8032ASMR						
	Ignis I	·01 – ·03						
	Part No.		WS-Moulding OEM	Cover moulding	84611 80 G00	1	1	
	Eurocode	8027ASMH		_				
Z.	Ignis II	603 – 603 –	WC Maulding OFM	Cover modulding	84611 86 G00	1	4	
Щ		8030ASMH	WS-Moulding OEM	Cover moulding	84011 80 G00	1	1	/
_					I			
	Jimny	'98 –						
	Part No.		WS-Moulding	Cover moulding	84611 81 A00	1	1	
	Eurocode	8022ASMR						
	Liana	·01 <i>-</i>						
		55 881 8 13 1	WS-Moulding OEM	Cover moulding	84512 54G00	1	1	
	Eurocode	8028ASMV						
		<b>13 + Samurai</b> '82 - '89 <b>98 003 8 11 1</b>	WS-Rubber	Weatherstrip without insert	84611 70 A00	1	1	
	Eurocode		W3-Rubbel	weatherstrip without miser t	04011 70 A00	1	1	/
	Scan-No.	10016						
					'			
	Swift II Part No.	'86 – '89 <b>98 005 8 13 1</b>	WS-Installation kit	Cover moulding upper	84611 86000	1	4	
	Eurocode	8007AKMH	Wo motanation lite	Cover moulding right	84614 86000	1	'	
	Scan-No.	1507		Cover moulding left Cover moulding lower	84614 86000 84612 86000	1		
	0161111	0.1		- 110 monanty long	1 .012 00000	_		
	Swift III	3 doors '89 – '05 98 006 8 13 1	WS-Moulding	Cover moulding	84611 60 B01	1	1	
	Eurocode	8011ASMH				_	_	/
	Scan-No.	1602						
	0161111	4 /F .l		·				
		4/5 doors '89 - '05 98 006 B8 13 1	WS-Moulding	Cover moulding	84611 62 B01	1	1	
	Eurocode	8012ASMH				_		
	Scan-No.	1629						
	Cwift IV-6	) /E doors (05						
>		3/5 doors '05 – 55 301 8 13 1	WS-Moulding OEM	Cover moulding upper	84512 63J00	1	1	
N N		8013ASMHT	3 -	0				
		l	l	I	I	I	I	

## CARS/TRUCKS

#### SUZUKI

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
MODEL	T E OI		JOHN ONENTO	ORIGINAL NO.	100.	Oitti	
Vitara I	·88 – '93						<u>د</u>
Part No.	<b>98 003 B8 13 1</b> 8010AKMR	WS-Installation kit	Cover moulding upper Cover moulding right Cover moulding left Corner Joints	84611 61 A00 84613 61 A00 84614 61 A00 84615 61 A00	1 1 1 2	5	
Vitara II	·93 – ·98	3					
	8010ASMR	WS-Moulding OEM	Cover moulding	84611 56 B00	1	1	
	<b>98 003 B8 16 1</b> 8010AKSS 1598-1	Fastener kit	Fastener 6207 001	0940913025PK	9 💠	9	
Wagon R	·97 – ·00						
Part No. Eurocode	<b>55 821 8 13 1</b> 8019ASMV	WS-Moulding OEM	Cover moulding	84611 75F00	1	1	
Wagon R	·00 ·						
Part No.		WS-Moulding	Cover moulding	84611 83E01	1	1	
V00	·96 – ·98						~ -
Part No.		WS-Moulding OEM	Cover moulding	84611 79E00	1	1	
							TOYOTA
MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	ТОҮОТА
	<b>YEAR</b> '89 – '96		COMPONENTS	ORIGINAL NO.	PCS.	UNIT	TOYOTA
WODEL  4 Runner Part No.	'89 – '96 <b>86 035 8 13 2</b> 8271ASMRTC		COMPONENTS  Cover moulding upper	ORIGINAL NO. 75531 89106	PCS.	UNIT	
4 Runner Part No. Eurocode Scan-No.	'89 – '96 <b>86 035 8 13 2</b> 8271ASMRTC	WS-Moulding upper					TOYOTA
4 Runner Part No. Eurocode Scan-No. Part No.	'89 - '96' <b>86 035 8 13 2</b> 8271ASMRTC 1637-2 <b>86 035 8 13 1</b> 8271ASMRTB	WS-Moulding upper chrome	Cover moulding upper	75531 89106	1	1	
A Runner Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	*89 - '96 <b>86 035 8 13 2</b> 8271ASMRTC 1637-2 <b>86 035 8 13 1</b> 8271ASMRTB 1637-1 <b>86 035 8 14 1</b> 8271AKCR 1637/1724 nded foam rubber	WS-Moulding upper chrome  WS-Moulding upper	Cover moulding upper  Cover moulding upper  Clip 2106 036 Clip 2206 061 Clip 2206 062 Clip 2206 063	75531 89106	1 1 4 × 6 ⇔ 6 Ø 5 ▲	1	
A Runner Part No. Eurocode Scan-No. Part No. Eurocode Scan-No. Part No. Eurocode Scan-No.	*89 - '96 <b>86 035 8 13 2</b> 8271ASMRTC 1637-2 <b>86 035 8 13 1</b> 8271ASMRTB 1637-1 <b>86 035 8 14 1</b> 8271AKCR 1637/1724 nded foam rubber	WS-Moulding upper chrome  WS-Moulding upper black	Cover moulding upper  Cover moulding upper  Clip 2106 036 Clip 2206 061 Clip 2206 062	75531 89106 75531 89105 75548 16030 75545 89102 75545 89103 75546 89106 75547 89108 75547 89104 75547 89105 75547 89106	1 1 4 <b>X</b> 6 � 6 Ø	1	
A Runner Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.	*89 - '96  86 035 8 13 2  8271ASMRTC 1637-2  86 035 8 13 1  8271ASMRTB 1637-1  86 035 8 14 1  8271AKCR 1637/1724  nded foam rubber	WS-Moulding upper chrome  WS-Moulding upper black  WS-Clip kit	Cover moulding upper  Cover moulding upper  Clip 2106 036 Clip 2206 061 Clip 2206 062 Clip 2206 063 Clip 2206 064 Clip 2206 065 Clip 2206 066 Clip 2206 067 Clip 2206 068 Clip 2206 068 Clip 2206 069	75531 89106 75531 89105 75548 16030 75545 89102 75545 89103 75546 89106 75547 89108 75547 89104 75547 89105 75547 89106	1	1	
Avensis Part No.	*89 – '96 86 035 8 13 2 8271ASMRTC 1637-2  86 035 8 13 1 8271ASMRTB 1637-1  86 035 8 14 1 8271AKCR 1637/1724 nded foam rubber 003.	WS-Moulding upper chrome  WS-Moulding upper black  WS-Clip kit	Cover moulding upper  Cover moulding upper  Clip 2106 036 Clip 2206 061 Clip 2206 062 Clip 2206 063 Clip 2206 064 Clip 2206 065 Clip 2206 066 Clip 2206 067 Clip 2206 068 Clip 2206 068 Clip 2206 069	75531 89106 75531 89105 75548 16030 75545 89102 75545 89103 75546 89106 75547 89108 75547 89104 75547 89105 75547 89106	1	1	
Avensis Part No. Eurocode	*89 - '96  86 035 8 13 2  8271ASMRTC 1637-2  86 035 8 13 1  8271ASMRTB 1637-1  86 035 8 14 1  8271AKCR 1637/1724  nded foam rubber 003.  *98 - '0'  47 031 8 13 2  8305ASMH	WS-Moulding upper chrome  WS-Moulding upper black  WS-Clip kit  WS-Moulding	Cover moulding upper  Cover moulding upper  Clip 2106 036 Clip 2206 061 Clip 2206 062 Clip 2206 063 Clip 2206 065 Clip 2206 066 Clip 2206 067 Clip 2206 068 Clip 2206 069 Clip 2206 070	75531 89106  75531 89105  75548 16030 75545 89102 75545 89103 75546 89106 75547 89103 75547 89104 75547 89105 75547 89106 75547 89106	1  4 × 6 6 Ø 6 Ø 4 1 0 1 1 4 1	1 1 38	
Avensis I Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Avensis I Part No. Eurocode	*89 – '96  86 035 8 13 2  8271ASMRTC 1637-2  86 035 8 13 1  8271ASMRTB 1637-1  86 035 8 14 1  8271AKCR 1637/1724  mded foam rubber 003.   *98 – '03  47 031 8 13 2  8305ASMH	WS-Moulding upper chrome  WS-Moulding upper black  WS-Clip kit  WS-Moulding  WS-Moulding	Cover moulding upper  Cover moulding upper  Clip 2106 036 Clip 2206 061 Clip 2206 062 Clip 2206 063 Clip 2206 065 Clip 2206 066 Clip 2206 067 Clip 2206 068 Clip 2206 069 Clip 2206 070	75531 89106  75531 89105  75548 16030 75545 89102 75545 89103 75546 89106 75547 89103 75547 89104 75547 89105 75547 89106 75547 89106	1  4 × 6 6 Ø 6 Ø 4 1 0 1 1 4 1	1 1 38	
Avensis   Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Avensis   Part No. Eurocode	*89 - '96  86 035 8 13 2  8271ASMRTC 1637-2  86 035 8 13 1  8271ASMRTB 1637-1  86 035 8 14 1  8271AKCR 1637/1724 nded foam rubber 003.  47 031 8 13 2  8305ASMH	WS-Moulding upper chrome  WS-Moulding upper black  WS-Clip kit  WS-Moulding  WS-Moulding without rain channel OEM	Cover moulding upper  Cover moulding upper  Clip 2106 036 Clip 2206 061 Clip 2206 062 Clip 2206 063 Clip 2206 064 Clip 2206 065 Clip 2206 066 Clip 2206 067 Clip 2206 068 Clip 2206 069 Clip 2206 070  Cover moulding	75531 89106  75531 89105  75548 16030 75545 89102 75545 89103 75546 89103 75546 89103 75547 89108 75547 89105 75547 89106 75547 89107	1  4 × 6 6 6 2 5 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 38	
Avensis   Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Part No. Eurocode Scan-No.  Avensis   Part No. Eurocode	*89 – '96  86 035 8 13 2  8271ASMRTC 1637-2  86 035 8 13 1  8271ASMRTB 1637-1  86 035 8 14 1  8271AKCR 1637/1724 Inded foam rubber 003.  47 031 8 13 2  8305ASMH  *03  47 036 8 13 3  8346ASMH or Pads see Sensor Parts page	WS-Moulding upper chrome  WS-Moulding upper black  WS-Clip kit  WS-Moulding  WS-Moulding without rain channel OEM	Cover moulding upper  Cover moulding upper  Clip 2106 036 Clip 2206 061 Clip 2206 062 Clip 2206 063 Clip 2206 064 Clip 2206 065 Clip 2206 066 Clip 2206 067 Clip 2206 068 Clip 2206 069 Clip 2206 070  Cover moulding	75531 89106  75531 89105  75548 16030 75545 89102 75545 89103 75546 89103 75546 89103 75547 89108 75547 89105 75547 89106 75547 89107	1  4 × 6 6 6 2 5 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 38	
Avensis I Part No. Eurocode Scan-No.  Avensis I Part No. Eurocode Avensis II Part No. Eurocode Avensis II Part No. Eurocode Part No. Eurocode Avensis II Part No. Eurocode	*89 – '96  86 035 8 13 2  8271ASMRTC 1637-2  86 035 8 13 1  8271ASMRTB 1637-1  86 035 8 14 1  8271AKCR 1637/1724 Inded foam rubber 003.  47 031 8 13 2  8305ASMH  *03  47 036 8 13 3  8346ASMH or Pads see Sensor Parts page	WS-Moulding upper chrome  WS-Moulding upper black  WS-Clip kit  WS-Moulding  WS-Moulding without rain channel OEM	Cover moulding upper  Cover moulding upper  Clip 2106 036 Clip 2206 061 Clip 2206 062 Clip 2206 063 Clip 2206 064 Clip 2206 065 Clip 2206 066 Clip 2206 067 Clip 2206 068 Clip 2206 069 Clip 2206 070  Cover moulding	75531 89106  75531 89105  75548 16030 75545 89102 75545 89103 75546 89103 75546 89103 75547 89108 75547 89105 75547 89106 75547 89107	1  4 × 6 6 6 2 5 4 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	1 1 38	

MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Avensis \	<b>Verso</b> 08/'01-						
Part No.		WS-Moulding upper	Cover moulding upper	75533 44040	1	1	
Eurocode	8333ASMVT						
					I		
Camry II	<b>4trg/Estate</b> '87 – '90						
	47 345 8 13 1	WS-Moulding upper	Cover moulding upper	75531 32031	1	1	/•
Eurocode		chrome	cover meananing apper	. 0001 02001	_	-	//
Scan-No.	1497-1						/-
	47 345 8 14 1	WS-Clip kit	Clip 2106 038	75548 20060	8 • 8 □	18	
Scan-No.	8258AKCS		Clip 2106 058 Clip 2106 059	75545 32020 75961 32010	1 X		
ocan ito.	1401		Clip 2106 060	75962 32010	1 🛆		
	•						
	4 doors/Estate '91 - '96						
	47 346 8 13 1	WS-Moulding upper	Cover moulding upper	75531 33010	1	1	
Eurocode		chrome					
Scan-No.	1764-1						4
Part No.	47 346 8 13 2	WS-Moulding upper	Cover moulding upper	75531 33030	1	1	
Eurocode		black			-	-	
Scan-No.							
	47 346 8 14 1	WS-Clip kit	Clip 2106 036	75548 20110	6 🗆	12	
Eurocode Scan-No.	8278AKCS 1764		Clip 2106 102	75545 32030	6		
Scan-No.	1764						
	1		1				
Camry IV	<b>4 doors</b> '96 – '01						
	47 349 8 13 1	WS-Moulding upper	Cover moulding upper	75531 33041	1	1	
Eurocode	8302ASMST						
I		I	I	I	I	I	
Camry V	<b>4 doors</b> '01 –						
	47 350 8 13 1	WS-Moulding	Cover moulding	75531 33050	1	1	/
Eurocode	8339ASMS						/
					l		
Carina III	'88 <b>–</b> '92						
	47 226 8 13 1	WS-Installation kit	Cover moulding left	75534 20280	1	2	
Eurocode		OEM, Dealership	Cover moulding right	75533 20270	1	-	/
Scan-No.	1571		incl. clips				
Carina IV	'AT '02 '07						
	<b>AT</b> '92 – '97 <b>47 229 8 13 1</b>	WS-Moulding	Cover moulding	75533 20320	1	1	
	8282ASMH	Wo Woulding	cover modianig	7 3333 20320	_	-	/
Scan-No.							
Calian IV	AT160						
Celica IV	<b>AT160</b> '86 - '89 <b>47 213 8 14 1</b>	WS-Clip kit	Clip 2106 008	75545 20060	6	22	× × × × × × × × ×
	8253AKCC	MO-OILD KIL	Clip 2106 008 Clip 2106 021	75545 20060	5 🗆		/*
Scan-No.			Clip 2106 038	75548 20060	11 ×		\\$\\
		I		1			
Oolles V	CT400						
Celica V	<b>ST182</b> '90 - '93 <b>47 216 8 13 1</b>		Cover moulding	75524 20250	1	1	
	8269ASMC	WS-Moulding	Cover moulaing	75531 20350	1	1	/
Scan-No.							
0 11 20	07000						
Celica VI		MC Maulding	Course manualdi:	75524 00000	1	4	
	<b>47 218 8 13 1</b> 8286ASMC	WS-Moulding	Cover moulding	75531 20380	1	1	
Scan-No.							
300.11101							
Celica VI							
	47 219 8 13 1	WS-Moulding	Cover moulding	75531 20370	1	1	
Eurocode	8316ASMC						
t .	·	t and the second	1	1	1		

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
		E80/KE80 Sedan '83-'86		01:- 0400 000	75545 40040	-	0.5	•×וו×ו
		<b>47 240 8 14 1</b> 8247AKCS	WS-Clip kit	Clip 2106 002 Clip 2106 015	75545 12040 75546 12020	5 ● 8 □	25	× × ×
	Scan-No.			Clip 2106 039	75548 22060	12 X		/\(\tau_{\text{\tin}\text{\tin}\text{\ti}}\\ \tittt{\text{\text{\text{\text{\text{\texi}\text{\text{\text{\text{\texi}\text{\text{\text{\texi}\til\titt{\text{\ti}\tiint{\text{\texit}\titt{\text{\texi}\titt{\text{\text{\texi{\texi{\text{\ti}\}\tit
	→ Recomm	ended foam rubber 5 007-15/5 0	03.					
	Corolla A	<b>E82 LTB</b> '83 – '86						
ŀ		47 242 8 14 1	WS-Clip kit	Clip 2106 002	75545 12040	5 •	25	× × × × × × × ×
	Scan-No.	8248AKCH 1314		Clip 2106 015 Clip 2106 039	75546 12020 75548 22060	8 □ 12 <b>X</b>		
	→ Recomm	ended foam rubber 5 007-15/5 0	03.					
	Corolla A	<b>E95 Estate</b> '87 – '92						
	Part No.	47 374 8 14 1	WS-Clip kit	Clip 2106 036	75548 16030	8 •	18	/ <del>*</del>
	Eurocode Scan-No.	8259AKCH		Clip 2106 079 Clip 2106 097	75546 12060 75961 12010	8 🗆 1 🗶		
ľ		Toyota Corolla EE90 Scan-No. 15	39 and Toyota Corolla	Clip 2106 100	15962 12010	1 🛆		
	EE92 Scan-							
		<b>E90 Sedan/Comp.</b> '87-'92	WS-Moulding upper	Cover moulding upper	75531 12990	1	1	
		8259ASMHT	black	cover modiums apper	7.0001 12000	-		//
	Scan-No.	1539-1						/•
		47 371 8 13 1	WS-Moulding upper	Cover moulding upper	75531 12300	1	1	
	Eurocode Scan-No.	8259ASMHTC 1539-2	chrome					
	Part No.	47 371 8 14 1	WS-Clip kit	Clip 2106 036	75548 16030	8 •	18	
		8259AKCH		Clip 2106 079	75546 12060	8 🗆		
	Scan-No.  → Univ pro	l 1539 ifile 5 001/5 021 applicable.		Clip 2106 091 Clip 2106 100	75961 12010 75962 12010	1 X 1 A		
	Corolla E	5 023 applicable for upper mould <b>E92</b> '87 – '92		Cover moulding upper	75531 12310	1	1	
		8260ASMH	WS-Moulding upper black	Cover moulding upper	75551 12510	1	1	<i>i</i>
	Scan-No.	1540						/-
		47 372 8 14 4	WS-Clip kit	Clip 2106 036	75548 16030	8 •	18	
	Scan-No.	8260AKCH 1540-1		Clip 2106 079 Clip 2106 091	75546 12060 75961 12010	8 🗆 1 🗶		
	→ Univ. pro	file 5 001/5 021 applicable.		Clip 2106 100	75962 12010	1 🛆		
	Recommend	ded foam rubber 5 007-15/5 003.						
	Corolla K							
ł		<b>47 376 8 13 1</b> 8280ASMH	WS-Moulding	Cover moulding	75503 12090	1	1	
		025010						
	Corolla K							
		<b>47 379 8 13 1</b> 8281ASMHT	WS-Moulding upper OEM	Cover moulding upper	75531 12490	1	1	/
	Corolla E		MC Moulding	Cayor monulding	75524 42640	1	1	
		<b>47 576 8 13 2</b> 8304ASMH1	WS-Moulding	Cover moulding	75531 12640	1	1	
=	Corolla E	<b>12 3/5 doors</b> '02 –						
-         		47 584 8 13 2	WS-Moulding OEM	Cover moulding	75531 02060	1	1	
Z		8340ASMH sors page 172.						
	Corolla E	<b>12 4 doors/Estate</b> '02 –						
	Part No.	47 584 8 13 1	WS-Moulding	Cover moulding	75533 12480	1	1	0
		8340ASMS sors page 172.						
- 1	→ Jee 3ens	pois page 112.	l .	T.	I control of	1	1	

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	WODEL	TEAR	ITPE	COMPONENTS	ORIGINAL NO.	PUS.	UNII	
	Corolla E	<b>12 Verso l</b> '02 – '04						
		47 588 8 13 1	WS-Moulding	Cover moulding	75533 13040	1	1	•
		8342ASMV ors page 172.						
Š	Corolla R		MC Mandaline OFM	Oncome and alling	75522.0504.0	4	4	
ш		<b>47 589 8 13 1</b> 8356ASMV	WS-Moulding OEM	Cover moulding	75533 0F010	1	1	
Z	→ See Sens	ors page 172.						
	Hi-Ace LH	<b>10</b> '89 – '95						
			WS-Rubber	Weatherstrip without insert	56121 95J04	1	1	
				·				/
	Scan-No.	1653						
	'							
~	Hi-Ace LH		WO M . LI' . O EM	0 18	75504 00004	4	4	
Ē		<b>86 017 8 13 2</b> 8295ASMV1	WS-Moulding OEM	Cover moulding	75531 26021	1	1	\
Z								"
	Hi-Ace LH	<b> 102</b> 95 – 08/'97 –						
		86 017 8 13 1	WS-Moulding	Cover moulding	75531 26020	1	1	
	Eurocode	8295ASMV	Ū					
			I	I	l .	l	I	
	Hi-Lux JN:	<b>145/165</b> '89 – '97						
			WS-Rubber	Weatherstrip without insert	J56 121 89120	1	1	
	Scan-No.	8266ASRV 1605						
	→ Also for V	/W Taro Pickup Scan-No. 1605-1.						
	Hi-Lux I N	<b>145/165</b> '97 – '05						~
	Part No.		WS-Moulding chrome	Cover moulding	75531 35120	1	1	
	Eurocode	8308ASMPC	OEM, Dealership					/
	Part No.	86 037 8 13 2	WS-Moulding black	Cover moulding	75531 35170	1	1	
	Eurocode	8308ASMPB	OEM, Dealership					
						l		
-	Hi-Lux	·05 <i>-</i>						
S			WS-Moulding OEM	Cover moulding	75531 0K010	1	1	
Z	Eurocode	8367ASMP						1
		110100						
		ser HDJ80 '91 - '96 86 056 8 11 1	WS-Rubber	Weatherstrip without insert	56121 60080	1	1	
	Eurocode	8274ASRR	Workubber	Weddiersuip without moort	30121 00000	_	_	\
	Scan-No.	1671						
		 	<u> </u>		· · · · · · · · · · · · · · · · · · ·		1	
	Landcruis							
		<b>86 057 8 13 1</b> 8301ASMR	WS-Moulding	Cover moulding	75531 60010	1	1	/
	Luiocodo	OOOTAGIIII						
	Landoruio	er HDJ100 '98 – '03						
		86 159 8 13 1	WS-Moulding upper	Cover moulding	75531 60020	1	1	
		8306ASMRT	3					
I	→ See Sens	ors page 172.		l			I	
-	Landcruis	er J12 '03 –						
E		86 160 8 13 1	WS-Moulding upper	Cover moulding	75531 60040	1	1	
Z	Eurocode	8341ASMRT	OEM					
	MR2 Cou	pé II '91 – '99 47 246 8 13 1	WS-Moulding	Cover moulding	75533 17030	1	1	
		8272ASMC	wwo-woulding	Cover modiumg	13333 11030	1	1	
	Scan-No.							
	→ Universal	profile 5 001 applicable.		I	ı		I	

MODEL	YEA	R TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
MR2 Cou		_					
	<b>47 247 8 13 1</b> 8313ASMT	WS-Moulding	Cover moulding	75533 17050	1	1	
	0010/10/11/						
Paseo Co	<b>upé</b> '96 – '9	98					
	47 001 8 13 1	WS-Moulding	Cover moulding	75533 16210	1	1	//
	8297ASMCT I profile 5 001 applicable.						
Picnic	·96 – ·0	M					
	47 383 8 13 1	WS-Moulding OEM,	Cover moulding	75533 44010	1	1	
Eurocode	8303ASMV	Dealership					1
→ Universa	I profile 5 001 applicable.						
Previa I	·90 – ·(	00					
	47 381 8 10 1	WS-Installation kit	Cover moulding	75531 95D00	1	2	
Eurocode Scan-No.	8276AKMV 1701-2		Retainer	75397 95D00	1 🚃		1
Dort No.	47 381 8 13 1	WC Moulding	Cover moulding	75531 95D00	1 -	1	
	8276ASMV	WS-Moulding	Cover moulding	12221 92000		1	
	1701						
Part No.	47 381 8 13 2	WS-Retainer OEM,	Retainer	75397 95D00	1 🚃	1	
Eurocode	8276ASGH	Dealership					
Scan-No.	1701-1						
		'					
Previa II Part No.	47 481 8 13 2	WS-Moulding upper	Cover moulding upper	75533 28020	1	1	
	8312ASMVT	OEM	oover modianig apper	10000 20020	_	_	
Prius I	'01 – '0	04					
	47 711 8 13 1	WS-Moulding	Cover moulding	75533 47010	1	1	/
Eurocode	8324ASMH						1
Delive II	10.4						
Prius II Part No.	'04 <b>47 712 8 13 1</b>	WS-Moulding OEM	Cover moulding	75533 47030	1	1	
Part No.			Cover moulding	75533 47030	1	1	
Part No.	47 712 8 13 1		Cover moulding	75533 47030	1	1	
Part No. Eurocode	<b>47 712 8 13 1</b> 8355ASMH	WS-Moulding OEM					
Part No. Eurocode  RAV4   Part No.	<b>47 712 8 13 1</b> 8355ASMH	WS-Moulding OEM	Cover moulding  Cover moulding	75533 47030 75533 42010	1	1	
Part No. Eurocode  RAV4   Part No. Eurocode Scan-No.	47 712 8 13 1 8355ASMH '94 -	WS-Moulding OEM					
Part No. Eurocode  RAV4   Part No. Eurocode Scan-No.  → Univ. prof	47 712 8 13 1 8355ASMH  '94 – 'S  86 071 8 13 1 8287ASMR 1943 file 5 001 applicable.	WS-Moulding OEM WS-Moulding					
Part No. Eurocode  RAV4   Part No. Eurocode Scan-No. → Univ. prof	47 712 8 13 1 8355ASMH '94 – 'S 86 071 8 13 1 8287ASMR 1943 iile 5 001 applicable. ded foam rubber 5 007-15/5 0	WS-Moulding OEM WS-Moulding 003.					
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No.  Univ. prof Recommend	47 712 8 13 1 8355ASMH  '94 – '9  86 071 8 13 1 8287ASMR 1943 iile 5 001 applicable. ded foam rubber 5 007-15/5 0	WS-Moulding OEM WS-Moulding 003.	Cover moulding	75533 42010	1	1	
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No. → Univ. prof Recomment  RAV4 II Part No.	47 712 8 13 1 8355ASMH  '94 - 'S  86 071 8 13 1 8287ASMR 1943 file 5 001 applicable. ded foam rubber 5 007-15/5 0  '98 - 6/ 'C  86 071 8 13 2	WS-Moulding OEM WS-Moulding WS-Moulding WS-Moulding OEM,	Cover moulding  Cover moulding with				
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No. → Univ. prof Recomment  RAV4 II Part No.	47 712 8 13 1 8355ASMH  '94 -	WS-Moulding OEM WS-Moulding 003.	Cover moulding	75533 42010	1	1	
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No. → Univ. prof Recomment  RAV4 II Part No. Eurocode Scan-No.	47 712 8 13 1 8355ASMH  '94 -	WS-Moulding OEM WS-Moulding WS-Moulding WS-Moulding OEM,	Cover moulding  Cover moulding with	75533 42010	1	1	
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No. → Univ. prof Recomment  RAV4 II Part No. Eurocode Scan-No.	47 712 8 13 1 8355ASMH  '94 – 'S 86 071 8 13 1 8287ASMR 1943 file 5 001 applicable. ded foam rubber 5 007-15/5 0 '98 – 6/ 'O 86 071 8 13 2 8287ASMR1H 1943-1	WS-Moulding OEM WS-Moulding WS-Moulding WS-Moulding OEM, Dealership	Cover moulding  Cover moulding with rain channel	75533 42010 75533 42030	1	1	
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No. → Univ. prof Recomment RAV4 II Part No. Eurocode Scan-No.  RAV4 III Part No.	47 712 8 13 1 8355ASMH  '94 – '9  86 071 8 13 1 8287ASMR 1943 file 5 001 applicable. ded foam rubber 5 007-15/5 0  '98 – 6/ '0  86 071 8 13 2 8287ASMR1H 1943-1	WS-Moulding OEM WS-Moulding WS-Moulding OEM, Dealership	Cover moulding  Cover moulding with	75533 42010	1	1	
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No. → Univ. prof Recomment RAV4 II Part No. Eurocode Scan-No.  RAV4 III Part No.	47 712 8 13 1 8355ASMH  '94 - 'S  86 071 8 13 1 8287ASMR  1943  file 5 001 applicable. ded foam rubber 5 007-15/5 (  '98 - 6/ '()  86 071 8 13 2  8287ASMR1H  1943-1  07/'00 - '()  86 073 8 13 1	WS-Moulding OEM WS-Moulding WS-Moulding WS-Moulding OEM, Dealership	Cover moulding  Cover moulding with rain channel	75533 42010 75533 42030	1	1	
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No. → Univ. prof Recomment RAV4 II Part No. Eurocode Scan-No.  RAV4 III Part No.	47 712 8 13 1 8355ASMH  '94 - 'S 86 071 8 13 1 8287ASMR 1943 file 5 001 applicable. ded foam rubber 5 007-15/5 0 '98 - 6/'0 86 071 8 13 2 8287ASMR1H 1943-1  07/'00 - '0	WS-Moulding OEM WS-Moulding WS-Moulding OEM, Dealership WS-Moulding upper	Cover moulding  Cover moulding with rain channel	75533 42010 75533 42030	1	1	
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No.  → Univ. prof Recomment RAV4 II Part No. Eurocode Scan-No.  RAV4 III Part No. Eurocode Starlet II Part No.	47 712 8 13 1 8355ASMH  '94 - '9  86 071 8 13 1 8287ASMR 1943 file 5 001 applicable. ded foam rubber 5 007-15/5 0  '98 - 6/ '0  86 071 8 13 2  8287ASMR1H 1943-1  07/'00 - '0  86 073 8 13 1  8323ASMR  EP81 '90 - '9  47 118 8 13 1	WS-Moulding OEM WS-Moulding WS-Moulding OEM, Dealership WS-Moulding upper	Cover moulding  Cover moulding with rain channel	75533 42010 75533 42030	1	1	
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No.  → Univ. prof Recomment RAV4 II Part No. Eurocode Scan-No.  RAV4 III Part No. Eurocode Starlet II Part No. Eurocode	47 712 8 13 1 8355ASMH  '94 - 'S  86 071 8 13 1 8287ASMR 1943  iile 5 001 applicable. ded foam rubber 5 007-15/5 0  '98 - 6/'0  86 071 8 13 2  8287ASMR1H 1943-1  07/'00 - '0  86 073 8 13 1  8323ASMR	WS-Moulding OEM WS-Moulding WS-Moulding OEM, Dealership WS-Moulding upper	Cover moulding  Cover moulding with rain channel  Cover moulding upper	75533 42010 75533 42030 75531 42010	1 1	1 1	
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No.  → Univ. prof Recomment RAV4 II Part No. Eurocode Scan-No.  RAV4 III Part No. Eurocode Starlet II Part No. Eurocode Scan-No.	47 712 8 13 1 8355ASMH  '94 - 'S  86 071 8 13 1 8287ASMR 1943  iile 5 001 applicable. ded foam rubber 5 007-15/5 0  '98 - 6/'0  86 071 8 13 2  8287ASMR1H 1943-1  07/'00 - '0  86 073 8 13 1  8323ASMR	WS-Moulding OEM WS-Moulding WS-Moulding OEM, Dealership WS-Moulding upper WS-Moulding upper	Cover moulding  Cover moulding with rain channel  Cover moulding upper	75533 42010 75533 42030 75531 42010	1 1	1 1	
Part No. Eurocode  RAV4   Part No. Eurocode Scan-No.  → Univ. prof Recomment RAV4   Part No. Eurocode Scan-No.  RAV4   Part No. Eurocode Starlet   Part No. Eurocode Starlet   Part No. Eurocode Starlet   Part No. Eurocode Scan-No.	47 712 8 13 1 8355ASMH  '94 - 'S 86 071 8 13 1 8287ASMR 1943 iile 5 001 applicable. ded foam rubber 5 007-15/5 C '98 - 6/ 'C 86 071 8 13 2 8287ASMR1H 1943-1  07 / '00 - 'C 86 073 8 13 1 8323ASMR  EP81 '90 - 'S 47 118 8 13 1 8273ASMH 1722 ended foam rubber 5 007-15/	WS-Moulding OEM WS-Moulding WS-Moulding OEM, Dealership WS-Moulding upper WS-Moulding upper WS-Moulding	Cover moulding  Cover moulding with rain channel  Cover moulding upper	75533 42010 75533 42030 75531 42010	1 1	1 1	
Part No. Eurocode  RAV4   Part No. Eurocode Scan-No.  → Univ. prof Recomment RAV4   Part No. Eurocode Scan-No.  RAV4   Part No. Eurocode Starlet   Part No. Eurocode Starlet   Starlet	47 712 8 13 1 8355ASMH  '94 - 'S 86 071 8 13 1 8287ASMR 1943 iile 5 001 applicable. ded foam rubber 5 007-15/5 C '98 - 6/ 'C 86 071 8 13 2 8287ASMR1H 1943-1  07 / '00 - 'C 86 073 8 13 1 8323ASMR  EP81 '90 - 'S 47 118 8 13 1 8273ASMH 1722 ended foam rubber 5 007-15/	WS-Moulding OEM WS-Moulding WS-Moulding OEM, Dealership WS-Moulding upper WS-Moulding upper WS-Moulding	Cover moulding  Cover moulding with rain channel  Cover moulding upper	75533 42010 75533 42030 75531 42010	1 1	1 1	
Part No. Eurocode  RAV4 I Part No. Eurocode Scan-No.  → Univ. prof Recomment RAV4 II Part No. Eurocode Scan-No.  RAV4 III Part No. Eurocode Starlet II Part No. Eurocode Scan-No.  → Recomm  Starlet III Part No. Eurocode Scan-No.  → Recomm	47 712 8 13 1 8355ASMH  '94 - 'S 86 071 8 13 1 8287ASMR 1943 iile 5 001 applicable. ded foam rubber 5 007-15/5 0  '98 - 6/ '0 86 071 8 13 2 8287ASMR1H 1943-1  07 / '00 - '0 86 073 8 13 1 8323ASMR  EP81	WS-Moulding OEM WS-Moulding WS-Moulding OEM, Dealership WS-Moulding upper WS-Moulding upper WS-Moulding	Cover moulding with rain channel  Cover moulding upper  Cover moulding	75533 42010 75533 42030 75531 42010 75533 10060	1 1 1	1 1 1	

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	<b>70 Coupé</b> '86 – '93 <b>47 215 8 14 1</b>	WS-Clip kit	Clip 2106 038	75548 20060	12 •	24	• × • × • × • × • × • ×
Eurocode	8257AKCH	W3-Clip Kit	Clip 2106 076	75545 14090	6 🗆	24	<u>,</u>
Scan-No.	1480		Clip 2106 080	75546 14050	6 ×		1-1
- Yaris I	·99 – ·05						
Part No.	47 700 8 13 2	WS-Moulding OEM	Cover moulding	75533 52010	1	1	
Eurocode	8310ASMH1						
Yaris I	·99 – ·05						
Part No.	47 700 8 13 1	WS-Moulding	Cover moulding	75533 52010	1	1	
Eurocode	8310ASMH						
- Yaris II	·06 –						
Part No. Eurocode	<b>47 703 8 13 1</b> 8370ASMH	WS-Moulding	Cover moulding	75533 52160	1	1	
Z	837 UASIVIT		self-adhesive				
Yaris Vers	<b>60</b> '99 –						
	<b>47 702 8 13 1</b> 8317ASMV	WS-Moulding	Cover moulding	75533 52020	1	1	
Luiocode	OST/ ASIVIV						
VOLV	0						
MODEL	YEAR				PCS.		
WIODEL	TEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
240/260	'79 – '89						A A A A A A A A A A A A A A A A A A A
	<b>50 221 8 14 1</b> 8810AKCS	WS-Clip kit	Clip 3104 001 Clip 3104 005	124 6926 124 6934	16 ● 8 △	24	
Scan-No.	1041			125 5553			/
→ See clips						1	
440/460 Part No.	<b>Sedan/STH.</b> '89 – '97 <b>50 322 8 13 1</b>	WS-Moulding upper	Cover moulding upper	346 0130	1	1	/•
Eurocode	8820ASMHT		arran manning appear		_	_	
Scan-No.	1580						
740/760	<b>/940/960</b> '83/'91 –						h - 1 - 1 - 1 - 1
	<b>50 231 8 14 1</b> 8812AKCS	WS-Clip kit	Clip 3104 003 Clip 3104 006	134 2004 124 2150		24	
Scan-No.	1220/1707		Clip 3104 000	124 2130	9 🗆		
→ See clips	page 124.						
	Sedan/Estate '92 - '96 50 451 8 10 1	WS-Moulding incl.	Cover moulding upper	137 2731	1 -	2	
Eurocode	8827AKMHT	Retainer	Retainer	917 8160	1 ****		
Scan-No.  → Using the	l 1822-2 cover moulding upper for Volvo V7	l 70/S70,					
	0 455 8 13 1, guarantees easier f						
CAO /VAC	100 -104		· ·	·			
	50 325 8 13 1	WS-Moulding upper	Cover moulding upper soft	3065 2115	1	1	;
Eurocode	8824ASMST						-
Part No.	50 325 8 14 1	WS-Clip kit	Clip 310 4008	3087 4958	2	18	·
Part No.	<b>50 325 8 14 1</b> 8824AKSS	WS-Clip kit	Clip 310 4008 Clip 310 4009 Clip 310 4010	3087 4958 3080 0958 3087 3201	2 <b>—</b> 8 • 8 <b>Å</b>	18	

## CARS/TRUCKS

## VOLVO

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
		· <del>-</del> · · · ·		30 31.21.13				
	S60/V70	/ <b>XC70</b> '00 –						
	Part No. Eurocode	<b>50 401 8 13 1</b> 8829ASMST	WS-Moulding upper soft	Cover moulding upper	8620 457	12	12	
	Part No. Eurocode	<b>50 401 8 14 1</b> 8829AKCES	WS-Clip kit A-Pillar OEM	Clip yellow Clip white	3067 8009 9190 981	6 ● 2 ■	8	
EW		<b>50 401 8 13 3</b> 8829ASMS(E)B	WS-Moulding lower	Moulding lower	3067 4707	1	1	
Z	→ See clips	page 124.						
	S70/V70							
	Part No. Eurocode	<b>50 455 8 13 1</b> 8827ASMST1	WS-Moulding upper	Cover moulding upper	8620 553	1	1	
NEW		<b>50 455 8 13 3</b> 8827ASMS(E)B	WS-Moulding lower	Moulding lower	9151 4793	1	1	
	S80 Part No.	'98 - '06 <b>50 459 8 13 1</b>	WS-Moulding upper	Cover moulding upper	8620 350	1	1	
	Eurocode		are meaning appear	22.22				
NEW	Part No.	<b>50 459 8 13 3</b> 8828ASMSB	WS-Moulding lower	Moulding lower	9151 7110	1	1	
Z		oczo, iemoż						
	F 10-12	'77 – '83						
	Part No.	89 051 8 11 1	WS-Rubber	Weatherstrip without insert	157 0694	1	1	
	Eurocode Scan-No.	8808ASRL 0979						
	F 10-16 Part No.	'84 – '94 <b>89 053 8 11 1</b>	WS-Rubber	Ma atheration without incort	450 4446	1	4	
	Eurocode		ws-kubber	Weatherstrip without insert	159 1146	1	1	10
	Scan-No.	1318						
	F 12-16	·93 – ·01						
	Part No.	89 063 8 11 1	WS-Rubber	Weatherstrip without insert	161 9254	1	1	
	Eurocode Scan-No.	8823ASRL 1892						
		1332						
	F 12-16	'01 –						
		<b>89 063 8 11 2</b> 8823ASRL1H	WS-Rubber	Weatherstrip with	205 19534	1	1	
	Eurocode	8823ASKLIH		rain channel				
								VW
	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	DCS	UNIT	
	MODEL	IPAN		JOHN SKENTS	ORIGINAL NO.	100.	ONT	
	Corrado	·89 – ·96						
	Part No.	52 523 8 13 1	WS-Installation kit	Weatherstrip without insert	535845127A	1	4	
	Eurocode Scan-No.	8538AKMC 1599		Inner moulding upper Cover moulding right	535853307A0C 53585330601C			//
	ocan-ito.	1333		Cover moulding left	53585330501C			
>	Part No.	52 523 8 13 2	WS-Side moulding kit	Cover moulding left	53585330601C	1	2	
NEW	Eurocode	8538AKGCS		Cover moulding right	53585330501C	1		
	Crofter	100						
ΕW	Crafter Part No.	'06 – <b>91 221 8 13 1</b>	WS-Moulding OEM	Cover moulding	2E0845321	1	1	
N	Eurocode	8590ASMV		Ü				
	See Sens	ors page 172.	I	I			I	

## vw

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Käfer 12	/12A/1300/1302	'64 – '72					
Part No. Eurocode Scan-No.	8506ASRS	WS-Rubber	Weatherstrip without insert	111 845 121	1	1	
Käfer 130	<b>)3</b>						
Part No.		WS-Rubber	Weatherstrip with insert	135 845 121	1	1	/
Eurocode Scan-No.	8515ASRS 0670						
Golf I/Jet		WO B LL		474 045 404	4	4	
Part No.	<b>52 412 8 11 1</b> 8519ASRH	WS-Rubber	Weatherstrip without insert	171 845 121	1	1	/
Scan-No.							
Golf I/Jet							
Part No.		WS-Rubber OEM	Weatherstrip with insert	171 845 121A	1	1	/
Scan-No.	8519ASRH1 0744-1						
Golf I	'74 – '82						
Part No.		BL-Rubber OEM	Weatherstrip without insert	171 845 521	1	1	
Eurocode Scan-No.	8519BSRH 0744-2						
Golf II/Je							
Part No.		WS-Rubber	Weatherstrip without insert	191 845 121	1	1	
Scan-No.	8533ASRH1H 1299						
Golf II/Je	tta '83 – '91						
	<b>52 416 8 11 1</b> 8533ASRH	WS-Rubber OEM	Weatherstrip with insert		1	1	
Golf II 3/	<b>5 doors</b> '83 – '91						
Part No.	52 416 8 21 1	BL-Rubber OEM	Weatherstrip without insert	191 845 521	1	1	
Eurocode Scan-No.	8533BSRH 1299-4						
Golf II 3 c	loors '83 – '91						
Part No.		Sidelight rubber right	Weatherstrip without insert	191 845 322	1	1	
Eurocode Scan-No.	8533RSMHRQ 1299-3	side					
	52 416 8 71 1	Sidelight rubber left	Weatherstrip without insert	191 845 321	1	1	
Eurocode Scan-No.	8533LSMHRQ 1299-2	side					
Golf III	·91 – ·98						,
Part No.	52 431 8 13 1	WS-Moulding upper	Inner moulding upper	1HO 853 705B	1	1	/
Eurocode Scan-No.	8541ASMHT 1779-1						
	52 431 8 14 1	WS-Clip kit	Clip 3106 001	1HO 853 733A	8 •	8	
Eurocode Scan-No.	8541AKCH 1779						
	52 431 8 16 1	Fastener kit	Fastener 3106 004	1HO 819 055B		7	
	8541AKSH		Fastener 3106 003	1HO 819 055C	5		
Scan-No.  → See clips.	1779-4 /agrafes page 125.						
· · · Oce onps	abiaico pago 120.	1	1		1	1	

# CARS/TRUCKS

vw

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
>	Golf III Ca	abrio '93 – '02						
Z		<b>52 422 8 13 4</b> 8543ASMTT	WS-Moulding upper OEM	Cover moulding		1	1	
		<b>52 422 8 13 1</b> 8543AKMHS	WS-Moulding kit	Cover moulding left side Cover moulding right side	1E0 853 705 1E0 853 706	1	2	
	Part No. Eurocode	<b>52 422 8 13 2</b> 8543ASMTSR	WS-Moulding right	Cover moulding right side	1E0 853 706	1	1	
		<b>52 422 8 13 3</b> 8543ASMTSL	WS-Moulding left	Cover moulding left side	1E0 853 705	1	1	
	Golf A4	·97 – ·03						
	Part No.		Window regulator	Clip		2	4	
	Eurocode	8558LRKCHD	repair kit	Handle		2		
		52 437 8 74 2	Window regulator	Clip		2	5	
		8558LRKCHD1 ir kit see clips page 125.	repair kit incl. Clamping device	Handle Clamping device		1		
	Passat III	<b>/Santana</b> '80 – '87						
	Part No. Eurocode	52 316 8 11 1	WS-Rubber	Weatherstrip without insert	321 845 121E	1	1	
	Scan-No.							
	Passat IV	<b>/ B3/B4</b>						
		52 323 8 13 1	WS-Moulding OEM	Cover moulding	357 853 299	1	1	
	Eurocode Scan-No.	8535ASMH 1570-1						
	Part No.	52 323 8 15 1	Dashboard dam	Foam rubber lower	357 858 043	1	1	
	Eurocode Scan-No.	8535ASDS 1570	profile OEM					
		52 323 8 14 1	WS-Joint OEM	Joint	357 853 339	1 =	1	
	Scan-No.	8535ASCS 1570-2						
	Polo II i II							
		52 615 8 11 1	WS-Rubber	Weatherstrip without insert	867 845 121	1	1	
		8530ASRH		,		_	_	1
	Scan-No.	1170						
	Polo II + I	III Coupé '81 – '94						
		52 619 8 21 1	BL-Rubber OEM	Weatherstrip without insert	871 845 521	1	1	
	Eurocode Scan-No.	8530BSRC 1170-3						
	Polo II + I	III <b>+ IV</b> '81 – '94						
		52 615 8 21 1	BL-Rubber OEM	Weatherstrip without insert	867 845 521	1	1	
	Eurocode Scan-No.	8530BSRH 1170-4						
	Polo Clas	sic 4 doors '95 – '00						
		52 630 8 13 1	WS-Installation kit	Cover moulding upper	6KO 845 121	1	3	
		8549AKMH	OEM	Cover moulding right side Cover moulding left side	6KO 845 349 6KO 845 350	1		
	Colvege	II						
	Scirocco Part No.	1	WS-Rubber OEM	Weatherstrip without insert	533 845 121	1	1	
		8531ASRH	TO HOUSE OF THE		300 0 10 121	_		
- 1		ı	ı	T.	T.	1	1	

	vw							
	V VV							
	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	Sharan	·95 –						
	Part No.	52 001 8 13 1	WS-Moulding upper	Cover moulding upper	7MO 853 306B	1	1	
	Eurocode Scan-No.	8548ASMVT 1988						/
	Scall-No.	1900						
×		52 001 8 16 1	WS-Fastener kit	Fastener	51718 108613	10 🕁	10	*******
W Z		8548AKCVB ener page 125.						
	7 See laste	iller page 125.						
>	Sharan	·03 <i>-</i>						
N E	Part No.	<b>52 001 8 13 2</b> 8548AKMVB	WS-Moulding kit	Waterpennel moulding kit lower	centre	1	3	
Z	Luiocouc	OO TOAINIVID		lower	right	1		
	Charan	(05, (00,						
	Sharan Part No.	95 – '00 <b>52 001 8 22 1</b>	BL-Rubber OEM,	Weatherstrip without insert	7MO 845 533C	1	1	
		8548BSMV	Dealership	Wednersurp without moort	7100 043 3330	_	_	
	Scan-No.	1988-1						
ı					l	l	l	
	Taro Pick	up/Toyota Hi-Lux	'89 – '98					
		91 281 8 11 2	WS-Rubber	Weatherstrip without insert	J56 121 89720	1	1	/
	Scan-No.	8536ASRP 1605-1						
		Toyota Hi Lux Scan-No. 1605.						
	Bus II	·67 – ·79						
	Part No.	91 111 8 11 1	WS-Rubber	Weatherstrip without insert	211 845 121D	1	1	
		8510ASRV						10
	Scan-No.	0600						
	Bus III Part No.	'81 – '90 <b>91 113 8 11 1</b>	WS-Rubber	Weatherstrip without insert	251 845 121	1	1	
		8527ASRV	W3-Nubbei	weatherstrip without insert	231 843 121	1	1	
	Scan-No.	1073						
- 1					l			
	Bus III	·79 – ·89						
	Part No.	91 123 8 21 1	BL-Rubber OEM	Weatherstrip without insert	255 845 521	1	1	
	Eurocode Scan-No.	8527BSRV						
	Juli-No.	1073-1						
	Bus IV	'91 – '04						
	Part No.	91 121 8 12 1	WS-Moulding OEM	Weatherstrip	701 845 121J	1	1	
		8537ASMV	Wo Woulding OLW	Wednerounp	7010101213	_	_	1/1
	Scan-No.							
		L protilo b(12 / 1 applicable l		I	I	I	I	
- 1	→ Universa	I profile 5037-1 applicable!						
	→ Universa  Bus IV	'91 – '04						
	Bus IV Part No.	'91 – '04 91 121 8 22 1	WS-Moulding OEM	Weatherstrip	701 845 121A	1	1	
	Bus IV Part No.	'91 – '04 <b>91 121 8 22 1</b> 8537BSMV	WS-Moulding OEM	Weatherstrip	701 845 121A	1	1	
	Bus IV Part No. Eurocode Scan-No.	'91 – '04 <b>91 121 8 22 1</b> 8537BSMV	WS-Moulding OEM	Weatherstrip	701 845 121A	1	1	
	Bus IV Part No. Eurocode Scan-No.  → Universal	'91 – '04 <b>91 121 8 22 1</b> 8537BSMV 1710-1 profile 5028 applicable!	WS-Moulding OEM	Weatherstrip	701 845 121A	1	1	
	Bus IV Part No. Eurocode Scan-No.	'91 – '04 <b>91 121 8 22 1</b> 8537BSMV 1710-1 profile 5028 applicable!	WS-Moulding OEM  BL-Rubber wing door	Weatherstrip  Weatherstrip (left/right)	701 845 121A 701 845 521	1	1	

Scan-No. 1710-4

Part No. 91 121 8 72 1

→ Universal profile 5028 applicable!

Eurocode 8537LSMV Scan-No. 1710-3 <u>'91 – '04</u>

Sidelight moulding

OEM

Weatherstrip

723 845 121

# CARS/TRUCKS

## vw

MODEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
Eurocode Scan-No.	<b>91 211 8 11 1</b> 8522ASRV	WS-Rubber	Weatherstrip without insert	281 845 121	1	1	
LT 28-35 Part No.		WS-Rubber High OEM	Weatherstrip	2D1 845 121	1	1	
	II Low '96 91 214 8 12 1 8553ASMV	WS-Rubber Low OEM	Weatherstrip	2D3 845 121	1	1	





- 92 AUWÄRTER
- 92 BOVA
- 92 MAN
- 93 MERCEDES
- 94 NEOPLAN
- 95 NOGE
- 95 RENAULT
- 95 SETRA

#### AUWÄRTER YEAR MODEL COMPONENTS ORIGINAL NO. PCS. UNIT '81 -Eurostar 303 Part No. 60 004 8 11 1 WS-Rubber 421 GR 640 Weatherstrip with insert 1 Eurocode 6000 Eurostar 404 SHD Part No. 60 031 8 11 1 WS-Rubber Weatherstrip with insert 421 GRO 1000 Eurocode EAU049 Teamstar 785 Part No. 60 017 8 11 1 WS-Rubber Weatherstrip with insert 421 GR 785 1 Eurocode EAU028 BOVA MODEL ORIGINAL NO. PCS. UNIT YEAR COMPONENTS Futura W 1/1 **'**82 -Part No. 98 080 8 11 1 WS-Rubber 10 m B510 110 1 10 m Weatherstrip 10 m Eurocode BO010AM Magic Part No. 98 083 8 10 1 Cover moulding 10m WS-Installation kit B263 456 1 Eurocode BOVO21AR Track moulding 10m B264 792 1 Part No. 98 083 8 13 1 WS-Track moulding Track moulding 10m B263 456 BOV021ASMI Eurocode Part No. 98 083 8 13 2 B264 792 WS-Moulding outer Cover moulding 10m 1 1 Eurocode BOV021ASMO MAN MODEL YEAR COMPONENTS ORIGINAL NO. PCS. UNIT FRH 422 Lionstar 1/1 **'**96 · Part No. 72 016 8 11 2 WS-Rubber with Weatherstrip with insert 81.961.210.049 1 Eurocode MAN056ARZ1 long lip → Filler black (7007 and 7008) see page 93 NL 202/SÜ80/1/1 Part No. 72 020 8 11 1 WS-Rubber 81.961.200.935 1 Weatherstrip with insert 1 Eurocode MAN039AR SR 240 1/1 Part No. 72 011 8 11 1 WS-Rubber with Weatherstrip with insert 81.961.200.926 1 Eurocode MAN019ARZ1 wide lip → Filler black (7007 and 7008) see page 93. SR 280 1/1 Part No. 72 014 8 11 1 WS-Rubber with long Weatherstrip with insert 81.961.200.099 1 Eurocode MAN007ARZ1 cover lip → Filler black (7007 and 7008) see page 93.

## MAN

IODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
SR 240/2	280 /422						
Part No.		Outer Filler/	Outer Filler/chrome		1	50 m	<b>₽</b> ₩
T ui t itoi		chrome wide	on roll 40m		_	00 111	2,2
							13 mm
							· ·
SR 240/2	190 /422						
Part No.		Lower Filler/	Inner Filler/black		1	40 m	11 mm
rait No.	7000	black small	on roll 40m		1	40 111	
							F
SÜ 80/SL	202 (04						
	. <b>202</b> '81 – 72 555 8 11 1	WS-Rubber left OEM	Weatherstrip with insert	81.96.120.0933	1	1	
	MANO43AR	W3-Rubbel left OLIVI	weatherstrip with insert	61.90.120.0933	1	1	52
NÜ 00 (0)	•••						
SÜ 80/SI		WC Dubb an sight OFM	NA/	04 00 400 0004	4	4	
	<b>72 055 8 11 1</b> MANO44AR	WS-Rubber right OEM	Weatherstrip with insert	81.96.120.0934	1	1	100
Eurocoue	WANO44AN						1/2
SÜE 242	'88 <b>–</b> / '98 <b>–</b>						
Part No.	72 021 8 11 1	WS-Rubber	Weatherstrip with insert	81.96.120.0932	1	1	5000
							#
I							
ı						ME	PCEDES
						ME	RCEDES
10DEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.		RCEDES
10DEL	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	ME	RCEDES
		ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.		RCEDES
303 12	<b>26 RHP 1/1</b> '76 –					UNIT	RCEDES
303 12 Part No.	<b>26 RHP 1/1</b> '76 – <b>75</b> 029 <b>8</b> 11 1	TYPE WS-Rubber	Weatherstrip with insert	ORIGINAL NO. 301.671.0521	PCS.		RCEDES
303 12 Part No.	<b>26 RHP 1/1</b> '76 –					UNIT	RCEDES
303 12 Part No.	<b>26 RHP 1/1</b> '76 – <b>75</b> 029 <b>8</b> 11 1		Weatherstrip with insert			UNIT	RCEDES
9 303 12 Part No. Eurocode	<b>26 RHP 1/1</b> '76 – <b>75 029 8 11 1</b> MER558ARZ		Weatherstrip with insert			UNIT	ERCEDES
9 303 12 Part No. Eurocode	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 –	WS-Rubber	Weatherstrip with insert inner and outer	301.671.0521	1	1	RCEDES
9 303 12 Part No. Eurocode 9 303 13 Part No.	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1		Weatherstrip with insert inner and outer  Weatherstrip with insert		1	UNIT	ERCEDES
9 303 12 Part No. Eurocode 9 303 13 Part No.	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 –	WS-Rubber	Weatherstrip with insert inner and outer	301.671.0521	1	1	ERCEDES
Part No. Eurocode  303 13 Part No. Eurocode	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ	WS-Rubber WS-Rubber	Weatherstrip with insert inner and outer  Weatherstrip with insert	301.671.0521	1	1	ERCEDES
Part No. Eurocode  303 13 Part No. Eurocode  Universal	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  filler 6202-25/6250 see page 10	WS-Rubber WS-Rubber	Weatherstrip with insert inner and outer  Weatherstrip with insert	301.671.0521	1	1	ERCEDES
Part No. Eurocode  303 13 Part No. Eurocode  Universal (1) 303 15	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 66 RHD 1/1 '76 –	WS-Rubber WS-Rubber	Weatherstrip with insert inner and outer  Weatherstrip with insert	301.671.0521	1	1	ERCEDES
Part No. Eurocode  303 13 Part No. Eurocode  Universal 10 303 15 Part No.	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 66 RHD 1/1 '76 – 75 033 8 11 1	WS-Rubber WS-Rubber	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert	301.671.0521	1	1	ERCEDES
Part No. Eurocode  303 13 Part No. Eurocode  Universal 10 303 15 Part No.	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 66 RHD 1/1 '76 –	WS-Rubber WS-Rubber	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer	301.671.0521	1	1	ERCEDES
Part No. Eurocode  Universal to Part No. Eurocode  Universal to Part No. Eurocode	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 66 RHD 1/1 '76 – 75 033 8 11 1 MER614ARZ	WS-Rubber  WS-Rubber  WS-Rubber	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert	301.671.0521	1	1	ERCEDES
Part No. Eurocode  Universal to Part No. Eurocode  Universal to Part No. Eurocode	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 66 RHD 1/1 '76 – 75 033 8 11 1	WS-Rubber  WS-Rubber  WS-Rubber	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert	301.671.0521	1	1	ERCEDES
Part No. Eurocode  O 303 13 Part No. Eurocode  O 303 15 Part No. Eurocode  Universal 1	6 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  66 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  66 RHD 1/1 '76 – 75 033 8 11 1 MER614ARZ  filler 6202-25/6250 see page 10	WS-Rubber  WS-Rubber  WS-Rubber  7.	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert	301.671.0521	1	1	ERCEDES
Part No. Eurocode  O 303 13 Part No. Eurocode  O 303 15 Part No. Eurocode  Universal 1	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 75 033 8 11 1 MER614ARZ  Filler 6202-25/6250 see page 10 MER614ARZ  Filler 6202-25/6250 see page 10 MER614ARZ	WS-Rubber  WS-Rubber  WS-Rubber  7.	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert	301.671.0521	1	1	ERCEDES
Part No. Eurocode Universal for Universal fo	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 75 033 8 11 1 MER614ARZ  Filler 6202-25/6250 see page 10 MER614ARZ  Filler 6202-25/6250 see page 10 MER614ARZ	WS-Rubber  7.  WS-Rubber  7.  WS-Rubber	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer	301.671.0521 301.671.0921 301.671.1021	1	1 1	ERCEDES
Part No. Eurocode Universal for Universal fo	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 75 033 8 11 1 MER614ARZ  Filler 6202-25/6250 see page 10 MER614ARZ  Filler 6202-25/6250 see page 10 MER614ARZ	WS-Rubber  WS-Rubber  7.  WS-Rubber  7.  Sidelight profile Uni-	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding	301.671.0521 301.671.0921 301.671.1021	1	1 1	ERCEDES
Part No. Eurocode Universal for Universal fo	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 75 033 8 11 1 MER614ARZ  Filler 6202-25/6250 see page 10 MER614ARZ  Filler 6202-25/6250 see page 10 MER614ARZ	WS-Rubber  WS-Rubber  7.  WS-Rubber  7.  Sidelight profile Universal sidelight with	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding	301.671.0521 301.671.0921 301.671.1021	1	1 1	ERCEDES
Part No. Eurocode Universal to Eurocode	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 66 RHD 1/1 '76 – 75 033 8 11 1 MER614ARZ  Filler 6202-25/6250 see page 10  Celight profile with Roller by 7001	WS-Rubber  7.  WS-Rubber  7.  WS-Rubber  7.  Sidelight profile Universal sidelight with blind	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding	301.671.0521 301.671.0921 301.671.1021	1	1 1	ERCEDES
Part No. Eurocode  Universal to Eurocode	26 RHP 1/1 '76 – 75 029 8 11 1 MER558ARZ  26 RHS 1/1 '76 – 75 030 8 11 1 MER185ARZ  Filler 6202-25/6250 see page 10 75 033 8 11 1 MER614ARZ  Filler 6202-25/6250 see page 10 MER614ARZ  Filler 6202-25/6250 see page 10 MER614ARZ	WS-Rubber  WS-Rubber  7.  WS-Rubber  76 –  Sidelight profile Universal sidelight with blind  er blind  '76 –	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding on roll 15m	301.671.0521 301.671.0921 301.671.1021	1 1 1	1 1 1 1 1 1 1 1 m	ERCEDES
Part No. Eurocode  Universal to Eurocode	26 RHP 1/1	WS-Rubber  7.  WS-Rubber  7.  WS-Rubber  7.  Sidelight profile Universal sidelight with blind	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding	301.671.0521 301.671.0921 301.671.1021	1	1 1	ERCEDES
Part No. Eurocode  Universal to Eurocode	26 RHP 1/1	WS-Rubber  7.  WS-Rubber  7.  WS-Rubber  7.  Sidelight profile Universal sidelight with blind  er blind  from 176 – Sidelight profile Universal Sidelight profile Universal Sidelight Universal Sidelight Universal Sidelight Profile Universal Sidelight Profile Universal Sidelight Profile Universal Sidelight	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding on roll 15m  Weatherstrip with moulding	301.671.0521 301.671.0921 301.671.1021	1 1 1	1 1 1 1 1 1 1 1 m	ERCEDES
Part No. Eurocode  Universal to Eurocode	26 RHP 1/1	WS-Rubber  WS-Rubber  7.  WS-Rubber  7.  Sidelight profile Universal sidelight with blind  er blind '76 – Sidelight profile Universal sidelight profile Universal sidelight	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding on roll 15m  Weatherstrip with moulding	301.671.0521 301.671.0921 301.671.1021	1 1 1	1 1 1 1 1 1 1 1 m	ERCEDES
Part No. Eurocode  Universal 10  303 15  Part No. Eurocode  Universal 10  303 15  Part No. Eurocode  Universal 10  303 Sid  Part No.	66 RHP 1/1	WS-Rubber  WS-Rubber  7.  WS-Rubber  7.  Sidelight profile Universal sidelight with blind  er blind '76 – Sidelight profile Universal sidelight profile Universal sidelight	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding on roll 15m  Weatherstrip with moulding	301.671.0521 301.671.0921 301.671.1021	1 1 1	1 1 1 1 1 1 1 1 m	ERCEDES
Part No. Eurocode  O 303 13 Part No. Eurocode  O 303 15 Part No. Eurocode  O 1303 15 Part No. Eurocode  O 303 Sid Part No.  O 303 Sid Part No.	26 RHP 1/1	WS-Rubber  WS-Rubber  7.  WS-Rubber  7.  Sidelight profile Universal sidelight with blind  er blind  76 – Sidelight profile Universal sidelight without blind	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding on roll 15m  Weatherstrip with moulding on roll 15m	301.671.0521 301.671.0921 301.671.1021 303.674.6020	1 1 1	1 1 1 1 1 1 1 1 1 m	ERCEDES
Part No. Eurocode  Universal to a control of the co	26 RHP 1/1	WS-Rubber  WS-Rubber  7.  WS-Rubber  7.  Sidelight profile Universal sidelight with blind  er blind '76 – Sidelight profile Universal sidelight profile Universal sidelight	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding on roll 15m  Weatherstrip with moulding	301.671.0521 301.671.0921 301.671.1021 303.674.6020 303.674.6220	1 1 1 1 1	1 1 1 1 1 1 1 1 m	ERCEDES
Part No. Eurocode  Universal to a control of the co	26 RHP 1/1	WS-Rubber  WS-Rubber  7.  WS-Rubber  7.  Sidelight profile Universal sidelight with blind  er blind  76 – Sidelight profile Universal sidelight without blind	Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with insert inner and outer  Weatherstrip with moulding on roll 15m  Weatherstrip with moulding on roll 15m	301.671.0521 301.671.0921 301.671.1021 303.674.6020	1 1 1 1 1	1 1 1 1 1 1 1 1 1 m	ERCEDES

## MERCEDES

MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
WODEL	TEAR	1176	COMPONENTS	ORIGINAL NO.	PUS.	UNII	
0.402./40	05/405G 1/2	'82 – 05 / '96					
	75 553 8 11 1	WS-Rubber left + right	Weatherstrip with insert	357.671.0520	1	1	
1 1 1	MER003/04ARZ	OEM	Wednesdarp was meet	(357.671.0620)	_	_	
→ Universal	filler 6202-25/6250 see page 1	07.					
0.404.45	EQ High						
0 404 15	5 <b>8 High</b> '91 - 7 <b>5 038 8 11 1</b>	WS-Rubber with insert	Weatherstrip upper	356.670.0639	1	4	
7 7 7		Wo Rubber With insert	Weatherstrip right	(OEM-No.=kit)	1	-	
			Weatherstrip left	,	1		المال
			Weatherstrip lower		1		
0 404 13	<b>33 Low</b> '91 -						
1 1 1	75 037 8 11 1	WS-Rubber with insert	Weatherstrip upper	356.670.0539	1	4	0
Eurocode	MER822ARS		Weatherstrip right	(OEM-No.=kit)	1		• /// •
			Weatherstrip left		1 1		1
			Weatherstrip lower		1		
0 405 1/				057.074.404			
	<b>75 053 8 11 1</b> VOV023ARZ	WS-Rubber OEM	Weatherstrip without insert	357.671.1010	1	1	240
Eurocode	VOVU23ARZ						1/2
0 407 1/2	<b>1</b> '87 -						
	75 034 8 11 1	WS-Rubber OEM	Weatherstrip without insert	357.671.0720	1	1	
1 1 1	MER277ARZ	1101140001 02111	Wodanorousp marout moore	001101210120	_	-	346
0 408 1/	<b>1</b> '91 -						
1 1 1	75 036 8 11 1	WS-Rubber OEM	Weatherstrip without insert	366.671.0120	1	1	
Eurocode	MER734ARZ						1/4
	NII (00						
Travego R	RH '00 - 7 <b>5 102 8 11 1</b>	WS-Moulding	Cover moulding	625.671.0120	1	1	
1 1 1	CM76ASR	Wowlding	oover moulaing	020.011.0120	_	1	3/6
				I		l	
Travego R							
	75 101 8 11 1	WS-Moulding	Cover moulding	629.671.0020	1	1	
Eurocode	CM75ASR						11
NEOF							
NEOF	PLAN						
NEOF	PLAN YEAR	ТУРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
		ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
		ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
City bus Part No.	YEAR 61 000 8 11 1	TYPE WS-Rubber left OEM	COMPONENTS  Weatherstrip with insert	ORIGINAL NO. 2207.00.400	PCS.	UNIT 1	
City bus Part No.	YEAR						
City bus Part No.	YEAR 61 000 8 11 1						
City bus Part No. Scan-No.	YEAR 61 000 8 11 1						
City bus Part No. Scan-No. City bus	<b>61 000 8 11 1</b> 2207	WS-Rubber left OEM	Weatherstrip with insert	2207.00.400	1	1	
City bus Part No. Scan-No.  City bus Part No.	YEAR 61 000 8 11 1						
City bus Part No. Scan-No.  City bus Part No.	YEAR 61 000 8 11 1 2207 61 000 8 11 2	WS-Rubber left OEM	Weatherstrip with insert	2207.00.400	1	1	

## NOGE

	MODEL	Y	YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
=1		tar 345ND 60 240 8 10 1		WS-Installation kit	Weatherstrip upper		1	4	
¥	Eurocode			WS-IIIStaliation kit	Weatherstrip right		1	4	
Z					Weatherstrip left		1		
					Weatherstrip lower		1		
1		tar 370HD							
¥	Part No. Eurocode	<b>60 240 8 10 1</b> NOG370		WS-Installation kit	Weatherstrip upper Weatherstrip right		1	4	11
z	Luiocouo	1100010			Weatherstrip left		1		
					Weatherstrip lower		1		
									RENAULT
	MODEL	<b>)</b>	/EAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
<u>-</u> :	Ares Part No.	82 153 8 11 1	<u>'99 –</u>	WS-Moulding	Weatherstrip	501 038 8521	1	1	
M	Eurocode	CR16ASM		**O-WOUNTIE	weautersuip	301 030 0321	1	_	
Z									
		I				1			
=1	Ares High		<u> '99 – </u>	WOM III	W	504.054.4005	4	4	
×	Part No. Eurocode	<b>82 154 8 11 1</b> CR17ASM		WS-Moulding	Weatherstrip	501 051 1285	1	1	346
z									
						I		l	
	Illiade FR		'88 –						
¥	Part No. Eurocode	<b>82 152 8 11 1</b> RVIO14AR		WS-Rubber	Weatherstrip	501 028 6017	1	1	100
Z	Eurocoue	NVIO14AN							
	Tracer		'91 –						
Ε	Part No. Eurocode	<b>82 150 8 11 1</b> RVIO21AR		WS-Rubber	Weatherstrip with insert	500 077 8800	1	1	100
Z	Eurocoue	RVIOZIAR							
									SETRA
	MODEL	١	<b>YEAR</b>	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	S 211 H 1	/1 70 045 8 11 1	'76 –	WS-Rubber	Weatherstrip with insert	4.671.320.000	1	1	
		SET501AR		**O-1/000001	weatherstrip with HISELL	7.01 I.320.000	_	_	
	• Eilles blee	Nk (7007) 000 7070 02							
		ck (7007) see page 93.				I		ı	
	S 215 HD		'76 –	WC Dubbas	Month quatries with the sect	4 074 204 000	1	1	
		<b>70 056 8 11 1</b> SET500AR		WS-Rubber	Weatherstrip with insert	4.671.321.000	1	1	-46
_	→ Filler blac	ck (7007) see page 93.	'		 	<u> </u>		l 	
	S 215 HD		'89 –			4.07: :-			
≥		<b>70 081 8 11 1</b> SET518AR		WS-Cover moulding	Cover moulding for framed screens	4.671.433.000	1	1	346
Z									
					l	1			

## SETRA

	MODEL	YEAR	TYPE	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	S 215 UL							
N N N	Part No. Eurocode	<b>70 074A 8 11 1</b> SET511AR	WS-Cover moulding	Cover moulding for framed screens	8.919.800.464	1	1	//
	S250 HD	E Spezial '95 –						
NEW	Part No. Eurocode	<b>70 087A 8 11 1</b> SET522AR	WS-Cover moulding	Cover moulding for framed screens	4.671.428.000	1	1	
	S 315 GT							
NEW	Part No. Eurocode	<b>70 085 8 11 1</b> 70085	WS-Cover moulding	Cover moulding for framed screens	4.671.421.000	1	1	//
	S 315 GT	<b>-HD</b> '95 –						
NEW	Part No. Eurocode	<b>70 086 8 11 1</b> 70086	WS-Cover moulding	Cover moulding for framed screens	4.671.434.000	1	1	
	S 315 HD	11/'96 –						
NEW	Part No. Eurocode	<b>70 057A 8 11 1</b> CS26ASR1H	WS-Cover moulding	Cover moulding for framed screens	4.671.425.000	1	1	
	S 315 HD	<b>H</b> '95 –						
NEW	Part No. Eurocode	<b>70 058 8 11 1</b> 1806GG	WS-Cover moulding	Cover moulding for framed screens	4.671.405.000	1	1	
	S 315 UL	<b>/H/NF</b> '95 –						
NEW	Part No. Eurocode	<b>70 083A 8 11 1</b> 70083A	WS-Cover moulding	Cover moulding for framed screens	4.671.421.000	1	1	//
	S 328 DT	lower '93 –						
NEW	Part No. Eurocode	<b>70 079 8 11 1</b> SET509AR	WS-Cover moulding	Cover moulding for framed screens	4.671.427.000	1	1	//
	S 328 DT							
NEW	Part No. Eurocode	<b>70 078 8 11 1</b> SET503AR	WS-Cover moulding	Cover moulding for framed screens	4.671.426.000	1	1	
	S 415 HD	'02 –						
NEW		<b>70 157 8 11 1</b> SET555AR	WS-Cover moulding	Cover moulding for framed screens	6.296.710.220	1	1	
	S 415 HD	H '01–						
NEW		<b>70 159 8 11 1</b> 70159	WS-Cover moulding	Cover moulding for framed screens	6.296.710.320	1	1	1/2

#### SETRA

	MODEL		YEAR	ТҮРЕ	COMPONENTS	ORIGINAL NO.	PCS.	UNIT	
	S 431 DT	lower	'02 –						
N E W	Part No.	<b>70 162 8 11 1</b> SET559AR		WS-Cover moulding	Cover moulding for framed screens	4.106.710.129	1	1	1/4
	0.404.00								
	S 431 DT		'02 –						
N N		<b>70 161 8 11 1</b> SET558AR		WS-Cover moulding	Cover moulding for framed screens	4.106.710.029	1	1	1/2
		1		'		'		'	





108 FOAM RUBBERS

## UNIVERSAL PROFILES for glued windscreens, back- and sidelights

	TYPE		MODEL	UNIT	
	Part No.		Jeep Wrangler '87 Mazda MX 5 '90- '98 Ford Fiesta V '95 Toyota Corolla EE '90 - Ford Sierra I + II '82 '92/'87 - '91 Honda Accord CE1/CE2 '94 Pontiac Transport '90 Mazda 121 III '96	Roll 50 m	19mm >
	Rubber p Part No.	rofile Kadett 5002	Mazda 323 BG/Sedan '89 – '94 Opel Omega '86 – '93 Nissan Bluebird T12+U11 '84 – '86 Jeep Wrangler '87 Nissan Sunny Y10 '91 Citroen BX I+II '83 – '92 Nissan Prärie M10 '82 – '89 Fiat Seicento '98 Opel Kadett E '84 – '92 Honda Shuttle I '88 –	Roll 50 m	16mm >
	Rubber p Part No.	rofile Typ II 5006	Ciroen AX '86 – '90 Citroen AX '90 –	Roll 50 m	<b>19mm</b> ▶
	Rubber p Part No.	rofile <b>21</b> mm 5022	Chevy GMC Van '81 – '92 Ford Transit III '97 Citroen AX ' 86 – '90 Mercedes Vito upper moulding '96 Ford Transit II '86 Mercedes MB 100 D '88 – '96	Roll 25 m	21mm >
	Part No.		Audi 100 IV '91 – '94 Toyota Picnic '96 – Mitsubishi Space Runner '91 – Toyota Previa '90 – '95 Toyota Starlet EP ' 91 – '96 Mitsubishi Space Runner II '98 – VW Truck IV '90 – '97	Roll 30 m	♣ 5mm
М И	Part No.	5037-1	T4 OEM	Roll 30 m	
	Ford Inne Part No.		Ford Galaxy '95 VW BUS IV Side+Backlight '90 Ford Transit VW Sharan '95 – Ford Sierra I + II Seat Alhambra '95 –	Roll 50 m	<b>▲</b> 13,5mm <b>▶</b>
			Inner profile with Butyl 4-5mm Glass	Roll 50 m	4-5 mm
	Part No.	Inner Moulding 51012 51012ARGI	Inner profile with Butyl 6-8mm Glass	Roll 50 m	6-8mm
	Part No.	<b>Cover moulding 39 225 8 15 2</b> 7227ASMHOR 1373-2	Profile outer 16mm Glass	Roll 50 m	16 mm
	Part No.	Cover moulding 51014 51014ARMO	Profile outer 23mm Glass	Roll 50 m	

#### UNIVERSAL PROFILES for glued windscreens, back- and sidelights

TYPE		MODEL	UNIT	
Part No.	Cover moulding 51015 51015ARMO	Profile outer 27mm	Roll 50 m	27mm >
Part No.	Cover moulding 51016 51016ARMO	Profile outer 32mm	Roll 30 m	32mm >

#### UNIVERSAL PROFILES for glued windscreens, incl. butyl in the glass channel

YPE			MODEL	UNIT	
DOELEN	/V Coulos Theorem	lastinal Butst			
	X Series Thermop				_
Part No.	5032	Inner moulding 13 mm	Alfa 33 II '90 –	Roll 5 m	
			Alfa 75 '85 – '91		
		4	Alfa 90 '84 – '87		
D ( N	=000.00	-		D. II 00	
Part No.	5032-30	1		Roll 30 m	
					<b>∢</b> 13n
	I			1	
PROFLEX	X Series Thermop	last incl. Butvl			
Part No.			Mitsubishi Carisma '95 –	Roll 5 m	
			Nissan Bluebird T12 + U11		
			Year '84 - '86		
		•	Nissan Sunny B12 Cpé Year '86		
Part No.	5021-30		- '90	Roll 30 m	and the same
		Nissan Sunny N13	Nissan Sunny B12 Cpé Year '86		
		-	- '90		
			Nissan Prärie M10 '82 – '89		
		Toyota Corolla EE '90 – '92	Honda Civic III CRX '84 - '87		◀ 16
		LTB Year '87-91	Honda Shuttle I '88 –		
		Lancia Y10 Year '85 -	Alfa 33 II '90 -		
		Mazda 323 BG/Sedan IV	Alfa 75 '85 – '91		
		FLH Year '89 - '94	Alfa 90 '84 - '87		
	X Series Thermop				
Part No.	5033	Inner moulding 19 mm		Roll 5 m	
					4
	F	_			
Part No.	5033-30			Roll 30 m	
					<b>∢</b> 19mi
				I	
ROFLEX	X Series Thermon	last incl. Butyl			
Part No.		Inner moulding 25 mm		Roll 5 m	
Part No.	5034-30	Į.		Roll 30 m	
					<b>⋖</b> 25 mm
					2511111
DAFLEY	X Series Thermor				
		Inner moulding chrome 16 i		Roll 4,5 m	
Part No.	5023				
	5023	Toyota Corolla EE 90/92 '8	37 – ' 92		
	5023		7 – ' 92		
Part No.		Toyota Corolla EE 90/92 '8	7 – ' 92		
Part No.	5023 5023-22	Toyota Corolla EE 90/92 '8	7 – ' 92	Roll 22 m	
Part No.		Toyota Corolla EE 90/92 '8	i7 – ' 92	Roll 22 m	
Part No.		Toyota Corolla EE 90/92 '8	.i7 – ' 92	Roll 22 m	16

#### UNIVERSAL PROFILES for glued windscreens, incl. butyl in the glass channel

TYPE	MODEL	UNIT

PROFLE	(X Economy VSG-E			
Part No.	5040-30E	Inner moulding 17 mm	Roll 23 m	
		Alfa 33/75/90		
		Mazda MX 5 I+II		
		Mitsubishi Carisma		
		Mitsubishi Colt IV CC		
		etc. see PMA universal poster		
				<b>∢</b> 17mm <b>&gt;</b>
I				
DROFLEY	/V Foorens VCC F	TDDM media		
	X Economy VSG-E 5044-25E		Dall 22 m	
Part No.	5044-25E	Inner moulding 20 mm	Roll 23 m	
		Citroen AX		
		Fiat Croma Ford Transit II+III		
		Mercedes MB 100		
		etc. see PMA universal poster		
		etc. see i MA universal poster		
				<b>⋖</b> 20mm ▶
	X Economy VSG-E			
Part No.	5041-25E	Inner moulding 22 mm	Roll 23 m	
		DAF CF 45-55		
		Fiat Doblo		
		Mercedes Vito I		
		Opel Astra G		
		Opel Corsa C		
		etc. see PMA universal poster		<b>∢</b> 22mm <b>≻</b>
1	I		1	
PROFLEX	X Economy VSG-E	PDM profile		
	5042-25E	Inner moulding 31 mm	Roll 20 m	
		Opel Vivaro		
		Renault Traffic II		
		Mercedes A-Klasse W168		
		Sonderfahrzeuge		
		etc. see PMA universal poster		
				<b>∢</b> 31 mm <b>&gt;</b>
1			1	
PROFLEX	X Economy Deko	r profile		
	5045-25E	Inner moulding 17 mm	Roll 23 m	
		Ford Sierra I+II		
		Ford Fiesta V		
		Mitsubishi Lancer		
		Mitsubishi Colt V		
		etc. see PMA universal poster		
				<b>∢</b> 17 mm <b>&gt;</b>
1	I	I and the second	1	
PROFIE EX	X Economy Deko	r profile		
	5046-25E	Inner moulding 20 mm	Roll 23 m	
. 31 ( 110)		Renault R5 C40	20 111	
		Renault Clio II		
		Ford Transit V		
		etc. see PMA universal poster		
				<b>⋖</b> 20mm ➤
	I	I and the second	1	
PROFLEX	X Premium Truck	profile		
	5056-22	Inner moulding 21 mm	Roll 22 m	
		6-8mm glass channel		
		Perfect for RV´S and commercial vehicles.		
2				
				<b>∢</b> 21mm ➤
		The state of the s	I	

#### UNIVERSAL PROFILES for glued back- and sidelights

TYPE MODEL UNIT Rubber profile Kadett Part No. 5011 Backlight profile Opel Kadett E '84 – 92 Roll 25 m Chrysler Voyager '91 – '95 Opel Omega Estate/Sedan Citroen BX I Sedan '83 - '87 '86 Lancia Y10 '85 Opel Vectra STH '88 Opel Ascona C FLH '81 - '88 -Opel Corsa B Side backlight '93 Rubber profile Part No. 5017 Backlight -Audi 80 Sedan '87 – Backlight -Ford Galaxy Roll 30 m Backlight -Seat Alhambra Backlight -VW Sharan Rubber profile VW T4 Part No. 5028 Ford Galaxy '95 -VW Sharan '95 -Roll 25 m VW Truck Side backlight '90 -Seat Alhambra '95 -**Universal Inner moulding** Part No. 5047 Inner moulding for backlights for japanese cars. Roll 30 m Universal Underglass profile self-adhesive Part No. 5024-27 Backlight Audi A3 '96-Backlight VW Polo IV Sedan Roll 27 m Backlight A4 '94 -Back/Side VW Polo V Sedan Backlight Fiat Bravo/Marea Backlight VW Passat V + IV 3 doors '95 BL-Fiat Palio '98-Back/Front-VW Passat VI Back/Side -VW Golf III '93 -Back/Side/Front-VW Golf Backlight VW Polo IV Cpé Backlight Mercedes SLK Universal Underglass profile self-adhesive Part No. 5048 Back-Side profile for Mitsubishi Colt and Space gear and Roll 30 m also for VW Backlights. Universal Underglass profile self-adhesive Part No. 5051-5 Backlight profile for Nissan P12 5doors + Estate Roll 5 m Universal Underglass profile self-adhesive Part No. 5054-5 Backlight profile for Nissan Micra K12 Roll 5 m Backlight profile for Nissan X-Trail

Iniversal Underglass profile self-adhesive

WS-Profile upper for Ford Mondeo II/VW Touran

Roll 20 m

Part No. 5062-20

NEW

TYPE

#### UNIVERSAL PROFILES for glued back- and sidelights

MODEL

UNIT

	Universa	Underglass profile	e self-adhesive		
NEW		5061-20	WS-Profile for Audi A3/A6/A8 etc.	Roll 20 m	
	Universe	Underglass profile	solf adhasive		
NEW		5060-20	WS-Profile for Peugeot 407 etc.	Roll 20 m	
	Universa	Underglass profile	self-adhesive		_
NEW!		5059-20	WS-Profile for VW Golf 5/Caddy/Ibiza etc.	Roll 20 m	
	Universe	Underglass profile	a colf adhaniya		
NEW		5049-20	WS-Profile for Audi TT/Astra H/Vaneo etc.	Roll 20 m	
	Universa	Underglass profile	a salf-adhasiya		
NEW!		5058-20	WS-Profile for Opel Vectra C etc.	Roll 20 m	
	Universe	l I Indonationa muntil	solf adhesive		
NEW!		Underglass profile 5027-20	WS-Profile front-backlight VW WW Jetta VW Golf Plus VW Passat B6 VW Touran etc.	Roll 20 m	A 3,5mm
	Universe	Underglass profile	a colf adhasiya		
NEW		5015-20	WS-Profile front VW/Seat VW Golf III, Passat B5 Seat Toledo II	Roll 20 m	A 5,5mm

#### WEATHERSTRIP PROFILES

TYPE MODEL UNIT

Weathers	trip profile			( 21 mm )
Part No.		21x16 Gl.= 4 Bl.= 1,5 mm  For agricultural and construction machines.  Filler Part No.: 6202-25/6250.	Roll 20 m	8 mm 8 7 5 mm m m 7 5 mm m m m
Weathers	strip profile			∠ 23 mm √
Part No.		23x18 Gl.= 5 Bl.= 3 mm  For agricultural and construction machines.  Filler Part No.: 6202-25/6250.	Roll 20 m	6 mm 8 7.5 mm 7.5 mm 7.5 mm 8 mm
Woothow	strip profile			,, 23 mm
Part No.		23x19 Gl.= 6 Bl.= 2,5 mm  For agricultural and construction machines.  Filler Part No.: 6202-25/6250.	Roll 20 m	6 mm 8 7 7 5 mm 7 5 7 7 5 mm 8 7 7 5 mm 9 7 7 9 9 9 9 9 9 9 9 9 9 9 9 9 9 9
Weather	strip profile			≥ mrn
Part No.	5016	25x18 incl. insert For agricultural and construction machines.	Roll 25 m	Will be seen to be see
Weather	strip profile			26 mm
Part No.		26x21 incl. insert For agricultural and construction machines.	Roll 25 m	Marie
Weather	strip profile			
Part No.		26,35x19 self closing For agricultural and construction machines. Jeep CJ7 rigidtop Side + backlight	Roll 25 m	6mm 4.6mm 26,53mm
Weather	strip profile			29.5 mm
Part No.		29,5x19 Gl.= 5 Bl. 2 mm  For agricultural and construction machines.  Filler Part No.: 6202-25/6250.	Roll 15 m	2 5 mm s m

#### WEATHERSTRIP PROFILES

TYPE		MODEL	UNIT	
	strip profile			29.5 mm
Part No.	5114	29,5 x 19 GI.= 5 BI. 3 mm	Roll 15 m	
		For agricultural and construction machines.		<b>↓ ↓ ↓ ↓ ↓</b>
		Filler Part No.: 6202-25/6250.		
				E v
				$\longleftrightarrow\longleftrightarrow$
				E E E
				⊕ 1√ 5/ 3 70 70
1			1	-
307 - 11				
	trip profile			29.5 mm
Part No.	5106	29,5x19 GI.= 6 BI. 1,5 mm	Roll 15 m	
		For agricultural and construction machines.		<b>↓ ↓ ↓ ↓ ↓</b>
		Filler Part No.: 6202-25/6250.		
				E P
				E vo
				$\longleftrightarrow$
				E E E
				9 5 7 5 8 5
1	I		1	
Worth	abula waafila			
	trip profile			29.5 mm
Part No.	5124	29,5x19 Gl.= 6 Bl. 3 mm	Roll 15 m	
		For agricultural and construction machines.		<b>↓ ↓ ↓ ↓</b>
		Filler Part No.: 6202-25/6250.		
				£^ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
				E vo
				$\longleftrightarrow\longleftrightarrow$
				E E E
				& .
'	ļ		1	
Weathers	strip profile			, 29,5 mm
Part No.		29,5 x 19 GI.= 6 BI. 4 mm	Roll 15 m	29,5 mm
Part No.	5125		KOII TO III	
		For agricultural and construction machines.		<b>↓</b>
		Filler Part No.: 6202-25/6250.		
				Ę Į
				5
				E E E
				e 7, 25
	strip profile			( 31,5 mm
Part No.	5008	31,5x21,7 mm incl. Filler (6202)	Roll 15 m	
		For agricultural and construction machines.		¥ <b>——</b> ¥ [
				.★ <b>▼</b>
				20
				→ 8 mm ←
				<b>*</b>
				<del>_</del>
				E E
1	I	The state of the s	T.	K
Washing	strin profile			
	trip profile			
Part No.	5020	23x35 mm	Roll 30 m	<b>A</b>
		Ford Transit II/III Side/backlight		No.
				Y
				35 mm
				<b>←</b> 55 mm
	'		*	
Weathers	strip profile			
Part No.		22x27 mm	Roll 50 m	1
T ult ivoi	0000	Mercedes Sprinter I Side/backlight	11011 00 111	$\uparrow$
		morocaes opiniter i olae/packlight		N N
				27 mm
				_
			1	

#### FILLER PROFILES

TYPE MODEL UNIT

Filler pro Part No.	file 6202-25	Filler profile 9,5x7,5 mm Fiat 170F/190F '78 – MAN F2/F7 '68 – '77 MAN F90 (wide + narrow) '86	Mercedes BUS O 307, O405, O303 RHD, RHP, RHS	Roll 25 m	9,5 mm
Filler pro	file				0.5 1
Part No.		Filler profile 9,5x7,5 mm Fiat 170F/190F '78 – MAN F2/F7 '68 – '77 MAN F90 (wide + narrow) '86	Mercedes BUS O 307, 0405, 0303 RHD, RHP, RHS	Roll 100 m	9,5 mm E E S 2
Filler pro	file BMW				
Part No.			IW E30 3 Series III '83 – '87	Roll 25 m	14 mm

#### **FOAM RUBBERS**


TYPE		MODEL	UNIT	
Foam rub Part No.		Foam rubber 4x5 mm Prevents PU from penetrating to the interior. Spacer between windscreen and car-body. Anti vibration.	Roll 30 m	Adhesive Body Side
Foam rub	hor			
Part No.		Foam rubber 4x6 mm	Roll 15 m	
Part No.	5003	Program rubber 4x6 mm Prevents PU from penetrating to the interior. Spacer between windscreen and car-body. Anti vibration.	KOII 15 M	Adhesive Body Side
Foam rub	ber			
Part No.	5007-5	Foam rubber 5x7 mm  For many Japanese cars. Rubber blocks (every 40cm) to keep the distance between windscreen and car-body. Length fits for one fitting job.	Roll 5 m	Rubber spacer every 40cm Adhesive Body Side
Foam rub	ber			
	5007-15	Foam rubber 5 x 7 mm  For many Japanese cars. Rubber blocks (every 40cm) to keep the distance between windscreen and car-body. Length fits for one fitting job.	Roll 15 m	Rubber spacer every 40cm Adhesive Body Side
Foam rub	her			
Part No.		Foam rubber 6 x 4,5 mm Prevents PU from penetrating to the interior. Spacer between windscreen and car-body. Anti vibration.	Roll 20 m	Adhesive Body Side
Foam rub	ber			
Part No.		Foam rubber 6 x 6 mm Prevents PU from penetrating to the interior. Spacer between windscreen and car-body. Anti vibration.	Roll 15 m	Adhesive Body Side
Foam rub	ber			
Part No.		Foam rubber 19x6 mm	Roll 15 m	
Eurocode	6027ASDCB	Spacer between windscreen and car-body. Nissan 350Z		Adhesive Body Side
Foam rub	ber			
Part No.	5053	Foam rubber 19x10 mm Spacer between windscreen and car-body. Audi/BMW/Renault	Roll 10 m	Adhesive Body Side

#### **FOAM RUBBERS**

TYPE MODEL UNIT

Foam rub Part No.	ober Thermo - profil 5030	Thermo-profile self-adhesive, 6,5x9,5 mm Especially for restauration and production of Thermopen bus backlights.	Roll 20 m	Adhesive Side  Chrome  Adhesive Side  6,5 mm
Foam rub Part No.	ober Thermo - profil 5031	e Thermo-profile self-adhesive, 6,5x6,5 mm Especially for restauration and production of Thermopen bus backlights.	Roll 20 m	Adhesive Side  Chrome  Adhesive Side  6,5 mm



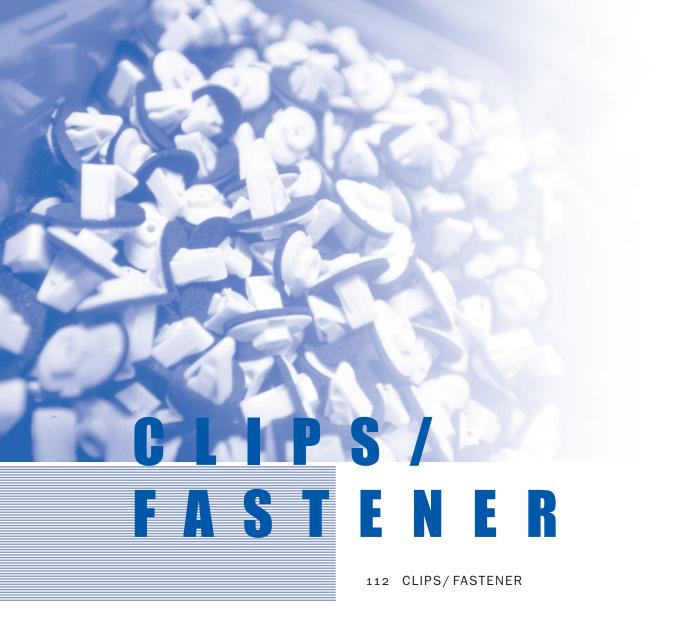

## **ALFA**

ARTICLE ARTICLE ARTICLE



### **AUDI**

ARTICLE

ARTICLE

ARTICLE















## **BMW**

ARTICLE ARTICLE

ARTICLE







































## **CITROEN**

ARTICLE ARTICLE ARTICLE















DAF

ARTICLE ARTICLE ARTICLE



FIAT



ARTICLE ARTICLE ARTICLE

























HONDA

ARTICLE ARTICLE ARTICLE

Part No. 2101 007
Eurocode 3929ASCS











## HONDA














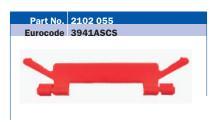























ARTICLE ARTICLE ARTICLE

























KIA





### MAZDA

ARTICLE

ARTICLE

ARTICLE

























## **MERCEDES**

ARTICLE

ARTICLE

ARTICLE













## **MERCEDES**

ARTICLE ARTICLE ARTICLE







## MITSUBISHI

















## NISSAN

ARTICLE ARTICLE ARTICLE












## **OPEL**



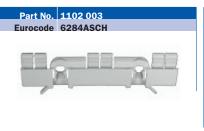











## PEUGEOT

ARTICLE ARTICLE ARTICLE























## RENAULT















## RENAULT

ARTICLE

ARTICLE

ARTICLE







## **ROVER**

ARTICLE

ARTICLE

ARTICLE





## **SEAT**

ARTICLE

ARTICLE

ARTICLE















## SUBARU

ARTICLE ARTICLE ARTICLE



## SUZUKI

ARTICLE ARTICLE ARTICLE



## TOYOTA




















## **TOYOTA**

ARTICLE ARTICLE ARTICLE







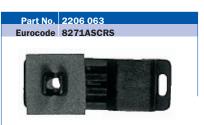

## **USA MODELLE**

ARTICLE ARTICLE ARTICLE





## **VOLVO**













ARTICLE ARTICLE ARTICLE
























## UNIVERSAL













## UNIVERSAL

ARTICLE ARTICLE ARTICLE Part No. 4000 706 Part No. 4000 707 Part No. 4000 708 Eurocode Various models Eurocode Various models Eurocode Various models Part No. 4000 710
Eurocode Various models Part No. 4000 709 Part No. 4000 711 Eurocode Various models Eurocode Various models Part No. 4000 712 Part No. 4000 713 Part No. 4000 714 **Eurocode Various models Eurocode Various models Eurocode Various models** Part No. 4000 715 Part No. 4000 716 Part No. 4000 717 **Eurocode Various models Eurocode Various models Eurocode Various models** Part No. 4000 718 Part No. 4000 719 Part No. 4000 720 Eurocode Various models Eurocode Various models Eurocode Various models Part No. 4000 721 Part No. 4000 722 Part No. 4000 723 **Eurocode Various models Eurocode Various models Eurocode Various models** 



- 130 HAND TOOLS
- 136 CUTTING TOOLS
- 142 TOOL BOXES
- 143 WINDSCREEN STANDS + SUCTION LIFTERS
- 146 GLASS TREATMENT
- 148 FEIN CUT OUT TECHNIQUE
- 151 POLISHING AND CUTTING MACHINES
- 152 CARTRIDGE GUNS
- 154 GLASS REPAIR SYSTEMS
- 160 BONDING / SEALING / CLEANING

# TOOLS/ACCESSORIES

## HAND TOOLS

TYPE	DESCRIPTION	ILLUSTRATION
Cord runner (short)		
Part No. 01 01 01	The cord runner (short) is suitable for pulling in	
	most rubber surrounds on vehicle car windows.	
	Cord length: 6 m	
		The same of the sa
		The state of the s
Oard manage (langt)		
Cord runner (long) Part No. 01 01 01 02	T	
Part No.   01 01 01 02	The cord runner (long) is suitable for pulling in	
	most rubber surrounds on vehicle truck windows.	
	Cord length: 8 m	
Replacement cord for cord runner		
Part No. 01 01 01 03	For replacing the short or long cords on cord runner.	
	Length: 9 m	The same of the sa
		AND THE PERSON NAMED IN COLUMN TWO IS NOT THE PERSON NAMED IN COLUMN TWO IS NAMED IN COLUMN TWO I
		0.7.1
Lift pin (short) with wooden handle		
Part No. 01 02 01 00	The lift pin is used for lifting rubber lips from the	
	inside and the outside.	
	Chrome-vanadium spike, varnished wooden handle	EJ DHE SERGESS
	omone vanadiam opino, vanienda nedden nande	
Lift pin (short)		
Part No. 01 02 01 01	The lift win (about) is used for lifting whose line	
Part No.   01 02 01 01	The lift pin (short) is used for lifting rubber lips from the inside and the outside.	
	Curved metal pin, plastic handle	
Lift pin (short) "professional"		
Part No. 01 02 01 07	This new lift pin short professional is a made	
Š	from high strength tool steel which offers greater	
	durability and extended life.	
z	The two component handle is covered with a soft	
	foam coating for easy grip.	
116 1 0 3		
Lift pin (long)		
Part No. 01 02 01 02	The lift pin (long) is used for lifting rubber lips in	
	problem areas (e.g. dashboard).	~
	Tip curved through 90°, plastic handle	
	ı	ı I
Lift pin (long) "professional"		
Part No. 01 02 01 06	This new lift pin long professional" is a made	
<b></b>	from high strength tool steel which offers greater	
	durability and extended life.	
	The two component handle is covered with a soft	
	foam coating for easy grip.	
	roam counting for casy grip.	
	•	

## HAND TOOLS

ILLUSTRATION

Ball-head pin (short) Part No. 01 03 01 01 The ball head pin (short) is used for cleaning and lifting the seal. Ball-head, plastic handle Ball-head pin (short) "professional" Part No. 01 03 01 03 This new generation of the PMA/TOOLS ball NEW pin short professional is made from high strength tool steel which offers greater durability and extended life. The two component handle is covered with a soft foam coating for easy grip. Ball-head pin (long) Part No. 01 03 01 02 The ball head pin (long) is used for cleaning and lifting the seal. Ball-head, plastic handle Ball-head pin (long) "professional" Part No. 01 03 01 04 This new generation of the PMA/TOOLS ball pin long professional is made from high strength tool steel which offers greater durability and extended life. The two component handle is covered with a soft foam coating for easy grip. Ball-head pin XL "professional" Part No. 01 03 01 05 This new PMA/TOOLS ball pin XL professional is NEW designed for use in areas that are hard to reach, e.g. truck and bus dasbhoards. Made from high strength tool steel, it offers greater durability and extended life. The two component handle is covered with a soft foam coating for easy grip.

This newly developed long handled tool is designed to remove the solid rubber surrounds from truck

and bus windscreens.

DESCRIPTION

TYPE

Assembly tool for truck rubber

Bestell-Nr. 01 11 02 03

# TOOLS/ACCESSORIES

## HAND TOOLS

TYPE DESCRIPTION ILLUSTRATION

TYPE DESCRIPTION ILLUSTRATION

#### Mini clip removal tool set

Part No. 01 02 01 04

The various shapes of the removal tools in this set are just right for non-destructive removal of plastic covers on scuttle panels, A pillars, or door trims. The removal tools are also very well suited to release decorative trim clips.



#### Cleaning pin (straight)

Part No. 01 04 03 01

The cleaning pin (straight) is used for removing tempered glass remnants from mouldings and rubbers.

90° angled metal pin

Length: 20 cm



## Cleaning pin (curved)

Part No. 01 04 03 02

The cleaning pin (curved) is used for removing tempered glass remnants from mouldings and rubbers.

90° angled metal pin

Length: 21 cm



## Fitting tool for VW Universal profile

Part No. 01 06 50 24

This PMA/TOOLS fitting tool represents an innovation with regard to precision and time-saving application of our VW universal profile 5024-27. The moving press-on roller integrated into the tool head presses the profile section automatically onto the windscreen ceramic field.

The profile section can be laid parallel to the glass edge even in corner areas with a radius of up to  $135^{\circ}$ .

The Profixx application poster is available with this tool on request.



#### Weatherstrip pull-in tool 20 mm eye with roller

Part No. 01 06 01 09

For pulling in wide weatherstrips. (e. g. BMW E28, Opel Monza)



#### Replacement eye with roller

Part No. 01 06 11 17

Replacement eye with roller 20 mm. For Part No.: 01 06 01 09.



#### Weatherstrip pull-in tool (soldered eye, 15 mm)

Part No. 01 06 02 01

For pulling in weatherstrips for windscreens and rear windows (Ford Escort, Opel Ascona).



# TOOLS/ACCESSORIES

## HAND TOOLS

ТҮРЕ	DESCRIPTION	ILLUSTRATION
Weatherstrip pull-in tool (soldered eye Part No. 01 06 02 02	For pulling in weatherstrips for windscreens and rear windows (BMW E30).	
Weatherstrip pull-in tool 9,5 mm Part No. 01 06 01 08	Weatherstrip pull-in tool 12 mm Part No. 01 06 11 11	
Weatherstrip pull-in tool 10,5 mm Part No. 01 06 11 09	Weatherstrip pull-in tool 15 mm Part No. 01 06 11 12	
Weatherstrip pull-in tool 11 mm Part No. 01 06 11 10	Weatherstrip pull-in tool in various sizes.	
Replacement eye 9,5 mm Part No. 01 06 11 18	Replacement eye 12 mm Part No. 01 06 11 15	
Replacement eye 10,5 mm  Part No. 01 06 11 13	Replacement eye 15 mm Part No. 01 06 11 16	MARR
Replacement eye 11 mm Part No. 01 06 11 14	Various sizes for Part No. 01 06 01 08-12.	11 11 11
Weatherstrip pull-in tool with hole (inc Part No. 01 06 28 03	<b>8 mm eve)</b> For pulling-in weatherstrips on trucks, busses and excavators. (MANF7, MANF90, Setra 315UL).	
Replacement eye 5 mm Part No. 01 06 28 04	Replacement eye 7 mm Part No. 01 06 28 06	Po.
Replacement eye 6 mm Part No. 01 06 28 05	Replacement eye 8 mm Part No. 01 06 28 07	PERC
Plastic spatula Standard Part No. 01 06 18 10	For lifting of mouldings and weatherstrips as well as for spreading PU.	
Plastic spatula Special Part No. 01 06 19 13	For lifting of mouldings and weatherstrips as well as for spreading PU.	
Extra-fine spatula Part No. 01 06 28 11	A special spatula for finishing work on weatherstrips.	-

TYPE DESCRIPTION ILLUSTRATION

Clip remover, large		
Part No. 01 07 01 03	This clip remover is suitable for removing plug-in clips in exterior and interior panelling. Length: 28 cm	
Olio nomento		
Clip remover		
Part No. 01 07 02 02	This clip remover is suitable for removing plug-in clips in door panelling and A-pillar areas. Length: 24,5 cm	
Trim strip clip remover left+right		
Part No. 01 08 01 01	The trim strip clip remover is suitable for removing trim strip clips (e.g. Jeep Cherokee, Honda Accord).  Length: 21,5 cm	3
Trim strip clip remover combined		
Part No. 01 08 01 02	Suitable for the removal of trim strip clips.	
Door panelling lever		
Part No.   01 09 03 01	This tool is suitable for removing deep-lying clips in side and door panellings (e.g. VW Sharan, Ford Windstar).	
Plastic screw lever		
Part No. 01 10 02 03	Specially designed tool for lifting plastic screws and fastening clips on certain vehicle models (e.g. Ford Sierra I and II, Ford Transit, BMW E32/E34 and Japanese cars).	
Circlip remover (two functions)		
Part No. 01 10 03 01	This tool is designed for the removal of circlip-fastened door handles. The circlip is removed with one end and fastened again with the other.	
Circlip remover (one function)		
Part No. 01 10 03 02	For the removal of circlip-fastened door handles.	
	I .	

### HAND TOOLS

TYPE DESCRIPTION ILLUSTRATION

#### **Professional Strip Lifter**

Part No. 01 11 02 02

Strip lifters are used for removing trim strips held in place by fastening clips, interior trim and scuttle panels. The special bending form creates extreme leverage making the parts easier to remove. Our Professional Strip Lifter is also excellent for

the removal of passenger and commercial vehicle windscreens fitted with solid rubber



#### Seal lever polypropylene

Part No. 01 25 09 07

The special combination of the right plastics makes this tool suitable for a variety of uses.



#### Easy Lift windscreen wiper remover

Part No. 01 11 17 02

A new development. Our Easy Lift wiper remover has a very long service life and is easy to use on nearly all well-known wiper systems. Because of its very low overall height of 48 mm, our wiper remover can be used without problem underneath opened engine hoods and preformed scuttle panels. On the latest generation of vehicles (Volvo, BMW etc.), the wiper arms have predetermined breaking points on the reverse

side so as not to cause any further injuries in the event of frontal collisions with pedestrians. The predetermined breaking points makes the wiper arm more unstable so that it breaks easily if excess side pressure is applied. The usual method of removal by side leverage or waggling the wiper arm back and forth would result in the wiper arm breaking. Avoid annoying damage to customer vehicles and use our new Easy Lift wiper remover.



#### Windscreen wiper remover 2-armed

Part No. 01 11 17 03

Tool for removing large or sticking wiper arms. Screw mechanism with two adjustable swivel



#### **BMW Torx windscreen wipers**

Part No. 01 11 17 11

This BMW original tool is necessary for removing wiper arm 80 torx on BMW models of the 5 series E39, 7 series E38 and 8 series E31. The torx nut can be used in any standard commercial ratchet wrench. Use the BMW wiper

remover, Art. No.: 01 11 17 12, in order to remove the wiper arm from the lever after removing the torx screw.



#### BMW windscreen wiper remover

Part No. 01 11 17 12

This wiper remover designed specially for BMW is used for removing wiper arms on the above mentioned models.



### BMW New Mini Cooper Sidelight adjustment tool

Part No. 01 11 17 13

This original BMW Mini tool is used to ajust the frameless front sidelight. In case of the special electronical sidelight movement the new glass must be ajusted as specified by BMW.

Improper installation and adjustment causes wind noise and leakage. The tool could be used for the Mini Cooper and the Mini Cooper Convertible.



#### MAN TGA Spacers (special tool)

Part No. 01 11 17 16

These MAN spacers have been specially developed for fitting the front windscreen on the TGA. The spacers are placed on the left and right wiper arms before fitting the windscreen. The spacers ensure that the heavy windscreen

does not drop down once fitted. The spacers are removed before fitting the bonnet, according to skin formation or hardening time.

Packing unit: 2 items



TYPE DESCRIPTION ILLUSTRATION

#### MAN TGA Fitting wedges (special tool)

Part No. 01 11 17 15

These MAN fitting wedges have been specially developed for fitting the front windscreens of all TGA versions. The wedges are put on specially marked A-pillar bodywork strengtheners before fitting the windscreen.

Using the two A-pillar wedges exact positioning of the windscreen on fitting is ensured.

Packing unit: 2 items



#### Hexagon socket screw key (2 sizes)

Part No. 01 12 18 01

Special tool for the removal of rear-view mirrors fastened with hexagon socket screws. (2 mm + 2,5 mm).

Length: 10 cm



#### Torx key (2 sizes)

Part No. 01 12 18 02

The Torx key is suitable for removing rear-view mirrors or mounted parts. (T15 + T20).

Length: 10 cm



#### Magnetic tray

Part No. 01 14 20 02

This magnetic tray helps with the safe storage of nuts and screws during work. The magnet on the underside is coated with plastic to prevent any damage to paint.



#### Telescopic magnet

Part No. 01 14 20 03

This telescopic magnet makes it possible to pick up screws and nuts which have fallen into areas which are difficult to reach.



#### Special bumping mallet

Part No. 01 14 22 01

Enables windscreen to be knocked out without damages.

Rubber body: 70 x 140 mm

Weight: 1270 g



#### Mirror base pliers

Part No. 01 15 50 01

The replaceable plastic jaws enable rear-view mirrors to be removed without scratching.





## **CUTTING TOOLS**

TYPE DESCRIPTION ILLUSTRATION

#### Professional PU Scraper Box I

#### Part No. 02 18 16 22

The PU-scraper box is equiped with the well-known PU-scraper with short shaft.

The high quality ice-hardened blades guarantee a long shelf life.

#### Content:

- 1 x box
- 1 x PU-scraper with short shaft
- 10 x chisel blades 13 mm
- 10 x chisel blades 16 mm
- 10 x chisel blades 20 mm



### Professional PU Scraper Box II

#### Part No. 02 18 16 27

The PU-Scraper Box contains the newly designed PMA/TOOLS scraper with ergonomic handle and longer shaft as well as 10 chisel blades, each of three different widths. The blades are easy and quick to change thanks to the scraper's thread connection. The ergonomic design and length of the handle improves user friendliness and increases safety when cutting off beading rests.

#### Content:

- 1 x box
- 1 x PU-scraper with long shaft
- 10 x chisel blades 13 mm
- 10 x chisel blades 16 mm
- 10 x chisel blades 20 mm



## Professional PU Scraper Box Economy

#### Part No. 02 18 16 28

The PU-scraper box is equiped with the well-known PU-scraper with short shaft.

The high quality ice-hardened blades guarantee a long shelf life.

#### Content:

- 1 х Вох
- ${f 1}$  x PU-scraper with short shaft
- 10 x chisel blades Economy 13 mm
- 10 x chisel blades Economy 16 mm
- 10 x chisel blades Economy 20 mm



#### Professional PU Scraper Box Economy I

## Part No. 02 18 16 29

The PU-Scraper Box contains the newly designed PMA/TOOLS scraper with ergonomic handle and longer shaft as well as 10 chisel blades, each of three different widths. The blades are easy and quick to change thanks to the scraper's thread connection. The ergonomic design and length of the handle improves user friendliness and increases safety when cutting off beading rests.

#### Content:

- 1 х Вох
- 1 x PU-scraper with long shaft
- 10 x chisel blades Economy 13 mm
- 10 x chisel blades Economy 16 mm
- 10 x chisel blades Economy 20 mm



TYPE ILLUSTRATION DESCRIPTION

#### PU professional scraper with long shaft

Part No. 02 18 16 26

Newly developed PU professional scraper with ergonomic handgrip, extended shaft and hexagonal internal blade attachment. The long shaft gives better control when working on tight curves in vehicle bodywork.

The new blade attachment in the shaft fixes the chisel blade centrally and prevents twisting or breakage of the blade.



#### PU professional scraper

Part No. 02 18 16 20

PU professional scraper with ergonomic and foamed handle and thread connection for rapid blade change. All chisel blades available from PMA/TOOLS fit in this scraper.



PU Scraper with aluminium handle Part No. 02 18 16 12 1 pi 1 piece Part No. 02 18 16 12-10 10 piece

PU scraper with aluminium handle and thread connection for rapid chisel blade change. All chisel blades available from PMA/TOOLS fit in this scraper.



#### Chisel blades PMA 13 mm

Part No. 02 18 16 14 1 pieces Part No. 02 18 16 14-10 10 pieces

The three available blade widths guarantee a clean and non-destructive cut according to PU beading width.

#### Chisel blades PMA 16 mm

Part No. 02 18 16 15 1 pieces Part No. 02 18 16 15-10 10 pieces

- ice hardened quality steel
- Made in Germany
- long tool life

Package of 10 pcs.



## Chisel blades PMA 20 mm

Part No. 02 18 16 16 1 pieces Part No. 02 18 16 16-10 10 pieces

#### Chisel blades Economy 13 mm

Part No. 02 18 16 14E

Chisel blades Economy 16 mm

Part No. 02 18 16 15E

Chisel blades Economy 20 mm

Part No. 02 18 16 16E

Package of 10 pcs.

• ice hardened quality steel



### Glass scraper (Standard)

Part No. 02 16 03 02

Very suitable for the removal of adhesive lables on glass.



## Glass scraper (Extra)

Part No. 02 16 07 01

Suitable for removing lables and PU remnants.



#### Replacement blades for glass scraper

Part No. 02 16 03 03 1 pieces Part No. 02 16 03 03-50 50 pieces Please use new blades when scraping on glass. Incorrect use can cause scratches!

Box of 100 pcs.



### **CUTTING TOOLS**

TYPE DESCRIPTION ILLUSTRATION

#### **Cold cutting knife**

Part No. 02 17 01 13

This tool is suitable for all "single" glued windows. The soft blue cover helps to prevent damages to hands and vehicles.



Replacement pull-cord with grip Part No. 02 17 01 14

#### **Cold cutting knife Quick Fix**

Part No. 02 17 02 14

Cold cutting made easy! Due to the Quick Fix mechanism the blade change only takes five seconds.



## Cold cutting knife fully adjustable

Part No. 02 17 01 15

The advantages of the new lever operated cold cut-out knife are:

- 1) The quick release handle allows blades to be changed very quickly and safely.
- 2) As more and more vehicles have differing heights of pinchweld on the A-pillar section, the fitter can adjust the height of the blade whilst still

cutting and thus avoid the back edge of the knife blade from touching or scratching the body/paint-

3) The ergonomic handle fits more comfortably into the hand, which is especially important when changing cutting direction or adjustingt he blade height. The new lever operated cold cut-out knife accepts all 19, 25 & 38 mm blades from our range.



#### Cold cutter spare blades 19 mm

Part No. 02 17 02 15 1 piece

Part No. 02 17 02 15-10 10 pieces

#### Cold cutter spare blades 25 mm

Part No. 02 17 02 16 1 piece Part No. 02 17 02 16-10 10 pieces

Cold cutter spare blades 38 mm

Part No. 02 17 02 17 1 piece Part No. 02 17 02 17-10 10 pieces Suitable for all cold knifes of our range.

- Made of high quality steel
- Special coining and heat treating
- Compounded sharper angles
- Brand quality "UltraWiz"



#### Cold cutter spare blades 19 mm thin

Part No. 02 17 02 23 1 piece

Part No. 02 17 02 23-10 10 pieces

Cold cutter spare blades 25 mm thin

Part No. 02 17 02 24 1 piece Part No. 02 17 02 24-10 10 pieces

Cold cutter spare blades 38 mm thin

Part No. 02 17 02 25 1 piece Part No. 02 17 02 25-10 10 pieces Suitable for all cold knifes of our range.

- Made of 40% thinner carbonsteel
- Special coining and heat treating
- Compounded sharper angles
- Perfect for vehicles with limited working space is limited
- Brand quality "UltraWiz"



#### Cold cutter spare blades 19 mm

Part No. 02 17 02 20 1 piece Part No. 02 17 02 20-10

10 pieces

#### Cold cutter spare blades 25 mm

1 piece Part No. 02 17 02 21 Part No. 02 17 02 21-10 10 pieces

#### Cold cutter spare blades 38 mm

1 piece Part No. 02 17 02 22 Part No. 02 17 02 22-10 10 pieces

Suitable for all cold knifes of our range.

- Made of stainless steel
- Special coining and heat treating
- Compounded sharper angles - Resists twisting and bending
- Brand quality "UltraWiz"



138

TYPE DESCRIPTION ILLUSTRATION

#### Cutter knife Olfa NOL 1 18 mm

Part No. 02 17 07 02

A universal knife with a fixing wheel that allows the blade to be fastened in any extension position.



#### OLFA XL 2

Part No. 02 17 02 04

Extra long cutter for cutting glued beading which is difficult to get at (suitable for right and left hand), e. g. Kadett E dashboard.



#### Cutter knife Interlock 18 mm

Part No. 02 17 05 01

A universal knife especially designed for firm hold and long service life.



#### Snap-off spare blades 18 mm

Part No. 02 17 02 03 Part No. 02 17 02 03-10

1 piece 10 pieces A universal knife especially designed for firm hold and long service life.

Package of 10 pcs.



### OLFA H-1 Heavy Duty Cutter 25 mm

Part No. 02 17 07 03

This new Olfa Heavy Duty Cutter is used for cutting thicker and more solid materials. Able to take greater loads, the 25 mm wide cutting blade is ideal for cutting glued on solid inside roof linings (e. g. Peugeot, Renault, Citroen etc.) when fitting sunroofs.





#### Interlock cutter knife for 9mm blades

Part No. 02 17 05 09

This cutter knife is particularly suitable for cutting automobile and building foil because of its small dimensions. In order to avoid scratches on the glass surface, please make sure to use only Olfa 9mm stainless steel blades when cutting the foil on glass.



#### **OLFA stainless steel blades 9mm**

Part No. 02 17 19 11

This stainless steel blade fits in all standard 9 mm knives. The blade is made of stainless steel and is designed for cutting car and building foil.



## Wire Feeder (T-Handle)

Part No. 02 18 01 03

Suitable for piercing the PU beading with the inserted wire.



# TOOLS/ACCESSORIES

## **CUTTING TOOLS**

TYPE	DESCRIPTION	ILLUSTRATION
Counter-holder for wire (Luxury) Part No. 02 18 02 03	This tool guarantees a very fast removal time for windscreens. The counter-holder is placed against the PU beading on the inside and a wire handle is used for pulling from the outside.	
Wire counter-holder (Standard)		
Part No. 02 18 01 04	Fast cutting without damages from friction or scratching is the advantage of the counter-holding system.	
Knurled screw for M5 wire holder		
Part No. 02 18 01 04A	Replacement knurled screw for wire holder standard.	
Knurled screw for M3 wire holder		
Part No. 02 18 01 04B	Replacement knurled screw for wire holder standard. (old version)	And the second s
Cutting wire handles (Standard)		
Part No. 02 18 01 05	Special handles to clamp the wire so tight that it is impossible to pull the wire out.	X
Cutting wire handles (Luxury)	Chariel handles to algumenths using as tight that	
Part No.   02 18 01 08	Special handles to clamp the wire so tight that it is impossible to pull the wire out.  Material: Impact resistant plastic.	
Suction cup incl. cap nut M4		
Bestell-Nr. 04 21 29 15 This small suction cup is used to be fixed on our PMA self-locking wire handles, part. no. o2 18 01 05 and 02 18 01 08. It is as well used to fix our PMA wire guard template small part no. o2 18 02 12.	By fixing the suction cup to the end of one the self-locking wire handles, the operator can safely attach the handle temporarily to the vehicle windscreen or body whilst moving into position to use the cut-out wire. By fixing the suction cup to the wire guard template, the operator can restrain the guard from slipping or moving.	
Wire insertion tool (Standard)		
Part No. 02 18 02 01	This tool is suitable for piercing the PU beading. The wire can then be inserted.	
Wire insertion tool (Luxury)		
Part No. 02 18 02 02	Suitable for piercing the PU beading to insert the cutting wire without any problems.	

TYPE ILLUSTRATION DESCRIPTION Wire guard template big Part No. 02 18 02 11 750 mm length This plastic wire guard template is used to pro-150 mm width tect the dashboard area while cutting with wire. 5 mm height The flexible material guarantees that the wire z guard could be used for curved screens. Wire guard template small Part No. 02 18 02 12 500 mm length This plastic wire guard template is used to pro-105 mm width tect the inner A-pillar and roof area. The flexible 5 mm height material guarantees that the wire guard could be used for curved screens. Square wire 0,6 mm, 50 m cardboard reel Part No. 02 18 02 05R Square wire of high quality, suitable for all highmodular PU materials. Square wire 0,6 mm, 50 m cardboard reel Part No. 02 18 16 10 Square wire of high quality, suitable for all highmodular PU materials. Square wire (specially treated) 0,6 mm, 50 m on cardboard roll Part No. 02 18 02 09 This square wire has been subjected to special treatment after drawing which gives it a tensile strenght of 2400 N/mm<sup>2</sup>. Suitable for all highmodular PU materials. Square wire 0.7 mm 50 m coil Part No. 02 18 16 09 This 0,7 mm square wire is characterised by its high strength and long service life when cutting regular and high-modular PU materials. Wire (gold-wound), 22,5 m Part No. 02 18 02 07 This special wounded wire has an excellent cutting quality in the PU beading. With this wire it is possible to remove laminated glass without damage. Wire (round 0,6 mm) 200 m coil Part No. 02 18 02 06 Round wire of highest quality.

## TOOLS/ACCESSORIES

### **CUTTING TOOLS**

TYPE DESCRIPTION ILLUSTRATION

#### Special tin for cutting wire

Part No. 02 18 16 11

This tin can hold cutting wire up to a reel lengths of 200m.



#### Bevelling scissor for universal rubbers

Part No. 02 34 04 33

This scissor can be used for universal rubbers and flat strips.



#### Hand scraper

Part No. 02 15 02 02

Suitable for the removal of remnant materials on the bodywork as well as lifting mouldings.



#### **Putty knife**

Part No. 02 15 04 05

For removing PU remnants, for spreading sealing material and lifting rubber seals.



#### Putty knife Don Carlos

Part No. 02 15 04 04

This putty knife can be used for lifting seals or removing mouldings. Also suitable for easy levering out of clipped door and A-Pillar trims as well as WS mouldings.



## **TOOL BOXES**

TYPE DESCRIPTION ILLUSTRATION

#### Tool kit T 3000 Profi Line

Part No. 02 18 16 30

This new innovative universal kit comes fully equipped with all the tools necessary for the professional to complete fitting installations on all current vehicle models applications. With the Tool Kit T 3000 Profi Line automotive glass replacement is made easy!

Clear advantage: With such a comprehensive kit, no more time wasted looking for that specific tool, as all you need is in the one place. Through improved efficiency comes greater profitability.

**Note:** All tools from this kit are available from our current range and can be re-ordered separately if required.

#### Content:

- 1 x Lift pin (short)
- 1 x Plastic spatula Special
- 1 x Clipe remover
- 1 x Professional Strip lifter

- 1 x Easy Lift windscreen wiper remover
- 1 x Glass scraper Extra
- 1 x Replacement blades Glass scraper (100 pieces)
- 1 x Cutter knife XL 2
- ${f 1}$  x Cold cutting knife Quick Fix
- ${f 1}$  x Cold cutter spare blades  ${f 19}$  mm
- 1 x Cold cutter spare blades 25 mm
- 1 x Wire Feeder
- 1 x Counter-holder for wire
- 2 x Cutting wire handles blue
- 1 x Square wire
- 1 x Wire gold
- 1 x Professional PU Scraper Box
- 2 x Moulding suction clamp
- 2 x Double suction lifter
- 1 x Safety gloves size L
- 1 x Hexagon socket screw key
- 1 x Combination wrench
- 1 x Long-Nose Pliers





TYPE DESCRIPTION ILLUSTRATION

#### **Tool box Compact 37**

Part No. 03 19 25 03

This tool box is made of polypropylene. Castors and/or carrying belt can be attached. Sub-division of the inside of the box using seven inserts and dividers.

Weight: 3,7 kg

Dimensions : 230 x 540 x 300 mm



#### **Tool box Compact 47**

Part No. 03 19 25 04

This tool box is made of polypropylene. Flexible sub-division of the inside of the box using inserts. Two drawers for small parts. Castors and/or carrying belt can be attached.

Weight: 4,6 kg

Dimensions: 295 x 540 x 300 mm



#### **Tool box Compact 50**

Part No. 03 19 25 15

Polypropylene tool case including 10 inserts and separating panels for flexible division of space within the case. Castors and/or carrying belt can be attached.

Weight: 4,6 kg

Dimensions: 260 x 620 x 315 mm



## WINDSCREEN STANDS + SUCTION LIFTERS

TYPE DESCRIPTION ILLUSTRATION

#### Windscreen stand Standard blue

Part No. 04 20 01 01

### Windscreen stand Standard red

Part No. 04 20 01 01R

This modified windscreen table guarantees clean and correct installation due to its adjustable, belt and four suction pads. The new styled rubber feets ensure that the table stands compact even with heavy windscreens.

Load capacity 80 kg



#### **Adjustable Windscreen Table**

Part No. 04 20 01 06

This windscreen table with the self-locking tubular construction allows for quick assembly and easy transport. As it is adjustable in width, it fits to the contours, shapes and sizes of most windscreens.

Disassembled the Adjustable Windscreen Table requires only minimal storage area. Contrary to

the Windscreen Table Standard (Art. No. 04 20 01 01), it can be sent by parcel services (DPD, UPS, GLS etc.) without any difficulties.

Supports up to 80 kgs

Rubber cups (Art.No. 04 20 01 04) and feet (Art.No. 04 20 01 00) available as spare parts.



### WINDSCREEN STANDS + SUCTION LIFTERS

TYPE DESCRIPTION ILLUSTRATION

#### Truck/BUS windscreen stand

Part No. 04 20 01 03

This newly designed screen bench can take loads up to 120 kilograms. This makes it ideal for bearing large and heavy truck and bus windscreens. The foam cover holds the windscreen in the required position even under side pressure. The chains on the side make it possible to adjust the height and the distance between the

foam layers. Accordingly this windscreen bench is also suitable for working on smaller side windows. Load capacity 120 kg



#### Replacement rubber feet for windscreen stand

Part No. 04 20 01 04

Rubber feets. Suitable for windscreen stands 04 20 01 01 and 04 20 01 01R.



#### Spare rubber suction pads

Part No. 04 20 01 00

Suitable for Windscreen stands 04 20 01 01 and 04 20 01 01R.



#### Wheel Step ladder

NEW

Part No. 04 20 01 10

This adjustable step is placed over the tyre on the front wheel of the vehicle and allows the fitter to "step up" to reach the top of the windscreen of most commercial vehicles (light and heavy commercials) without the need for additional ladders etc Load capacity 225 kg, can be used on most vehicles.



#### **Double suction lifter blue**

Part No. 04 21 29 01

This suction holder is especially designed for installing windscreens and is suitable for any windscreen curvature due to its two jointed heads.

Maximum load capacity 80 kg

Made in Germany



#### Double suction lifter blue

Part No. 04 21 29 03

The new big rubber cups of this double suction lifter make working easy. The suction pads adhere to the glass surface on the slightest application of pressure. In conjunction with the movable

heads, best adhesion on tightly curved screens is ensured.

The handle has a slit for the lashing strap.

Maximum load 80 kg Made in Germany



#### Profixx double suction lifter adjustable (socket shape)

Part No. 04 21 29 11

Double suction cup lifter in established made in Germany quality with wide cups for better fixation in bended glass areas. Specialy equipped with apatent pending adjustable handle the new PMA lifter offers the possibilty to adjust the fitted screen precisely. Just for the PU extruded Volkswagen screens with very narrow upper gaps between glass edge and pinchweld

this new suction cup is perfectly usable for finding and adjusting the right screen position.

Maximum load 80 kg Made in Germany



## WINDSCREEN STANDS + SUCTION LIFTERS

TYPE DESCRIPTION ILLUSTRATION

Replacement rubber cup for double suc	tion lifter	
Part No. 04 21 29 05	Large replacement rubber cup to fit the double suction lifter. Made in Germany	
Double suction lifter Veribor		
Part No. 04 34 04 33	This suction lifter is specially designed for installing windscreens and is suitable for any windscreen curvature due to its two jointed heads.  Maximum load capacity 80 kg  Made in Germany	
Replacement rubber cup		
Part No. 04 34 04 34	Suitable for both of the double-jointed suction holders Part No.: 04 21 29 01 and 04 34 04 33.  Made in Germany	
Single suction lifter		100 200
Part No. 04 21 29 02	This suction holder is particularly suitable for the installation of all windscreens, rear and side windows. The suction holder is fastened onto the glass by simply closing the handle.  Load capacity: 50 kg	
Single suction lifter Pannkoke		
Part No.   04 21 29 07	This suction pad is particularly suitable for insertion and removal of extremely curved glass.  Dimension: 250 mm	
Bow handle for suction pad		
Part No. 04 21 29 08	Using the bow handle, the individual fitter can install windscreens and rear windows safely onsite without outside help.	
Powr-Grip pump suction lifter		
Part No. 04 21 29 04	This pump suction lifter is particularly suitable for carrying heavy and large truck and bus wind-screens as well as plate glass panes weighing up to 200 kilograms. Attach the Powr-Grip suction lifters to flat areas on very curved screens in order to avoid the lifters coming off when lifting.	
Moulding suction clamp		
Part No.   04 21 03 06	For fastening glued cover mouldings (e.g. Toyota Corolla, Nissan Sunny, Mazda 626). The strip is fastened into position by constant pressure.	


# WINDSCREEN STANDS + SUCTION LIFTERS

TYPE DESCRIPTION ILLUSTRATION

#### **Doorglass window holders**

Part No. 04 21 03 05

This sidelight holder allows free-fastening of side windows so that the door winding elements can be prepared without any problem.



#### Lashing strap (cars)

Part No. 04 21 29 06

This lashing strap is used for fastening car windscreens. Use the belt in case the windscreen is still vibrating after installation.

Length: 6 m



#### Lashing strap (Truck/bus)

Part No. 04 21 29 10

This lashing strap is used for fastening truck/bus wind-

screens. Use the belt in case the windscreen is still vibrating after installation.

Length: 10 m



# **GLASS TREATMENT**

TYPE DESCRIPTION ILLUSTRATION

#### Ombrello: The water and dirt-resistant glass treatment

Part No. 13 35 60 03

- New type of glass treatment in original equipment quality.
- Penetrates the glass top layer by chemical reaction and seals the surface so that water drops and dirt are carried away by the air stream at speeds over 60 km per hour.
- Water rolls off immediately even in the worst weather conditions such as rain and snow. Blinding effect by scattered light is avoided.
- Highly adhesive insect remains are removed easily by the windscreen wipers. The wiper blades last longer and attrition on the screen surface is reduced.
- Frost and ice on the windscreen can be removed more easily.
- Ombrello sealant only has to be renewed every 20,000 kilometres - depending on the frequency of wiper use.

- Research carried out by well-known institutes
  have shown that Ombrello improves vision by
  34% by day and by night. Reaction times are
  reduced by a second so that the braking distance
  is reduced by 27 metres at a speed of 100 kilometres per hour.
- Only suitable for real glass. Not to be used with plastic or macrolon surfaces.

**Tip:** Be sure to observe the Ombrello instructions for use!



#### Ombrello Precleaner 180 ml

Part No. 13 35 60 02

This precleaner developed specially for Ombrello glass seals removes all dangerous contamination from laminated and toughened safety glass and lenghtens the service life of the sealing. The zinc baths used for floating laminated glass leave an invisible layer on the outer side of the winds-

creen. This zinc layer leads to the formation of streaks on the windscreen and windscreen wiper wobble if the surface is not cleaned correctly. For ideal pre-cleaning of the windscreen, use Ombrello Preclean in combination with a suitable polishing machine (3M) or orbital sander (with felt disc).



# **GLASS TREATMENT**

TYPE DESCRIPTION ILLUSTRATION

#### Contact 350 ml

Part No. 13 35 60 14A

This glass contact cleaning fluid cleans the glass surface in preparation of the Ombrello glass treatment, by removing traces of paint, cleaning residues, wax, grease and tar. As the contact cleaning fluid contains microscopic

abrasive particles, it is essential to use a water spray in conjunction with the fluid when applying to the windshield or other glass surface to ensure that any abrasive marks are avoided.



#### Ombrello demonstration jar

Part No. 13 35 60 04

Demonstrates convincingly to your customers the unique effect of Ombrello glass sealant.



#### Ombrello brochure (German)

Part No. 13 35 60 12 Part No. 13 35 60 12-50

1 piece D 50 pieces qu

Detailed and convincing information about the quality, long-life and effects of Ombrello for your



#### Ombrello counter display

Part No. 13 35 60 06

For the presentation of Ombrello products in counter and customer areas.



#### Ombrello wall chart A1 (German)

Part No. 13 35 60 18

For a professional presentation on your premises or at trade fairs.



# High-quality micro-fibre cloth

Part No. 13 35 60 08

Perfect cleansing cloth for use with Contact Cleaning Fluid. Enables vehicle windscreens to be cleaned without chemical detergents and just with clean water. Reduces the use of glass detergents and guarantees best possible results.

**Tip:** Sell your Ombrello customer a high quality micro-fibre cloth for cleaning vehicle windscreens. Your customer won't need any windscreen detergent any more and can clean the windscreen at any time and anywhere.

Washable at 90° C

Dimensions: 32 cm x 36 cm



# FEIN CUT - OUT TECHNIOUE

TYPE DESCRIPTION ILLUSTRATION

# Fein cutter FSC 1.6

Part No. 06 27 10 01

The newly developed Fein Super Cut 1.6 continues the successful tradition of the Fein auto glass cutters. The Super Cut 1.6 offers the following benefits: Reduced heat build-up as a result of modified motor (repairs for overheating are avoided / longer tool life) Ergonomically designed grip on the cutter (easier to use). Reduction in vibrations (runs more smoothly and gives preciser working). Weight reduction in the order of 250 g

#### Technical data:

Nominal power intake 400 W / Power output 240 W Vibrations 10,000-18, 700 1/min. Weight 1.3 kg

#### Contents:

- 1x Fein cutter FSC 1.6
- 1x sharpener
- 1x clamping screw
- 1x spanner
- 1x metal box



#### Pneumatic cutter

Part No. 07 26 29 01

Operates with an oscillating knife head.
The knife head has an oscillation range of 1.000-20.000 rpm. The advantage of the compressed air version is a longer service life because of the continuous machine cooling by the flow of com-

pressed air. High-quality alternative to electronic Fein machines!



#### Fein knife 087 U. knife 18 mm

Part No. 06 28 10 11

This blade in U-form with 18 mm blade is used for removal from the outside. Particularly suitable for Passat IV.

Packaging unit: 2 pcs.



#### Fein knife 076 U. knife 24 mm

Part No. 06 28 10 03

This blade in U-form with 24 mm blade is used for removal from the outside.

Packaging unit: 2 pcs.



#### Fein knife 079 U. knife 36mm

Part No. 06 28 10 04

This blade in U-form with 36 mm blade is used for cutting from the outside just like the 076 knife.

Packaging unit: 2 pcs.



#### Fein knife 115 U. knife 22mm

Part No. 06 28 10 32

This blade in U-form with 22 mm blade is used for cutting from the outside.

Packaging unit: 2 pcs.



# Fein knife 114 U. knife 32mm

Part No. 06 28 10 31

This blade in U-form with 32 mm blade is used for cutting from the outside.

Packaging unit: 2 pcs.



#### Fein knife 101 U. knife 60mm

Part No. 06 28 10 19

This blade with wide U-form and 60 mm blade is used for removal from the outside- e. g. dashboard section W124

Packaging unit: 2 pcs.



# FEIN CUT - OUT TECHNIQUE

TYPE ILLUSTRATION DESCRIPTION Fein knife 210 U-shaped 19 mm Part No. 06 28 10 78 cially on modular or hard-glued windscreens, and The new 210 Fein knife is a reinforced version of allow good direction whilst cutting. the well-known U-shaped Fein knife. In addition the inside of the cutting edge is serra-Packaging unit: 2 pcs. ted. Both modifications give longer tool life, espe-Fein knife 210 U-shaped 25,5 mm Part No. 06 28 10 79 cially on modular or hard-glued windscreens, and The new 211 Fein knife is a reinforced version of allow good direction whilst cutting. the well-known U-shaped Fein knife. In addition the inside of the cutting edge is serra-Packaging unit: 2 pcs. ted. Both modifications give longer tool life, espe-Fein knife 210 U-shaped 38 mm Part No. 06 28 10 80 especially on modular or hard-glued windscreens, The new 212 Fein knife is a reinforced version of and allow good direction whilst cutting. the well-known U-shaped Fein knife. In addition the inside of the cutting edge is Packaging unit: 2 pcs. serrated. Both modifications give longer tool life, Fein knife 073 P. knife 35 mm Part No. 06 28 10 02 This straight blade with 35 mm blade is used for removing bus windscreens. Packaging unit: 2 pcs. Fein knife 081 G. knife 60 mm Part No. 06 28 10 06 This straight blade with 60 mm blade is used for removal from the inside in areas where the PU beading is very difficult to get at. Packaging unit: 2 pcs. Fein knife 171 G. knife 64 mm Part No. 06 28 10 68 This straight blade with 64 mm blade is used for removing from the inside. Packaging unit: 2 pcs.

Fein knife 125 G. knife 70 mm Part No. 06 28 10 40	This blade is used for front/rear/side windows which are difficult to get at. Use from the inside of the window.  Packaging unit: 2 pcs.	
Fein knife 104 Spoon 35 mm		

Fein knife 104 Spoon 35 mm		
Part No. 06 28 10 22	This blade with 35 mm blade in spoon shape is bent through 90° and is used for removal from outside. Particularly suitable for Passat B5 and Golf B4 Windscreens, upper part.  Packaging unit: 2 pcs.	

# FEIN CUT - OUT TECHNIOUE

TYPE DESCRIPTION ILLUSTRATION

#### Fein knife 120 Spoon 14 mm

Part No. 06 28 10 35

This 14 mm blade in spoon shape is bent through 90° and is used for removal from outside.

Tip: Particularly suitable for the removal of VW rear Windows (e. g. Golf III, Golf IV, Passat V).

Packaging unit: 2 pcs.



#### Fein knife 207 L-shaped 25.4 mm

Part No. 06 28 10 71

The L-knife 207 from the company Fein has a cutting surface of 25,4mm and is particularly for removing framed vehicle screens because of its form and the saw edge. The saw edge makes it possible to cut simultaneously polyurethane and frame section which are pre-applied on the

glass. Windscreens can also be removed without problem from vehicles where only a very narrow space between the edge of the screen and the bodywork (e. g. roof section of VW models) is left, because the blade oscillates parallel to the screen edge.

Packaging unit: 2 pcs.



#### Fein knife 208 L-shaped 19 mm

Part No. 06 28 10 72

The new generation of Fein L-knives with 208 blade offers a universal knife with a 19mm cutting surface. The form and saw edge makes it particularly suitable for removing framed vehicle windscreens. Cutting high-modular adhesives is absolutely no problem with the saw edge.

Windscreens can also be removed without problem from vehicles where only a very narrow space between the edge of the screen and the bodywork (e. g. roof section of VW models) is left, because the blade oscillates parallel to the screen edge.

Packaging unit: 2 pcs.



#### Fein knife 209 L-shaped 38,1 mm

Part No. 06 28 10 74

This Fein L-knife with a cutting edge of 38 mm has been specially designed for the latest generation of Trucks and buses. The screens of the new MAN TGA and MAN City Bus NL 202 models can be removed without any problem with the

o79 Fein blade after carrying out the V-cut. Cutting PU beading widths up to 35 mm is absolutely no probem with the saw edge of the 209 blade.

Packaging unit: 2 pcs.



### Fein knife 217 Hook-shaped 38 mm

Part No. 06 28 10 81

The new 217 Fein knife of so-called hook-shape is a completely new blade development, to be used only from outside.

The special notch extending beyond the curved area of the blade, allows separation of joined glass panes without making a V cut first. The

217 blade has been specially developed by the Fein company for utility vehicle and bus manufacturers, who have vehicle-specific requirements in relation to glue beading width and position. Excellent for all glued utility vehicle and bus windscreens.

Packaging unit: 2 pcs.



# Fein knife 194 knife 110 mm

Bestell-Nr. 06 28 10 85

This new straight Fein Knife blade 194 can be used either from the inside of the vehicle, or from the outside when cutting out coach windscreens and sidelights. The series of holes spaced along the blade help reduce the cutting

resistance normally present when removing the wider and deeper polyurerhane beads.

This blade may also be used to remove the reinforcement struts usually found in roof panels.

Packaging unit: 2 pcs.



#### Fein auto glass set

Part No. 06 28 10 77

The Fein auto glass set contains all major new blades needed for removing modular and tight fitting (small gap between windscreen and bodywork) windscreens.

9 blades in cardboard box

#### Set contents:

3 x 207 L-shaped cutting blades with 25.4mm blade 2 x 208 L-shaped cutting blade with 19 mm blade

1 x 209 L-shaped cutting blade with 38 mm blade

1 x 157 reinforced U-shape cutting blade with

60 mm blade

1 x 111 reinforced U-shape cutting blade with 95 mm blade

1 x 212 reinforced U-shape cutting blade with 38 mm blade



#### Fein Saw Blade HSS 80 mm

Part No. 06 28 10 69

This Fein saw blade is particularly suitable for removing roof bows during sun roof installation. The oscillating Fein cutting system enables the HSS saw blade to be fed through various materi-

als without any additional effort. It can be used to cut all kinds of metal and plastic.



# **FEIN CUT - OUT TECHNIQUE**

TYPE ILLUSTRATION DESCRIPTION

#### **Nut socket wrench**

Part No. 06 28 10 58

Socket wrench for undoing fastening nuts.



#### **Sharpening Stone with handle**

Part No. 05 25 09 02

Our grindstone with handle is used for manual regrinding of all types of cutting blades. The sturdy design of the tool ensures a long service life.



#### Working gloves, size: L

Part No. 06 28 10 82

#### Working gloves, size: XL

Part No. 06 28 10 83

These newly developed working gloves are a musthave for any who uses Fein cutting technology. The gel lining on the inside of the palm of the glove reduces vibration as well as "white finger syndrome" symptoms, which arise from high vibration transfer. The new leather working gloves with gel lining allow low vibration cutting, even on maximum oscillation output of a Fein machine.



# Safety goggles UVEX Part No. 08 19 30 60

- fit over spectacles
- super-panorama front
- pressure-free fit
- effective, indirect ventilation through special side design
- sides adjustable to 4 lenghts



# **POLISHING AND CUTTING MACHINES**

TYPE DESCRIPTION ILLUSTRATION

# Bodywork cutter JS 1670

Part No. 09 28 11 01

Do you also fit sun roofs? Then this sheet metal cutter is just what you need. Cuts cleanly without burring or pulling and manages curve radiuses of less than 30 mm. The JS 1670 is one of the easiest to use and highest quality tools of its kind on the market today.

#### Technical details:

Power consumption: 260 W Cutting radius: 30 mm No-load stroke rate: 4500 rpm

Max. cutting power

Soft steel: 1,0 mm NF metal: 1,5 mm Weight: 1,3 kg



#### Replacement blade for bodyworkcutter **JS 1670**

Part No. 09 28 11 02

High quality replacement blade.



#### Knife set for JS 1670 bodywork cutter

Part No. 09 28 11 02A

Replacement blade.



# POLISHING AND CUTTING MACHINES

TYPE DESCRIPTION ILLUSTRATION

#### Electric file 9031

Part No. 09 28 11 03

For uncomplicated and clean work when manually regrinding laminated glass panels etc. The removable swivel handle makes it possible even to work on areas which are difficult to get at. The 9031 can be used anywhere for grinding glass, metal, wood, plastic etc. Please use appropriate grinding belt if working on other materials than glass

#### Technical details:

Power consumption: 490 W
Grinding belt: 533 x 30 mm
Belt speed: 1.000 m/min.
Weight: 1.8 kg



#### **Grinding belts 40**

**Grinding belts 60** 

**Grinding belts 80** 

Part No. 09 28 11 08

Part No. 09 28 11 07

Part No. 09 28 11 04

# Grinding belts 100 Part No. 09 28 11 05

#### Grinding belts 120

Part No. 09 28 11 06

For grinding laminated glass panels etc. These high-quality grinding belts have a long service life when working on glass edges.

Available in 5 different grain sizes.



# CARTRIDGE GUNS

TYPE DESCRIPTION ILLUSTRATION

# Battery powered cartridge gun, 4.8 volts for 310 ml cartridge and 400 ml bag

#### Part No. 09 33 06 01

The Powerhand cartridge gun is based on a new plunger release mechanism.

The high ejection pressures of 3,000 N, as well as the 4.8V of power, allow ease of working with modular PUR adhesives.

Even HM products are easy to work. This Powerhand battery powered gun can be used for 31oml cartridges, as well as 400 ml bags.

#### Technical data:

Weight: 3.1 kg overall pack/2.1 kg gun Capacity: About 45 cartridges on one

battery charging

Feed rate: About 2.5 - 15 cm/min.

Ejection pressure: 3000 N

After-running: No after-running of sealant as

a result of electronic pressure

release

#### Contents:

1x battery powered cartridge gun

1x 4.8 volt battery

1x charger

1x bag-plunger cap



#### Battery powered cartridge gun 4.8 volts for 400/600 ml bags

#### Part No. 09 33 06 00

This Powerhand battery powered gun is also fitted with the new plunger release device. High ejection pressure capacity of 3,000 N ensures ease of working with modular PUR adhesives.

This Powerhand battery powered gun can be used for working with 310 ml cartridges, 400 ml and 600ml bags.

#### Technical data:

Weight: 5.3 kg overall pack/2.15 kg gun Capacity: About 35 bags (600 ml) on one

battery charging

Feed rate: About 2.5 - 15 cm/min.

Ejection pressure: 3000 N

After-running: No after-running of sealant as

a result of electronic pressure

#### Contents:

1x battery powered cartridge gun

1x plastic case

1x 4.8 volt battery 1x charger

1x bag-plunger cap



#### Replacement battery 4,8 volts

Part No. 09 33 06 02

4.8 volt replacement battery for Powerhand cartridge and bag battery powered gun.





TYPE DESCRIPTION ILLUSTRATION

#### Battery powered cartridge gun PC COX Electra*flow* 14.4 V for 310 ml cartridge and 400 ml bag

#### Bestell-Nr. 09 33 05 70

Powerful, Efficient and effortless applicators. This new cordless cartridge gun of the new generation **Electraflow** is equipped with a 14.4 V battery and a recharger. It is designed to dispense modular and even high modular PUR adhesives with ease. It provides great flexibility and enables the professional or industrial user to undertake the most demanding of jobs with confidence.

The **Electraflow** achieves improved efficiencies for all windscreen installations.

Fast, efficient and easy application of even the most viscous of adhesives and sealants.

- · Strong construction, long service life
- Full range of accessories and spares

- Up to 3000N application force
- Non drip function and overload shut off
- For 310ml cartridges and 400ml bags

#### **Technical Specification:**

Total weight: 4,2 kg
Drive force: 3000 N max.

No-load speed: 4.0 mm/sec. (10 in/min)
Battery: 14.4 V rechargeable NiCad

Battery charge time: 1 hour

#### Contents:

- 1x battery powered cartridge gun
- 1x plastic case
- 1x 4.8 volt battery
- 1x charger



# Replacement battery PC COX 14,4volts

#### Bestell-Nr. 09 33 05 71

EW

14,4 Volt Ersatzakku für PC COX Electraflow Kartuschen- und Beutelakkupresse.



# Recharger 14,4 volts Bestell-Nr. 09 33 05 72

#### Battery powered cartridge gun 7.2 volts for 310 ml cartridge and 400 ml bag

#### Part No. 09 33 05 90

The Powerhand cartridge gun is based on a new design plunger release mechanism and can produce high ejection pressures, through the 7,2V power unit. It is very suitable for dispensing high modular Polyurethane adhesives. This Powerhand battery powered gun can be used for 310ml cartridges, as well as 400ml bags and all mechanical parts are now madeof V2A steel.

#### Technical Data:

Weight: 2,26 kg

Capacity: approx. 45 cartridges with one charging Feed rate: approx. 2,5-15cm/min

Ejection press.: 3800 N

Run-out: No additional product extrusion when

trigger is released



# Replacement battery 7,2 volts

Part No. 09 33 05 92

7,2 volt replacement battery for Powerhand cartridge and bag battery powered gun.





# Battery powered cartridge gun Pressofix 208 Electronic 2.4 volts

#### Part No. 09 33 06 04

Regulation of feed rate on a ratio of 1:6 for particulary good adjustment to suit different joint widths, filling materials and nozzle widths. The Pressofix 208 electronic stops the flow of adhesive immediately upon completion of application of polyurethane to ensure clean working finish. Tool kit in box consisting of Pressofix 208 electronic, spare re-chargeable AK210 and recharger.

#### Technical details:

Weight: 1600 grams

Output: approx. 35 Cartridges with

one battery charge
Feed rate: approx. 2,5-15 cm rpm

Ejection pressure: 1500 N

Slip cluth: avoids motor blocking with

tougher materials

Filling display: white/red sector shows

full/empty status

Cartridges: for standard commercial 310 ml Cartridges



# Recharger for AK 210 battery

Part No. 09 33 06 07

For recharging batteries at 230 V. Built-in overload protector with loading control lamp.





# TOOLS/ACCESSORIES

# **CARTRIDGE GUNS**

TYPE DESCRIPTION ILLUSTRATION

#### Transparent upgrade tube for Pressofix 208 electronic

#### Part No. 09 33 06 08

Polyurethane in 400 ml foil tubes is often used as alternative to the well-known 310 ml cartridges. The transparent tube and the new transport piston are easy to fit and guarantees best quality and easy handling. All grades of polyurethane viscosity can be processed with the upgraded ABB Pressofts 208 F

#### Content:

- 1x transparent upgrade tube
- 1x transport piston
- 1x union ring
- 1x plastic nozzle



#### Cartridge gun Avon for bagged items

Part No. 09 33 31 01

The Avon cartridge gun is used for applying 400 ml bagged single-component PUR adhesive.

Outstanding power transfer ensures ease of working with standard polyurethanes.



#### Cartridge gun Avon

Part No. 09 33 31 02

Suitable for all 1K cartridges (310 ml). Dimensions 370 mm/310 mm



#### Compressed air cartridge gun Winchester

Part No. 09 33 31 03

Pressure regulator for infinitly adjustable control of feed rate. Application of different beading heights and widths possible. An automatic discharge valve prevents the polyurethane from running on.

For 310 ml Cartridges.



#### Piston compressed air cartridge gun

Part No. 09 33 31 04

Pressure regulator for infinitly adjustable control of feed rate.

This new piston compressed air cartridge gun is particularly suitable for high consistency polyurethane.



#### Compressed air pistol (HP) for 600 ml bag Wilton 15" Sachet

Part No. 09 33 31 05

Pressure regulator for infinitly adjustable control of feed rate.

This compressed air pistol is designed for use with substances in 600 ml bags and particullarly suited for glueing in bus and train sectors.



# **GLASS REPAIR SYSTEMS**

TYPE DESCRIPTION ILLUSTRATION

#### 3M Glass Repair System

Part No. 10 44 34 00

The grinding and polishing system for repair of:

- flat glass
- vehicle glazing
- local transport systems (bus and rail)

Good cost-volue ratio because no additional grinding or polishing materials are required. The individual grinding discs can be changed rapidly. The 3-Dimensionale Trizact film coat of the grinding discs was specially developed by 3M and ensures that new grinding minerals are constantly being created during grinding. This guarantees consistent grinding quality and a long service life for the grinding discs.

#### Content:

- 1 x angle grinder
- 1 x system case
- 1x case/operating instructions
- 1 x water bottle
- 2 x support pads
- 1x support pad (velcro)
- 5 x buffing Pad 1 x CPS compound
- 25x grinding discs A35 (green)
- 25x grinding discs A1o (blue)
- 25x grinding discs A5 (brown)
- 25 x grinding discs XA (white)

Further detailed product information is available on request.



# **GLASS REPAIR SYSTEMS**

TYPE ILLUSTRATION DESCRIPTION

3M Polishing disc A10 blue

#### 3M Polishing disc A35 green

Part No. 10 44 34 01 1 piece Part No. 10 44 34 01-5 5 pieces



#### Part No. 10 44 34 02 1 piece Part No. 10 44 34 02-5 5 pieces

# 3M Polishing disc A5 brown

Part No. 10 44 34 03 1 piece Part No. 10 44 34 03-5 5 pieces



#### 3M Polishing disc P white

Part No. 10 44 34 04 1 piece Part No. 10 44 34 04-5 5 pieces



#### 3M Supporting pad/Velcro

Part No. 10 44 34 05



#### 3M Supporting pad/leather

Part No. 10 44 34 06



#### 3M Buffing Pad

Part No. 10 44 34 07 1 piece Part No. 10 44 34 07-5 5 pieces



#### 3M Glass Polishing Compound

Part No. 10 44 34 08



#### Scratch A way XEB Elektro

Part No. 10 44 37 00

Scratches on laminated and tempered glass can be removed easily and efficiently with this electric polishing machine. The different polishing compounds and polishing discs guarantee a perfectly clear, transparent glass surface. The small diameter of the polishing head means that only the scratched area of glass is machined and the amount of time worked is reduced to a minimum. Scratch A way polishing systems are used successfully in glass production, wholesale and car glass installation.

Offer your customers an additional service with the glass repair systems from Scratch A way!

#### Technical details:

Voltage: 230 V Output: 150 W

Speed: 5.000-9.500 rpm

Disc diameter: 45 mm Weight: 1,5 kg



#### Content:

XEB electric polishing machine, polishing head, magnifying glass, red paste, pink paste, torch marking pen, 25 fine polishing discs, 10 link chains, 5 metal washers, polishing leather, 2 cooling sponges, rubber scraper



# **Scratch A way Econo**

Part No. 10 44 38 01

This compressed air-operated polishing machine removes glass scratches quickly and easily. The different polishing compounds and polishing discs guarantee a perfectly clear, transparent glass surface. The small diameter of the polishing head means that only the scratched area of glass is machined and the amount of time worked reduced to a minimum. Scratch A way polishing systems are used successfully in glass production, wholesale and car glass

Offer your customers an additional service with the glass repair systems from Scratch A way!

#### Technical details:

Output: 280 L/min. Speed: 10.500 rpm Disc diameter: 45 mm Weight:



#### Content:

Econo compressed air generator, water cap. polishing head, 12 fine polishing discs, rubber scraper, polishing leather, 2 cooling sponges, compressed air oil, compressed air hose



#### S.A.W. fine velcro polishing disc

Part No. 10 44 38 29

Velcro polishing disc for removing scratches on the glass surface.



# **GLASS REPAIR SYSTEMS**

TYPE DESCRIPTION ILLUSTRATION

#### S.A.W. metal velcro polishing disc

Part No. 10 44 38 32

Velcro polishing disc for removing deep glass scratches in combination with the red S.A.W. polishing paste.



#### S.A.W. diamond velcro polishing disc

Part No. 10 44 38 31

Velcro polishing disc for removing medium glass scratches. Replaces previously supplied S.A.W. pink polishing paste.



#### S.A.W. polishing paste rough

Part No. 10 44 38 02

Red ironoxid paste for removing deep scratches. Only for use with the metal disc (10 44 38 22).



#### S.A.W. velcro polishing head

Part No. 10 44 38 30

Velcro polishing head for fitting the three different velcro polishing discs.



#### S.A.W. diagnosis magnifying glass

Part No. 10 44 38 07

This magnifying glass specially developed by Scratch A way allows easy diagnosis and rating of different forms of glass scratches. Rating the various grades of glass scratches is not possible with the naked eye. That is why rating glass damage with the diagnosis magnifying glass and the appropriate work to be carried out is so important for efficient use of Scratch A way glass polishing systems.



#### S.A.W. Electro retrofit kit

Part No. 10 44 38 33

#### S.A.W. Econo retrofit kit

Part No. 10 44 38 28

The Scratch A way polishing technology and the individual components are in permanent development and improvement. This retrofit kit both for the electronic and the pneumatic S.A.W. polishing machine represents an improvement in various ways. The suction pad which is put on the machine head, makes it possible to work even more effeciently and cleanly on the glass, since the water and the polishing compounds are collected under the water cap. Improved fastening technology (polishing head, polishing disc fine, polishing

disc diamant, polishing disc metal) prevents that the plate can come loose during the polishing process and reduces the costs with that.

#### Content:

- 1x XEB Econo water cap
- 1x velcro-polishing head
- 1x velcro-polishing disc fine
- 1x velcro-polishing disc Diamant
- 1x velcro-polishing disc Metal



#### S.A.W. Econo water cap

Part No. 10 44 38 35

The Scratch Away watercap enables the user to work much cleaner and increases the efficiency of the polishing system.



TYPE ILLUSTRATION DESCRIPTION

#### **DUOBOND - Repair system Attack**

Part No. 10 45 38 00

The revolutionary method for the easy repair of stone-throw damage to laminated glass.



#### Content:

- 1x control mirror
- 1x marking tool
- 1x Duobond Attack fixer
- 3x Duobond repair resin
- 1x 12 volt lamp
- 1x polish 30 ml
- 1x Duobond Impact Filler 1,5 ml
- 1x sealing foil (25 sheets)
- 1x suction gel
- 1x lighter
- 1x package bow shaped blades
- 1 x glass cleaner 100ml



Repair system PMA
Part No. 10 45 38 02P

The revolutionary method for the easy repair of stone damage to laminated glass.

#### The following stone damages can be repaired:

- Star-shaped break
- Combination break
- Semi cow's eye
- Cow's eye

#### Content:

- 1x control mirror
- 1 x marking tool
- 1 x PT Junior fixer
- 3 x PT repair resin
- 1x package bow shaped blades
- 1x UV-Lamp 12 Volt
- 1 x pocket lamp
- 1 x Widia drill bit
- 1x polish 20 ml 1x connecting cable
- 1 x PT Impact Filler 1.5 ml
- 1x sealing foil (25 sheets)
- 1 x drill 12 V
- 1x polishing pen
- 2 x injector
- 1 x PT UV glass primer



# PMA Repair system with Vakuum pump

Part No. 10 45 38 02V

The revolutionary method for the easy repair of stone-throw damage to laminated glass.

#### The following stone damage can be repaired:

- Star-shaped break
- Combination break
- Semi cow's eye
- Cow's eye

Content:

1 x tube

1 x Vaccum pump

- 1 x suction cup
- 1x control mirror
- 1 x marking tool
- 1 x PT Junior fixer 3 x PT repair resin
- 2 x package bow shaped blades
- 1 x UV-Lamp 12 Volt
- 1x pocket lamp
- 1x Widia drill bit
- 1x polish 20 ml
- 1 x connecting cable
- 1x PT Impact Filler 1.5 ml
- 1x sealing foil (25 sheets)
- 1x drill 12 V
- 1x polishing pen 2 x injector





# PMA TOOLS UV-resin 2 ml

Part No. 10 46 02 05

Low-viscosity stone damage repair resin with best flow qualities. Easy to use even with larger stone damage, cracks and star shape fractures. 2 ml resin, syringe, needle



#### PMA TOOLS UV-resin 20 ml

Part No. 10 46 01 01

Low-viscosity stone damage repair resin with best flow qualities. Easy to use even with larger stone damage, cracks and star shape fractures. 20 ml resin



# TOOLS/ACCESSORIES

# **GLASS REPAIR SYSTEMS**

TYPE DESCRIPTION ILLUSTRATION PMA TOOLS Impact-Filler 20 ml Part No. 10 46 01 02 ned after filling and hardening the high-viscosity This high viscosity UV light hardening impact filler UV repair resin. This professional product guaranis used for repairing larger surface damage from tees a smooth and homogenous repair. stone impact. The impact filler with the sealing foil is applied over the damaged area and harde-PMA TOOLS Repair resin 1,2 ml Part No. 10 45 38 06P Low viscous, UV-light hardened repair resin which flows extremely well into the damaged area. The product is welded into an aluminium bag protecting it against UV light to ensure a long shelf life. PMA TOOLS Impact-Filler 1,5 ml Part No. 10 45 38 14 ned after filling and hardening the high-viscosity This high viscosity UV light hardening impact filler UV repair resin. This professional product guaranis used for repairing larger surface damage from tees a smooth and homogenous repair. stone impact. The impact filler with the sealing foil is applied over the damaged area and harde-PMA TOOLS UV-Glass resin primer 10 ml Part No. 10 45 38 30P surface and acts as coupling agent for the low A transparent coupling agent is necessary if highviscosity impact filler quality stone impact repairs are to be carried out using high and low viscosity UV resin. The glass resin primer is applied to the hardened UV resin Widia drill 0,8 mm Part No. 10 45 38 10 Widia drill noted for its long service life which is guaranteed by high quality raw materials and alloy. Injector Part No. 10 46 02 50 High-quality plastic injector for stone damage. The precision machined inner thred ensures an even development of pressure. Polish 100 ml Part No. 10 45 38 11 This grinding material is used for polishing the hardened UV resin surface. Sealing foil 25 piece Part No. 10 45 38 15 This sealingfoil is used for covering the impact point.

# **GLASS REPAIR SYSTEMS**

ILLUSTRATION

TYPE	DESCRIPTION	ILLUSTRATION
Vaccum Pump Part No. 10 45 38 27	This vaccum pump is used to suck the air out of stone chips before the repair begins. Due to the underpressure which is produced inside the broken windscreen section the pump simplifies the whole repair procedure and increases the optical quality of each stone chip repair.	6
Control mirror Part No. 10 45 38 03	Inspection mirror for stone chip repair.	
Duobond Junior fixing Part No. 10 45 38 05	Injection bridge for stonechip repair.	
Sucker gel Part No. 10 45 38 12	Sucker gel used on the rubber cups of the injection bridge and the inspection mirror	FACE (SECOND DE LA CONTRACTOR DE LA CONT
UV-Lamp 12 volts Part No. 10 45 38 08	Duobond 12 v UV-Lamp for harding the UV-resin.	
Connecting cable Part No. 10 45 38 13	Connection cable for the UV-Lamp and the drilling machine.	
Drilling machine 12 volts Part No. 10 45 38 16	12 volts machine for drilling and polishing.	-
Polishing felt pen Part No.   10 45 38 17	Polishing felt pen used with the polish milk and the drillmachine.	

DESCRIPTION

TYPE

# **GLASS REPAIR SYSTEMS**

TYPE DESCRIPTION ILLUSTRATION

#### UV replacement tupe 12 V

Part No. 10 45 38 23

12 volts UV-replacement lamp for UV-Lamp.



# Voltage transformer 12V/200 V

Part No. 10 45 38 24

Voltage transformer for drilling machine and the UV-Lamp.



#### **Duobond Instruction video**

Part No. 10 45 38 26

The video explaines the handling of the Duobond/PT windshield repair system.



# BONDING/SEALING/CLEANING

TYPE DESCRIPTION HILISTRATION

# PT 200 FC 1K PUR adhesive 310 ml

Part No. 13 34 50 20

Fast curing, 1-component PUR adhesive with the following processing characteristics:

- Can be processed cold
- Excellent strength
- Short fibre breakage
- Ideally suited for flat coating joints
- Usable on cars (older models), commercial vehicles and buses

This product complies with automobile manufacturer specifications and approval (OEM supplier quality).

### Drive-away-time

- ightarrow without front passenger airbag 1 hours
- → with front passenger airbag 1 hours

#### Packed as:

Box contains 12 cartridges

Further detailed information can be obtained on request.



# PT 200 FC 1K PUR adhesive 400 ml

Part No. 13 34 50 21

# PT 200 FC 1K PUR adhesive 600 ml

Part No. 13 34 50 19

Fast curing, 1-component PUR adhesive with the following processing characteristics:

- Can be processed cold
- Excellent strength
- Short fibre breakage
- Ideally suited for flat coating joints
- Usable on cars (older models), commercial vehicles and buses

This product complies with automobile manufacturer specifications and approval (OEM supplier quality).

#### Drive-away-time

- → without front passenger airbag 1 hours
- → with front passenger airbag 1 hours

#### Packed as:

400 ml: Box contains 15 bags 600 ml: Box contains 12 bags

Further detailed information can be obtained on request.



TYPE DESCRIPTION ILLUSTRATION

# PT 200 FC 1K PUR adhesive cartridge Kit

#### Part No. 13 34 50 22

Fast curing, 1-component PUR adhesive with the following processing characteristics:

- Can be processed cold
- Excellent strength
- Short fibre breakage
- Ideally suited for flat coating joints
- Usable on cars (older models), commercial vehicles and buses

This product complies with automobile manufacturer specifications and approval (OEM supplier quality).

#### Drive-away-time

- → without front passenger airbag 1 hours
- → with front passenger airbag 1 hours

#### Packed as

Box contains 12 sets

#### Contents:

- 1x PT 200 FC cartridge
- 1x PT 750 glass activator 30 ml
- 1x gold wire 2 m
- 1x cartridge nozzle

Further detailed information can be obtained on request.



#### PT 230 FC/HM 1K PUR adhesive 310 ml

#### Part No. 13 34 50 26

Fast curing, 1-component PUR adhesive with the following product and processing characteristics:

- Must be processed cold
- Modular; increases torsional strength
- Can be used on most recent car models
   Recommended for vehicles where modular
   adhesives have been used in manufacture
- Good stability on beading thickness up to 20mm
- Short thread tear
- · Very suitable for flat coated joints

This product complies with automobile manufacturer specifications and approval (OEM supplier quality).

#### Drive-away-time

- → without front passenger airbag 1 hour
- → with front passenger airbag 1 hour

#### Packed as:

Box contains 12 cartridges

Further detailed information can be obtained on request.



### PT 230 FC/HM 1K PUR adhesive 400 ml

#### Part No. 13 34 50 28

Fast curing, 1-component PUR adhesive with the following product and processing characteristics:

- Must be processed cold
- Modular; increases torsional strength
- Can be used on most recent car models Recommended for vehicles where modular adhesives have been used in manufacture
- Good stability on beading thickness up to 20mm
- Short thread tear
- Very suitable for flat coated joints

This product complies with automobile manufacturer specifications and approval (OEM supplier quality).

## Drive-away-time

- → without front passenger airbag 1 hour
- → with front passenger airbag 1 hour

### Packed as:

Box contains 15 bags

Further detailed information can be obtained on request.



TYPE DESCRIPTION ILLUSTRATION

#### PT 300 HM/HOT 1K PUR adhesive 310 ml

#### Part No. 13 34 50 23

Fast curing, 1-component PUR adhesive with the following product and processing characteristics:

- Must be processed hot: heat for 30 min. to 60°C
- High sheer modulus of 2.5 Mpa corresponds to Audi PV 2042
- Good stability on beading thickness up to 40 mm
- · Beading will not sag
- Short thread tear
- Very good flash glazing characteristics

This product complies with automobile manufacturer specifications and approval (OEM supplier quality).

#### Drive-away-time

- → without front passenger airbag 30 minutes
- → with front passenger airbag 45 minutes

#### Packed as:

Box contains 12 cartridges

Further detailed information can be obtained on request.



#### PT 300 HM/HOT 1K PUR adhesive 400 ml

#### Part No. 13 34 50 24

Fast curing, 1-component PUR adhesive with the following product and processing characteristics:

- Must be processed hot: heat for 30 min. to 60°C
- High sheer modulus of 2.5 Mpa corresponds to Audi PV 2042
- Good stability on beading thickness up to 40 mm
- Beading will not sag
- Short thread tear
- Very good flash glazing characteristics

This product complies with automobile manufacturer specifications and approval (OEM supplier quality).

#### Drive-away-time

- → without front passenger airbag 30 minutes
- → with front passenger airbag 45 minutes

#### Packed as:

Box contains 15 bags

Further detailed information can be obtained on request.



### PT COLD HM 1K PUR adhesive 310 m

#### Part No. 13 34 50 17

Fast curing, 1-component PUR adhesive with the following product and processing characteristics:

- Can be processed cold
- Modular; increases torsional strength
- Good stability on beading thickness up to 30 mm
- Beading will not sag
- Short thread tear
- Ideally suited for flat coating joints

This product complies with automobile manufacturer specifications and approval (OEM supplier quality).

#### Drive-away-time

- → without front passenger airbag 1 hour
- → with front passenger airbag 1 hour

#### Packed as:

Box contains 12 cartridges

Further detailed information can be obtained on request.



# PT COLD HM 1K PUR adhesive 400 ml

#### Part No. 13 34 50 18

Fast curing, 1-component PUR adhesive with the following product and processing characteristics:

- Can be processed cold
- Modular; increases torsional strength
- Good stability on beading thickness up to 30 mm
- Beading will not sag
- Short thread tear
- Ideally suited for flat coating joints

This product complies with automobile manufacturer specifications and approval (OEM supplier quality).

#### Drive-away-time

- → without front passenger airbag 1 hour
- → with front passenger airbag 1 hour

#### Packed as:

Box contains 15 bags

Further detailed information can be obtained on request.



TYPE DESCRIPTION ILLUSTRATION

#### Heating oven for cartridges/bags 12 V

Part No. 13 34 50 16

This heating oven is used for mobile heating of 1-component PUR adhesives on 310 ml cartridges and 400 ml bagged items.

Operation is via the cigarette lighter and the vehicle's 12 V circuit.

#### Heating oven for cartridges/bags 230 V

Part No. 13 34 50 15

This heating oven is used for stationary heating of 1-component PUR adhesives in 310 ml cartridges and 400 ml bagged items.

For use with 230 V mains supply.



#### PT 700 Glass cleaner 30 ml

Part No. 13 34 50 30 1 piece
Part No. 13 34 50 30-12 12 pieces

#### PT 700 Glass cleaner 250 ml

Part No. 13 34 50 31 1 piece
Part No. 13 34 50 31-12 12 pieces

Solvent -containing, transparent, adhesive detergent for cleaning the glass ceramic field. Removes all hazardous material such as grease, wax and other contaminants and thus creates a basis for top quality glass bonding.

- Short flash-off period
- Easy to process



#### PT 725 Glass Paint Primer 30 ml

Part No. 13 34 50 32 1 piece Part No. 13 34 50 32-12 12 pieces

#### PT 725 Glass Paint Primer 100 ml

Part No. 13 34 50 34 1 piece Part No. 13 34 50 34-12 12 pieces

#### PT 725 Glass Paint Primer 250 ml

Part No. 13 34 50 33 1 piece
Part No. 13 34 50 33-12 12 pieces

Black, solvent-containing glass and body composite primer for application to the glass ceramic field as well as for covering up damage to the bodywork in the area of the adhesive flange.

- Protects against polyurethane damaging UV radiation
- Short flash-off period
- Extremely scratch-resistant surface once dry
- Can be applied on all known plastic screens (Lexan, Macrolon, etc.)



#### PT 750 Glass Activator 30 ml

Part No. 13 34 50 38 1 piece
Part No. 13 34 50 38-12 12 pieces

# PT 750 Glass Activator 250 ml

Part No. 13 34 50 35 1 piece Part No. 13 34 50 35-12 12 pieces

Transparent solvent-based glass and PU activator for black primer-free gluing of vehicle wind-screens. PT 750 is a cleaner, transparent primer and activator combined in one product. PT 750 is applied on the remaining beading to activate the old polyurethane.

PT 750 is also used for cleaning and improving adhesion with all known groundings such as ceramic screen printing, paintwork, remaining beading and windscreens pre-laminated at works.

- Cleaner and coupling agent on screen printing in one work process.
- Activator for the PU remaining bead on the bodywork
- Activator for PU pre-laminated screens
- Short airing time



#### PT 775 PU-Activator 30 ml

Part No. 13 34 50 36 1 piece Part No. 13 34 50 36-12 12 pieces

#### PT 775 PU-Aktivator 250 ml

Part No. 13 34 50 37 1 piece Part No. 13 34 50 37-12 12 pieces Black, solvent-containing polyurethane activator for applying to PU respraying of vehicle glass (VW Golf, Polo, Passat etc.), as well as for reactivation or cleaning of PU residual material on the body flange.

- Short flash-off period
- Fast processing



TYPE ILLUSTRATION DESCRIPTION Felt applicators 105 mm Part No. 13 35 02 15 1 pieces Applicators should always be used in order to avoid Part No. 13 35 02 15-40 40 pieces splashing when applying primer to bodywork or glass (incl. ceramic field-free windscreens). 100 applicators in a box Felt applicators 130 mm Part No. 13 35 02 15LS Applicators should always be used in order to avoid splashing when applying primer to bodywork or glass (incl. ceramic field-free windscreens). 100 applicators in a box **Primer brushes** Part No. 13 35 03 16 This brush is an economical alternative to standard commercial brushes. Use this brush for problem areas such as corners etc. 12 Primer brushes in a bag Cartridges nozzles PT COLD Part No. 13 35 33 00 PT COLD nozzles uncutted. 100 piece in a bag Cartridges nozzles uncutted Part No. 13 35 33 01 Nozzels uncutted. 100 pcs. Cartridges nozzles precutted blue Part No. 13 35 33 04 This cartidge noozle (blue) is useful for all PT Polyurethan cartidges (exept PT COLD). Due to the V-cut at the tip of the nozzle the new Polyurethan beat could be applied in 14 mm heights as requested for OEM specific screen bonding. 12 piece in a bag Nozzle pliers Part No. 13 35 33 05 This pliers is used to cut up nozzles. They give precise cut at the depth of cut or beading thickness required. Cartridge opener Part No. 13 39 11 01 The cartridge opener is used for 310 ml cartridges.

TYPE DESCRIPTION ILLUSTRATION

#### **Cold adhesive tape Totalseal 8 mm**


Part No. 13 36 12 02

#### **Cold adhesive tape Totalseal 10 mm**

Part No. 13 36 12 03

This adhesive tape is mainly used for automobile new glazing. The integrated heating wire makes installation clean and easy for the user.

Box contains 10 tapes à 4,5 m



#### Butyl rubber tape 3 mm

Part No. 13 36 12 04

This small tape is used for gluing upright mouldings or sealing parts.

Box contains 10 tapes à 5 m



#### Double-side urethane adhesive tape 9 mm

Part No. 13 36 02 02

#### Double-side urethane adhesive tape 12 mm

Part No. 13 36 02 03

#### DDouble-side urethane adhesive tape 19 mm

Part No. 13 36 02 04

#### Double-side urethane adhesive tape 25 mm

Part No. 13 36 02 05

These adhesive tapes are used especially for fastening trims and mouldings.

Sizes: 9 mm, 12 mm, 19 mm und 25 mm

Length: 10m



# Double-side urethane adhesive tape 50 mm

Part No. 13 36 02 06

Double-side urethane adhesive tape is used for fastening and gluing plastic and metal on glass. Scuttle panels, e. g. as fitting to the BMW E34 5series, can be glued onto the windscreen using this product. Door foil lying beneath the door

panelling can also be fastened with this adhesive tape.



#### Fabric adhesive tape (reinforced) 50 mm

Part No. 13 36 03 01

This adhesive tape is used for fastening the freshly glued windscreen in place. Trims or mouldings can be fastened onto the windscreen as original using this tape.

Length: 50 m



#### Fabric adhesive tape (silver) 30 mm

Part No. 13 50 15 01

This high quality fabric adhesive tape is used for fastening freshly glued windscreens or mouldings.

Length: 50 m



#### Profixx adhesive tape orange 38 mm

Part No. 13 50 15 03

#### Profixx adhesive tape orange 76 mm

Part No. 13 50 15 04

The Profixx adhesive tape in 38 mm roll widths is an adhesive tape specially developed for auto glass fitting or storage; here are a few examples of its application:

- for holding trim in place
- for securing windscreens to prevent slippage
- as masking on emergency glass replacement

- for masking glass panes in storage, so as to avoid scratches

Its big advantage over the usual fabric or crepe adhesive tapes on sale is that it can be removed without trace (no traces of adhesive on the glass or enamel).

An important point is that the Profixx adhesive tape does not damage the clear paint finish, unlike almost all other adhesive tapes on sale.



TYPE DESCRIPTION ILLUSTRATION

#### Profixx adhesive tape clear 38 mm

Part No. 13 50 15 05

The Profixx adhesive tape in 38 mm roll widths is an adhesive tape specially developed for auto glass fitting or storage; here are afew examples of its application:

- for holding trim in place
- for securing windscreen to prevent slippageas masking on emergency glass replacement
- for masking glass panes in storage, so as to avoid scratches

Its big advantage over the usual fabric or crepe adhesive tapes on sale is thatit can be removed without trace (no traces of adhesive on the glass or enamel). An important pointis that the Profixx adhesive tape does not damagethe clear enamel finish, unlike almost all other adhesive tapes on sale.

Length: 33 m



#### Profixx adhesive tape clear with 24hours print 38 mm

Part No. 13 50 15 06

The Profixx adhesive tape in 38 mm roll widths is an adhesive tape specially developed for auto glass fitting or storage; here are afew examples of its application:

- for holding trim in place
- for securing windscreen to prevent slippage
- as masking on emergency glass replacement
- for masking glass panes in storage, so as to avoid scratches

Its big advantage over the usual fabric or crepe adhesive tapes on sale is thatit can be removed without trace (no traces of adhesive on the glass or enamel). An important pointis that the Profixx adhesive tape does not damagethe clear enamel finish, unlike almost all other adhesive tapes on sale.

Length: 33 m



### Mirror base pads OEM quality

Part No. 13 36 04 00 Part No. 13 36 04 03

100 pieces 300 pieces These adhesive pads in original manufacturer quality are the best that can be used in the soft-glued mirror base segment.

100 pads in a bag



# Adhesive pads for Toll Collect holder

Part No. 13 36 04 05

This adhesive pads are used toglue the Toll Collect holder on Truck windscreens . Take off the old adhesive padand replace it with a new pad. Clean the bonding surface on the screen with PT310 Activator to reach a long lasting bond between holder and glass.

5 pads in a plastic bag



#### Loctite glass adhesive kit

Part No. 13 37 34 01

You shouldn't take any risks with a new windscreen. That is why you should only ever use this glass adhesive set to glue the rear-view mirror into place tension-free.

For approx. 10 applications



#### Loctite glass/metal adhesive kit large

Part No. 13 37 34 04

Glass/metal adhesive kit for permanent and stress free bonding of mirror bases and sunshade fittings on auto glass

Content:

1x 24 ml adhesive

1x 150 ml activator



# Loctite conductive silver paint 2ml

Part No. 13 37 34 02

For repairing damaged heating wires on the backlight. The high conductivity of the adhesive ensures perfect operation of the heating system. Not suitable for antenna circuits

Blister kit contains:

1x Adhesive, 2 g

1x Brush

1x Masking stencil



TYPE DESCRIPTION ILLUSTRATION

#### Loctite Contact + 2 ml

Part No. 13 37 34 03

Loctite Contact Plus is used for gluing heating plugs onto ESG backlights. These often just fall off when removing old screens. The silver-based soldering agent Contact plus solves this pro-

blem by applying the product to the previously cleaned surface first and then pressing on.



#### Loctite 480 20 ml

Part No. 13 37 34 06B

The Loctite 48o cyanoacrylate adhesive is a special glue with carbon black colouring, used for bonding rubber ends.



#### RIM FIX 20 g

Part No. 13 37 34 06

RIM FIX 480 cyanoacrylate rubber adhesive is a transparent special adhesive used for bonding rubber ends, without leaving white rings.



#### Scrubs in the bucket

Part No. 13 39 13 01 Part No. 13 39 13 01-6

1 piece 6 pieces Scrubs is a water-free hand cleaning cloth in a dispenser. It provides fast, comfortable and effective cleaning of the hands.



- PU-remains
- oil
- grease



#### Citro glass cleaner

Part No. 13 40 13 03

A glass cleaner for streak-free and clean work.

10 litre



#### Spray bottle with pressure pump 1,26 I

Part No. 13 41 02 03

Comfortable spray bottle for applying window cleaner. Only has to be pumped once before spraying. This achieves an even application of the cleaner.



#### Cleaning cloth roll, 39 cm wide

Part No. 13 42 14 02

This cleaning cloth roll (three-layered) is perfect for streak-free removal of any dirt on glass or bodywork.

1000 sheets per roll



# TOOLS/ACCESSORIES

# **BONDING/SEALING/CLEANING**

TYPE DESCRIPTION ILLUSTRATION

### Latex gloves, powdered size M

Part No. 13 42 14 04

Latex gloves, powdered size L

Part No. 13 42 14 05

Made out of a hard-wearing raw material. To protect your hands when repairing, glueing, coating or sealing glass.



# Safety gloves Dottie size L Part No. 08 19 30 61

#### Safety gloves Dottie size XL

Part No. 08 19 30 62

- hard wearing knitted wool material
- palms rubber-coated for safe carrying of glass panels





# SENSORS/ACCESSORIES

TYPE DESCRIPTION ILLUSTRATION

#### Sensor kit Profi Line

Part No. 13 36 01 250

Today, many of the motor manufacturers are now incorporating sensor technology into the design of their vehicles with the aim to improve comfort and to enhance safety: Rain sensors automatically activate the vehicle's wiper system whenever the windshield becomes water-logged and light sensors automatically switch on the vehicle's lights whenever lighting levels fall below normal daytime driving conditions. We are now seeing a new generation of sensor that control the vehicle cabin humidity levels to eliminate 'fogging' of the windshield.

That is why we at PMA/TOOLS have developed the Sensor Kit "Profi Line", an all-in-one solution for the installer to meet today's comprehensive vehicle accessory installations. Supported by a sensor reference poster which provides important information on all vehicle sensor applications, the new kit comprises an extensive range of sensors, adhesive pads, accessories and cleaning fluids necessary to meet the specific demands of sensor replacement. The Sensor Kit "Profi Line" comes complete in a purpose-built, compact plastic carry case.

All items from this kit are available from our current range and can be re-ordered separately if required.

#### Content:

- 1x Rain sensor removal tool for K2o6
- 1x Rain sensor removal tool for K205/K208
- 1x Rain sensor removal tool for K203/K209
- 1x Sensor Activator PT 310
- 1x Rain/Light sensor Smart, Mercedes
- 1x Rain/Light sensor Renault, Nissan
- 1x Lightsensor Mercedes C-Class W203
- 5x Adhesive pads for Lightsensor Mercedes C-Class W203
- 1x Additional module for Rain/Light sensor Mercedes
- 5x Adhesive pads for Rain sensor VW-Gruppe
- 1x Rain sensor Mercedes, BMW
- 5x Adhesive pads for Rain sensor K206
- 1x Rain/Light sensor BMW
- 5x Adhesive pads for Rain/Light sensor K209
- 5x Adhesive pads for Rain sensor Audi
- 1x Lightsensor Mercedes S-Class W220/G-Modell
- 1x Rain/Light sensor BMW
- 1x Rain sensor, Chrysler, Kia, Honda, Hyundai
- 5x Adhesive pads for Rain sensor Honda, Nissan, Kia. Chrysler
- 1x Rain/Light sensor BMW E46 Compact, Z4
- 1x Humidity sensor BMW
- 1x Lightsensor Mercedes C-Class W203
- 5x Adhesive pads for Rain/Light sensor K208
- 1x Rain/Light sensor Mercedes E-Klasse W211





# Rain sensor Alfa/BMW/Mercedes/Rover

Part No. K206 1 piece
Part No. K206-18 18 piece

This Rain sensor can be used on the following vehicles:

	Vehicle type	Eurocode	V
	Alfa 166 from '98 –	2036	N
1	BMW E38 from '94 - '98/'98-'01	2433	N
1	BMW E39 from '95 -9/'01	2434	V
1	BMW E46 Sedan/Coupé from	2436/2437	, c
	'98 – 9/'o1		N
ı	BMW X <sub>5</sub> from '00 – 9/'01	2439	
ı	MB W129 from '89 - '01	5331	M
ı	MB W140 Sedan/Coupé from '91-'98	5333/5340	V
	MB W163/M-Class from '98 - 9/'01	5343	V
			R

C5.		
Vehicle type	Eurocode	
MB W202 from 9/'95 - '01	5334	
MB W203 from '00 - 05/'03	5351	
MB W203 Sports Coupé from	5352	
'01-05/'03		
MB W208 from '97 - '02	5341	
MB W210 from '95 - '02	5337	
MB W215 from 10/'99 -	5345	
MB W220 from '98 - 6/'02 -	5344	
Rover 75 from '99 –	7035	



#### Adhesive pads for Rain sensor

Part No. 13 36 01 99

The old Rain sensor can be removed from the screen if exchanging the W210, W203 or BMW E38, E39 bzw. E39 windscreen. Use the PMA adhesive pads to glue the Rain sensor onto the new windscreen.

5 pads in a bag



## Rain sensor removal tool for Article K206

Part No. 01 11 02 05

This special tool is for loosening soft-glued rain/light sensors.

Once the screen is removed, the attached sensor is heated wind up on the outside of the screen

using a hot air dryer. The tool must be fitted exactly over the sensor and the old adhesive is loosened using sideways pressure.



TYPE DESCRIPTION ILLUSTRATION

#### Rain/Light sensor MB W203, W209, W211, W220

Part No. K205

This Mercedes rain/light sensor can be used on the following vehicles:

 Vehicle type
 Eurocode

 Mercedes E-Class W211 from '02 5347

 Mercedes CLK W209 from '02 5353

 Mercedes C-Class W203 from 05/ '03 5351

 Mercedes Sportcoupé W203 from 07/ '03 5352

 Mercedes S-Class W220 from '03 5344

On some models the additional module with Part No. K204 is needed.



#### Rain/Light sensor OEM MB W203, W209, W211, W220

Part No. 13 36 01 296

This Mercedes rain/light sensor can be used on the following vehicles:

 Vehicle type
 Eurocode

 Mercedes E-Class W211 from '02 5347

 Mercedes CLK W209 from '02 5353

 Mercedes C-Class W203 from 05/ '03 5351

 Mercedes Sportcoupé W203 from 07/ '03 5352

 Mercedes S-Class W220 from '03 5344

On some models the additional module with Part No. K204 is needed.



# Lightsensor Mercedes C-Class MB W203 (2. version)

Part No. K208
Part No. K208-18

This Mercedes Light sensor can be used on the following vehicles:

Vehicle typeEurocodeMercedes C-Classe W203 from 05/ '03-5351Mercedes Sportcoupé W203 from 07/ '03-5352

On both C-Class models the additional moduled part. no.: K204 is needed.



## Lightsensor Mercedes OEM C-Class MB W203 (2. version)

Part No. 13 36 01 300

This Mercedes Light sensor can be used on the following vehicles:

Vehicle typeEurocodeMercedes C-Classe W203 from 05/ '03-5351Mercedes Sportcoupé W203 from 07/ '03-5352

On both C-Class models the additional moduled part. no.: K204 is needed.



# Adhesive pads for Rain/Light sensor K205 / K208

Part No. 13 36 01 97

These adhesive pads for sensors can be used on the following vehicles:

Vehicle type	Eurocoo
Mercedes E-Class W211 from '02	5347
Mercedes CLK W209 from '02-	5353
Mercedes C-Class W203 from 05/ '03-	5351
Mercedes Sportcoupé W203 from 07/ '03-	5352
Mercedes S-Class W220 from '03-	5344

Bag contains 5 pads



# SENSORS/ACCESSORIES

TYPE DESCRIPTION ILLUSTRATION

#### Rain/Light sensor removal tool for MB W203/W209

Part No. 01 11 02 06

This special tool is for loosening soft-glued rain/light sensors.

Once the screen is removed, the attached sensor is heated wind up on the outside of the screen using a hot air dryer. The tool must be fitted

exactly over the sensor and the old adhesive is loosened using sideways pressure.



#### Additional module for Rain/Light sensor MB W203/W209

Part No. K204

The additional modules for the latest generation of Mercedes sensors can be used on the following vehicles:

 Vehicle type
 Eurocode

 Mercedes CLK W209 Coupé from '02 5353

 Mercedes CLK W209 Cabrio from '03 5353

 Mercedes C-Class W203 from 05/ '03 5351

 Mercedes Sports Coupé W203 from 07/ '03 5352

In addition to this module, the rain/light sensor with Order No. K205 is required.



# Lightsensor for C-Class MB W203

Part No. K201

This OEM light sensor is used for gluing onto the prepared MB W 203 windscreen.

Optical unit incl. adhesive pads.

Further technical information to gluing sensors is available on request.



#### Adhesive pads for MB C-Class W203 Lightsensor

Part No. 13 36 01 98

The old light sensor can be removed from the screen if exchanging the W203 windscreen. Because the sensor's two adhesive pads are damaged during removal, use the PMA adhesive

pads to glue the existing light sensor onto the new windscreen.

Further technical information to gluing sensors is available on request.

Bag contains 5 pads



# Rain sensor cover for MB C-ClassW203

Part No. 13 36 01 92

This OEM plastic cover is needed for W 203 models which are not fitted with a Rain sensor as standard.



#### Lightsensor for S-Class MB W-220

Part No. 13 36 01 90

This OEM light sensor is used for gluing onto the prepared MB W 215 Cpé or W220 Lim. windscreen. Optical unit incl. adhesive pads.

Further technical information to gluing sensors is available on request.



#### BMW humidity sensor (Climatic comfort system) E60/63/65/87/90

Part No. K211

The following BMW models are required with the humidity sensor which activates the climatic controll system/dashboard foam:

System dashboard roam.	
Vehicle type	Eurocode
BMW 1 Series E87 '04-	2448
BMW 3 Series Ego '05-	2447
BMW 5 Series E6o/E61 '04-	2445
BMW 6 Series E63/E64 '04-	2446
BMW 7 Series E65 09/'03-	2443



TYPE DESCRIPTION ILLUSTRATION

#### Rain/Light sensor BMW (clear/blue) E60/63/65/87/90

 Part No.
 K209
 1 piece

 Part No.
 K209-18
 18 pieces

Rain/Light sensor is for for the following BMW models:

Rain/ Light Senson is for for the following blv	iw illoueis.
Vehicle type	Eurocode
BMW 1er Serie (E87) '04 -	2448
BMW 3er Serie (E90/E91) 01/'05 -	2447
BMW 5er Serie (E6o/E61) 07/'03 -	2445
BMW 6er Serie (E63/E64) 01/'04 -	2446
BMW 7er Serie (E65) 09/'03 -	2443



#### Rain/Light sensor BMW (blue/blue) E39/E34/E65

Part No. K203 1 piece
Part No. K203-18 18 pieces

Rain/Light sensor for use on the following Vehicle windscreens:

Vehicle type	Eurocode
BMW E39 from 09/'01 - 06/'03	2434
BMW X5 from 09/'01	2439
BMW E46 Sedan+Coupé from 09/'01	2436/2437
BMW E65 from 10/'01	2443
	BMW E39 from 09/'01 – 06/'03 BMW X5 from 09/'01 BMW E46 Sedan+Coupé from 09/'01



## Rain/Light sensor MB M-Klasse W163 / Chrysler 300C / Grand Cherokee III

Part No. K213

E

E

Rain/Light sensor for use on the following Vehicle windscreens:

Vehicle type	Eurocode
Mercedes M Klasse W163 '98-'05	5343
Chrysler 300 C '05-	A243A
Jeep Grand Cherokee '05-	AJ10A
Jeep Commander 'o6-	AJ11A



#### Rain/Light sensor BMW E46 Compact, Z4

Part No. K202

Original quality rain/light sensor for use on the following windscreens of 4.46mm glass thickness:

Vehicle type	Eurocode
BMW E46 Compact	2442
BMW Z4	2444



#### Adhesive pads for all BMWs from 09/'01 (K203/K209)

Part No. 13 36 01 93

These adhesive pads for sensors can be used on the following vehicles:

mose dancerre pade les concers dan se deca en tre leneming territores.				
Vehicle type		Eurocode	Vehicle type	Eurocode
	BMW 3er E46 all versions	2436/2437/2442	BMW X <sub>5</sub>	2439
	BMW 5er E39 all versions	2434	BMW Z4	2444
	BMW 5er E6o all versions	2445	Mercedes M-Class ab 09/'01	5343
	BMW 6er from 'o4 all versions	2446	Peugeot 206 Cabrio	6545
	BMW 7er E65 all versions	2443	Peugeot 406 Coupé	6538
	Bag contains 5 pads			



#### Rain-/Light sensor removal tool for item K203/K209

Part No. 01 11 02 07

This special tool is for loosening soft-glued rain/light sensors.

Once the screen is removed, the attached sensor is heated wind up on the outside of the screen using a hot air dryer. The tool must be fitted

exactly over the sensor and the old adhesive is loosened using sideways pressure.



# SENSORS/ACCESSORIES

TYPE DESCRIPTION ILLUSTRATION

Bag contains 5 pads

#### Rain sensor with adhesive pads for Chrysler, Kia, Honda, Nissan

Part No. K207

This Rain sensor can be used on the following vehicles:

This realit series dans be assa on the following	.6
Vehicle type	Eurocode
Chrysler Grand Cherokee from '02	AJ07
Daewoo Nubira from 09/'03	3016
Kia Carnival from 'o2	4408
Kia Carens from 'oʒ	4419
Kia Opirus from 'oʒ	4420
Honda Accord from '03	3986
Hyundai Trajet from 1999	4120
Nissan Primera from 'o2	6020



#### Adhesive pads for Chrysler, Kia, Honda, Nissan

Part No. 13 36 01 96

This adhesive pad can be used on the following vehicle models:

Vehicle type	Eurocode
Chrysler Grand Cherokee from '02	AJ07
Daewoo Nubira from 09/'03	3016
Kia Carnival from '02	4408
Kia Carens from '03	4419
Kia Opirus from '03	4420
Honda Accord from '03	3986
Hyundai Trajet from 1999	4120
Nissan Primera from '02	6020



#### Rain/Light sensor Renault Mégane/Nissan Micra K12

Part No. 13 36 01 293

This Renault/Nissan Rain/Light sensor is required on the following vehicles:

Vehicle type	Eurocode
Renault Mégane II from 11/'02	7260
Renault Mégane Scenic II from '03	7257
Renault Mégane Cabrio II from '03	7261
Nissan Micra K12 from 02/'03	6011

The optical unit of this sensor must be completely renewed on each windscreen, since the silicon adhesive surface gets damaged on removal or disassembly. The PMA adhesive pads developed for other sensors cannot be used on this vehicle.



#### Rain/Light sensor MB SLK II, A-Class, W169

Part No. 13 36 01 302

This Rain sensor is required on the following vehicles:

The Ham concer is required on the femaling	
Vehicle type	Eurocode
A+B Class W169 '04-	5358
SLK II W171 '04-	5356

The optical unit of this sensor must be completely renewed on each windscreen, since the silicon adhesive surface gets damaged on removal or disassembly. The PMA adhesive pads developed for other sensors cannot be used on this vehicle.



# Rain/Light sensor MB Sprinter II/VW Crafter

Part No. 13 36 01 303

This Rain/Light sensor is required on the following vehicles:

Vehicle type	Eurocode
Mercedes Sprinter II 'o6-	5439
VW Crafter 'o6-	8590

The optical unit of this sensor must be completely renewed on each windscreen, since the silicon adhesive surface gets damaged on removal or disassembly. The PMA adhesive pads developed for other sensors cannot be used on this vehicle.



I M I

# SENSORS/ACCESSORIES

TYPE DESCRIPTION ILLUSTRATION

#### Adhesive pads for VW old (2pcs.) 1 mm

Part No. 13 36 01 94

Adhesive pads for VW, Seat and Skoda sensor windscreens (year '96 –'98).

26 mm diameter/1 mm material thickness

Bag contains 5 pads



#### Adhesive pads for VW new (1 pcs.) 1,5 mm

Part No. 13 36 01 95

These new adhesive pads for Rain sensors, used by the VW Group, correspond exactly with original dimensions in terms of material thickness (1,5 mm) and diameter (28 mm).

Fit the optical unit with the pre-glued pads into the screen sensor fittings

28 mm diameter/1.5 mm material thickness

Bag contains 5 pads



# Adhesive pads for Audi/Opel sensor (1pcs.) 1.5 mm

Part No. 13 36 01 89

This original Toyota adhesive sensor pad is used for replacement of the Rain-Light sensor for the following Audi/Opel models:

Vehicle type

A3 Lim./A3 Sportback '03- 8580 A4 Lim./A4 Cabrio '04-/'05- 8572/8574 
 Vehicle type
 Eurocode

 A6 Lim./Kombi 'o4 8582

 A8 Lim. o7/'o3 8578

 Q7 'o6 8588

 Opel Zafira II 'o5 6307

Eurocode

8371

8329

8354

Bag contains 1 pad



#### Adhesive pads for Toyota/Lexus square version (1pcs.)

Eurocode

Eurocode

Part No. 13 36 01 88

This original Toyota adhesive sensor pad is used for the following models:

Vehicle type

Landcrusier HDJ 100 8306 Lexus GS '05- 8362 Vehicle type Lexus IS 200 '05-Lexus IS 400 '00-

Lexus RX 300 '03-Bag contains 1 pad



# PT 310 Sensor Activator 250 ml

Part No. 13 34 50 45

# PT 310 Sensor Activator 1000 ml

Part No. 13 34 50 46

The PT 310 activator is used as a fluid bonding agent in sensor adhesion. After the old sensor has been fitted with the new adhesive pads, the activator is sprayed onto the pads and the sensor area of the windscreen that is free of all screen-printing. Now the optical unit is moved on the windscreen until there are no longer any

air bubbles between the unit and the windscreen. Once correct positioning of the sensor optical units has been determined, press carefully on the sensor.

Warm up the windscreen, or the optical unit, with a hot air dryer so that superfluous activator fluid can evaporate. Leave the screen or optical unit to dry at room temperature before refitting so as to avoid later air bubble formation as a result of temperature variation.



Invoice address:			
	Invoice address = Delivery address	<b>;</b>	Deliveries within EU:
	* please deliver to:		
Company			No freight charges if orde
Customer code (please always fill in)	Company		· amount exceeds 2500 €
Street / No.	Street / No.		
City code / City	City code / City		
Contact person	Telephone		
Telephone			
Telefax			
PMA/TOOLS Part-No. Vehicle manufacturer/ Type	e/ Year	Quantity	Unit price/€ Amount $\in$

Invoice address:					
	Invoice address = Delivery address	6	De	eliveries within E	U:
	* please deliver to:				
Company			× No	o freight charges	if order
				nount exceeds 2	
Customer code (please always fill in)	Company				
Street /No.	Street / No.				
City code / City	City code / City				
Contact person	Telephone				
Telephone					
Telefax					
PMA/TOOLS Part-No. Vehicle manufacturer/ Type	e/ Year	Quantity	Unit pric	e/€ Amount €	€

Invoice address:			
	Invoice address = Delivery address	<b>;</b>	Deliveries within EU:
	* please deliver to:		
Company			No freight charges if orde
Customer code (please always fill in)	Company		· amount exceeds 2500 €
Street / No.	Street / No.		
City code / City	City code / City		
Contact person	Telephone		
Telephone			
Telefax			
PMA/TOOLS Part-No. Vehicle manufacturer/ Type	e/ Year	Quantity	Unit price/€ Amount $\in$

#### General Terms and Conditions of PMA/Tools Division AG

1.4.2006

#### 1. Order and Acceptance

All deliveries and services of PMA/Tools Division AG, hereafter known as the vendor, arise from the following general terms and conditions of the vendor. Inasmuch as the purchaser is not in agreement with the following, he must declare this in writing to the vendor upon placement of the order at the latest. Terms of the purchaser which deviate from these, and which the vendor does not expressly agree to in writing, are not binding on the vendor. Subsidiary agreements, specific warranties, as well as subsequent changes to the contract terms are only valid if these are confirmed in writing by the vendor. The purchaser is bound by his order for three weeks. Should the purchaser withdraw from an order which has been placed, then the vendor can demand reparation of damages, including any profit lost. For goods which are out of stock, the purchaser is entitled to decline acceptance within three weeks of the placement of order.

#### 2. Prices and Terms of Payment

Prices are based on the vendor's price lists as valid at the time of acceptance, and are valid exworks of the vendor, but exclude packaging for shipping and VAT at the legal rate. The following holds in regard to shipping costs:

- a. Delivery within Germany using DPD is free of charge on orders of goods whose net worth is € 50
  or more. Orders delivered by DPD must be accepted before 15.00 of the day in question.
- Deliveries by night express are charged. Orders delivered by night express must be accepted before 15.00 of the day in question.
- c. Shipment by normal means within Germany is free of charge on orders of goods whose net worth is € 500 or more.
- d. Shipment abroad (EU countries) is free of charge on orders of goods whose net worth is € 2500 or more, but delivery to non-EU countries is charged.

Any changes in price resulting from increase in wage costs, costs of materials or market cost prices are permissible, provided that more than four months separate completion of contract and agreed delivery date. Where the purchaser is a trader, a legally incorporated body, or registered fund assets (hereafter also known as non-consumers), price changes according to the previous ruling are permissible, provided that more than six weeks separate completion of contract and agreed delivery date.

The purchase price and remuneration for additional services become due for payment on handover of the items supplied. Payments are to be made free of charges to the point of payment of the vendor. Payments by cheque are only valid as payment after encashment. The purchaser has no right of retention if the purchaser is a non-consumer. Any set-off by the purchaser is only admissible, inasmuch as his counter claims are expressly undisputed or established as legally binding. In cases of default, the vendor is entitled to levy interest on arrears, in accordance with BGB §288, at 5% above the base rate (in cases where the transaction involves a consumer as defined by BGB §13), or at 8% above the base rate (in cases where the transaction involves a non-consumer). Failing prior agreement to the contrary, the vendor shall supply any purchaser not previously known to him only against cash on delivery, or prepayment, as the vendor shall choose. In the event that as a result of a change in circumstances some threat to claim to payment should arise, the vendor is entitled to exact advance payments of the amount invoiced (BGB §321). The vendor reserves the right to demand down payments.

#### 3. Retention of Title

The goods sold remain the property of the vendor until all valid claims of the vendor arising from his business relationship with the purchaser are met. Until this has happened, any pawning, transfer by way of security or other use of the goods sold is prohibited, subject to the following rulings. As regards use in relation to non-consumers, the following also holds:

The purchaser is entitled to sell on the items supplied as part of the normal course of business, so long as no circumstances become known to the vendor, which might seem to put the settlement of his account on the part of the purchaser at risk. For this reason the purchaser shall already at this junction assign all selling-on claims to the vendor who accepts such assignation, these being claims which have arisen for the purchaser from resale, and this independently of whether the supplied items have been sold on without or after being further worked. The purchaser is empowered to make collection of these assigned accounts until countermanded by the vendor, which may happen at any time. The vendor's authority to make collection of the account himself, remains unaffected by this, If so required by the vendor, the purchaser has a duty to make known his assigned accounts along with the debtors (third parties), to give all details necessary for their collection, to submit all documents pertaining to the matter, and to immediately inform the third party in question of assignment to the vendor, as well as to give proof of this to the vendor. However, the vendor engages not to  $\label{eq:make-collection} \mbox{ make collection of the accounts, as long as the purchaser properly meets his payment obligations,}$ and no circumstances become known to the vendor which might seem to put the settlement of his account on the part of the purchaser at risk. In addition, the vendor engages, if requested by the purchaser, to release the collateral he is entitled to, insofar as its value does not exceed that of the accounts to be guaranteed by more than 20%, and insofar as these have not already been settled. Any work on or modification of the goods by the purchaser is always undertaken on behalf of the vendor. If the items supplied are worked along with other items which do not belong to the vendor, then the vendor acquires a part in the title of the new concern, in relation to the ratio of the value of the items supplied to that of the other items worked or modified at the time of working. The same holds if the items supplied are inseparably mixed with others which do not belong to the vendor. The purchaser shall hold the joint ownership in safe keeping for the vendor.

Any access by third parties to goods supplied with retention of title, or to worked or mixed goods, in joint ownership with the vendor, or to accounts assigned by the purchaser, must be immediately referred to the vendor with a view to action being taken. Any costs resulting from intervening action taken by the vendor are to be borne by the purchaser. In the event that the vendor requires restitution of items to which he has title, because circumstances have become known to him, which might seem to put the settlement of his account on the part of the purchaser at risk, the purchaser already hereby declares himself in agreement that those persons engaged by the vendor to make collection may enter, on foot or by vehicle, the site where the items are kept.

#### 4. Delivery, Acceptance and Transfer of Perils

Delivery quantities are determined by the descriptions in the price list and the product catalogue of the vendor, which are valid at the time of conclusion of contract, and unless otherwise provided for in writing at contract confirmation. The right is reserved within the delivery period to make modifications in design or form, due to technical improvements or legal requirements, insofar as the item supplied is not changed in a major way and the modifications are reasonable for the purchaser. Agreements relating to delivery periods and delivery dates do not involve a fixed-term transaction in the legal sense. A delivery date or delivery period is met, if the purchaser is informed before these have expired, that the items are ready to be despatched, or that the items supplied have left the vendor's site. Force majeure entitles the vendor to postpone delivery for the period of the hindrance and an appropriate start-up time thereafter, and to withdraw from the contract for that part which has still not been completed. Force majeure extends to strikes, lockouts, and other circumstances outside the control of the vendor and which seriously exacerbate delivery, to the extent of making it impossible, this independently of whether they occur on the premises of the vendor or his suppliers. Nor does the vendor have to justify these circumstances if they arise in the course of arrears already present, Part delivery is allowed. Choice of mode of shipment shall be made at the vendor's discretion. On handover to the shipper or carrier, and at the latest on leaving the production site of the vendor, all risk, in particular that of possible loss or possible deterioration, is transferred to the purchaser. This transfer of peril is valid also in cases where carriage-free delivery has been agreed. Items delivered are to be received by the purchaser, even if they display small defects. If the purchaser does not accept the item purchased within the period provided for (default of acceptance), the vendor is entitled to dispose otherwise of the goods. The rights of the vendor, to withdraw from the contract after a period of grace and/or demand damages reparation, remain unaffected by this. All items are to be examined by the purchaser immediately on receipt for quantity and quality. Any complaints regarding a consignment are always to be made immediately in writing. In cases of clear defect, complaints can only be countenanced if received until 12:00 at the day of reception of the goods. Costs for inspecting an item held to be defective and which has been returned will be deducted from the credit note, or invoiced separately. The vendor reserves the express right to make further claims regarding damage to the item.

#### 5. Warranty and Liability

The vendor's specifications in catalogues and price lists pertaining to type and item type of the goods, as well as descriptions of the goods, do not serve as guaranteed features of the products. This holds also for the exact suitability and ozone resistance of the products. Once the goods are no longer in the condition in which they were supplied, it is to be assumed that the goods were free of defects on transfer of peril and that any defect now present is due to working or reworking of the goods by the purchaser. Inasmuch as the goods are worked or reworked by the purchaser or other third party in a way other than that specified in the fitting or processing instructions made available to the purchaser, the warranty is not valid, inasmuch as the purchaser is not a consumer. The statutory period of limitation on warranty and liability is 12 months, unless the purchaser is a consumer. Should a replacement delivery of a repaired item not prove satisfactory, only a purchaser who is a consumer has a right to the option of a reduction in price or cancellation of contract. Further claims by the purchaser, including eventual reparation for consequential damages and damages arising from carrying out repairs, are excluded, unless the consequential damages involve damages arising from injury to life, limb and health or the damages are based on premeditated or negligent breach of duty by a legal representative or vicarious agent of the vendor.

#### 6. Property Rights

If the purchaser exports the vendor's goods to areas outside the Federal Republic of Germany, the vendor takes no liability for any possible prejudice to the property rights of third parties resulting from the vendor's products. Should, as a result of such export, a direct claim be made against the vendor by a third party based on prejudice to his property rights, then the purchaser indemnifies the vendor in this sense.

The parties are agreed that all publications (e.g. catalogues, price lists, posters, folders etc.) of the vendor, in the form of texts, illustrations and graphics, be these in written or electronic format, may only be used by the purchaser with the express permission of the vendor. This holds also for purely internal use. The relevant rights of the vendor pursuant to the appropriate provisions of the Copyright Act remain unaffected by this.

#### 7. Indemnity

Insofar as the vendor has a claim to indemnity against the purchaser based on their contract, the vendor can demand 15% of the order value as lump-sum indemnity, without prejudicing the possibility of proving higher actual damages. The purchaser has the right to provide evidence that the extent of damages is lower.

#### 8. Place of Fulfilment, Court of Jurisdiction, Applicable Law

Subject to obligations arising from warranty, the place of fulfilment for all obligations arising from the contractual relationship between the vendor and purchaser is the registered office of the vendor. For any disputes arising from the contractual relationship, if the purchaser is a non-consumer, application must be made to the court of jurisdiction of the registered office of the vendor. The vendor is also entitled to make application to the court of jurisdiction of the purchaser. German law applies for the contractual relationship; the laws of other lands are not valid. In particular the parties agree to exclude the United Nations Convention on Contracts for the International Sale of Goods of 11th of April 1980 (BGBI II 1989, 588 and BGBI II 1990, 1699).

### 9. Concluding Provisions

Transfer of the rights and duties of the purchaser from the contract concluded with the vendor require the written authorisation of the vendor to become valid.

In the event that these provisions have no legal force or are incomplete in part, the application of the remaining provisions is not thereby to be affected.

# **Glass Accessories**

- Glass adhesive and cleaning products
- OEM Rain and light sensors and adhesive tapes for sensor technique
- **Applicators**

# **Replacement Parts**

- Rahmen, Leisten und Clipse für 850 Fahrzeugtypen in OE-Qualität
- **■** Foam rubber and universal profiles

# **Tools**

- Application tool for universal profiles
- **■** Glass polish and repair systems
- **Cutting wires**
- Cartridge guns

# PMA/TOOLS DIVISION

#### Autoglas-Zubehör AG

Hanns-Martin-Schleyer-Straße 34 D-47877 Willich

Phone +49 (0) 21 54 92 22 30 Fax +49 (0) 21 54 92 22 55

info@pma-tools.de www.pma-tools.de